

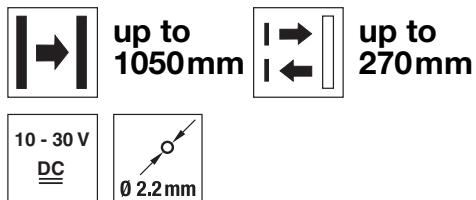


## LV463

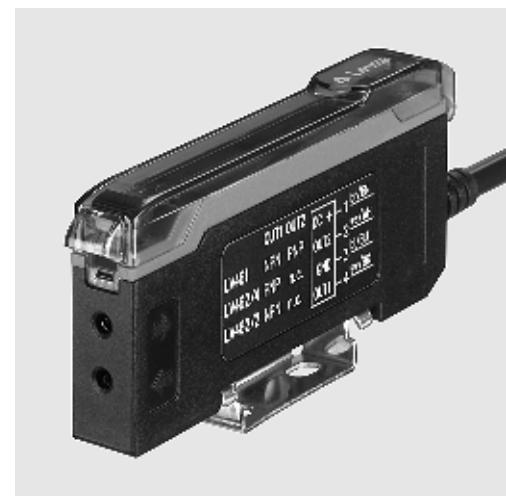

- Two, large, easy-to-read displays for the simultaneous display of the signal value and the switching threshold
- Simple operation and easy-to-understand menu functions for optimum configuration
- Internal multiplex operation of up to six units
- Line teach or external transmitter activation
- Three different teach modes for fast sensor adjustment
- Switch for changing between light and dark switching
- One PNP or NPN switching output
- Indicator diode for operation and switching output
- Connection via M8 connector, cable or cable with M8 or M12 connector

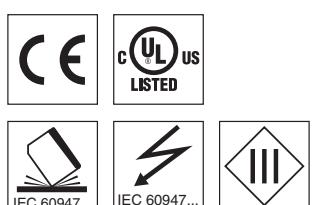



## Accessories:

(available separately)



- Plastic fiber optics (KF, KFX)
- Ready-made cables (KB ...)
- Mounting device (BTU LV463)

## Dimensioned drawing



with cable

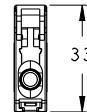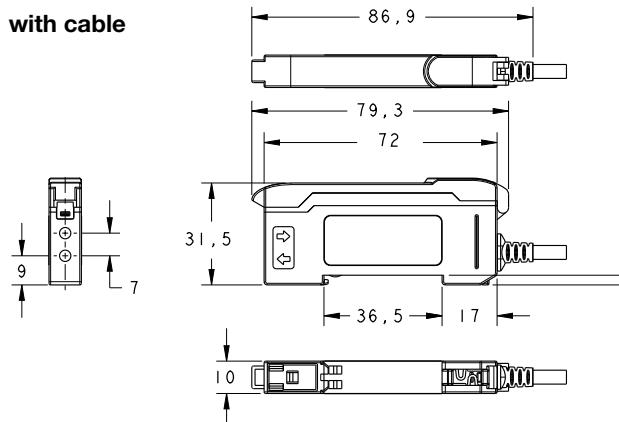

with M8 connector

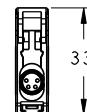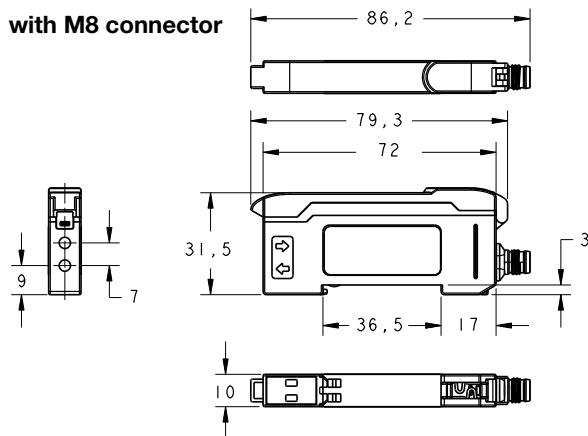


## Mounting accessories

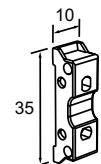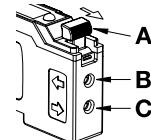BTU LV463  
Part no. 50120869


A Clamping lever for fiber optic cable (unlock in direction of arrow)  
 B Connection for fiber optics receiver  
 C Connection for fiber optics transmitter

## Electrical connection

4-pin plug

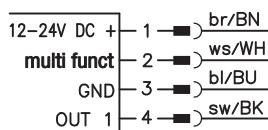

4-wire cable

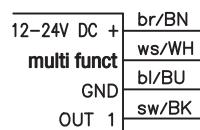

3-pin plug



**multi funct:**

- OFF
- Line teach
- Activation input
- Multiplex operation

Details → *Description of the subfunctions*

NOTE: Open lead wires must be connected to a terminal box.

## Specifications

### Optical data

Operating range/scanning range <sup>1)</sup>  
Light source  
Wavelength

**Throughbeam principle**  
up to 1050mm  
LED (modulated light)  
660nm (visible red light)

**Scanning principle**  
up to 270mm

### Timing

Delay before start-up

≤ 500ms

Response time

**Signal range**

High Speed (HS)  
200µs  
2500Hz  
0 ... 4000

Standard (STD)  
500µs  
1000Hz  
0 ... 4000

Long Range (LR)

5000µs  
250Hz  
0 ... 9999

Extra Long Range (XLR)  
100Hz  
1000Hz  
0 ... 9999

Switching frequency <sup>2)</sup>

Display area (digits)

### Electrical data

Operating voltage  $U_B$  <sup>3)</sup>

12 ... 24VDC ± 10%

Residual ripple

≤ 10 % of  $U_B$

Open-circuit current

≤ 40mA @ 24VDC

Switching output

.../4...

pin 4/black: PNP

.../2...

pin 4/black: NPN

Function

Switching output time functions

light/dark switching, adjustable by means of a switch  
switch-on/-off delay,  
passing contact (on actuation or fall-back),  
(combinations are limited  
→ *Combinations of timing functions*)

Adjustable times (time functions)

0 ... 9999ms

Signal voltage high/low

≥ ( $U_B$ -2.5V)/≤ 2.5V

Output current

≤ 100mA

Sensitivity

adjustable using the teach function or +/- buttons

### Indicators

Yellow LED

switching output active

Display

2 x 7-segment LED, 4-digit,

red: signal strength,

green: switching threshold

### Mechanical data

Housing

ABS/PC black/red, transparent PC cover

Weight

50g with M8 connector

63g with 2000mm cable

70g with 150mm cable and M8/M12 connector

Connection type

M8 connector, 4-pin, or

2000mm cable, 4 x 0.25mm<sup>2</sup>, or

150mm cable with M8 connector, 3-pin, or

150mm cable with M8 connector, 4-pin, or

150mm cable with M12 connector, 4-pin

clamp-mounting, 2 x Ø 2.2mm

Fiber optic connection

### Environmental data

Ambient temp. (operation/storage)

-10°C ... +55°C/-20°C ... +85°C

Protective circuit <sup>4)</sup>

2, 3

Protection class

IP 50, NEMA 1

Standards applied

EN 60947-5-2

Certifications

UL 508, C22.2 No.14-13 <sup>3)</sup> <sup>5)</sup>

### Options

Sensor adjustment

menu-driven by means of display and rocker push button

1) Range/scanning range depending on the fiber optics used

2) With a duty cycle of 1:1

3) For UL applications: for use in class 2 circuits according to NEC only

4) 2-polarity reversal protection, 3=short circuit protection for all outputs

5) These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.24A min, in the field installation, or equivalent (categories: CYJV/CYJV7 or PVVA/PVVA7)

## Order guide

### PNP types

Connection: M8 connector, 4-pin

### Designation

### Part no.

LV463.7/4T-M8 50118405

Connection: cable 2000mm, 4 x 0.25mm<sup>2</sup>

LV463.7/4T 50118404

Connection: cable 150mm with M8 connector, 4-pin

LV463.7/4T-150-M8 50118406

Connection: cable 150mm with M8 connector, 3-pin

LV463.7/4-150-M8.3 50119070

Connection: cable 150mm with M12 connector, 4-pin

LV463.7/4T-150-M12 50118407

### NPN types

Connection: M8 connector, 4-pin

LV463.7/2T-M8 50118409

Connection: cable 2000mm, 4 x 0.25mm<sup>2</sup>

LV463.7/2T 50118408

Connection: cable 150mm with M8 connector, 4-pin

LV463.7/2T-150-M8 50118410

Connection: cable 150mm with M8 connector, 3-pin

LV463.7/2-150-M8.3 50119071

Connection: cable 150mm with M12 connector, 4-pin

LV463.7/2T-150-M12 50118411

## Remarks

### Notice!



Detailed specifications on the range/scanning range are enclosed in the data sheets of our fiber optics type **KF** or **KFX**.

### Explanation of the signal areas

#### High Speed (HS):

shortest response time;  
shortest operating range

#### Standard (STD):

response time and operating range suitable for many standard applications

#### Long Range (LR):

long operating range;  
high-resolution display format; response time somewhat shorter

#### Extra Long Range (XLR):

longest operating range;  
high-resolution display format; short response time


### Operate in accordance with intended use!

↳ This product is not a safety sensor and is not intended as personnel protection.

↳ The product may only be put into operation by competent persons.


↳ Only use the product in accordance with the intended use.

## Mounting the amplifier

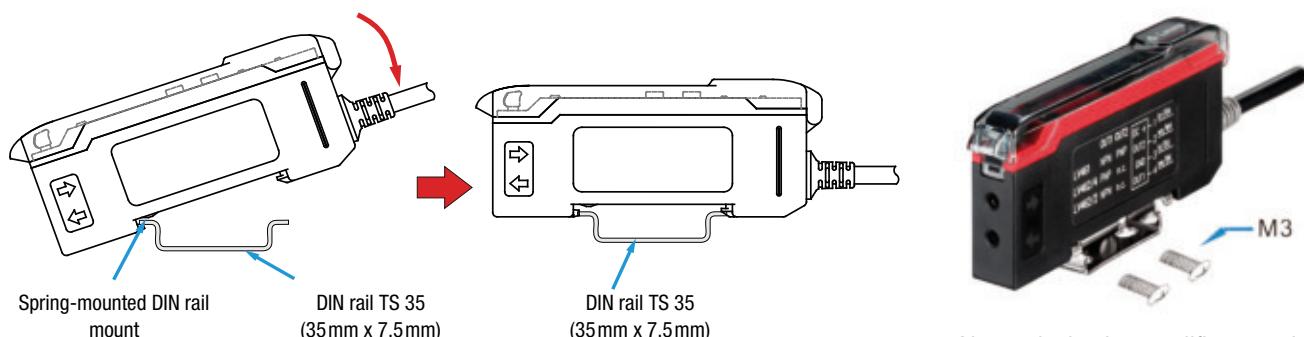


The amplifier is mounted as shown on a TS 35 DIN rail while disconnected from voltage.

## Installing the fiber optics

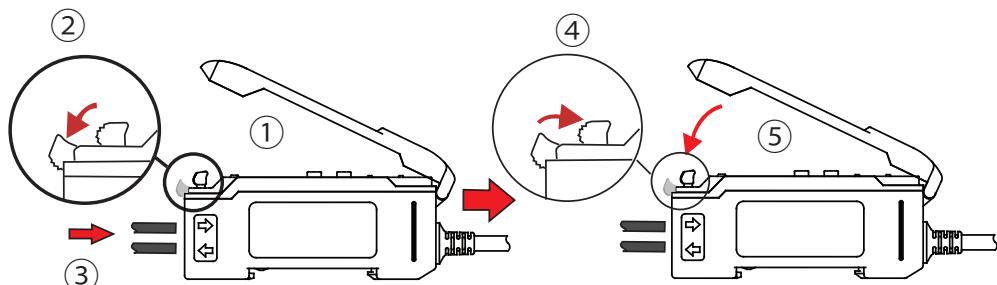

- ① Open the transparent protective cover.
- ② Push down the lever of the fiber optic clamp to open.
- ③ Lead the **KF/KFX** type fiber optics in completely as far as they will go (ca. 12mm deep) into the fiber optic intake. **When doing so, observe the transmitter/receiver assignment** on the amplifier (transmitter at bottom / receiver on top).
- ④ Pull up the lever of the fiber optic clamp to close. Check if the clamp is secure by pulling lightly on the fiber optics.
- ⑤ Close the transparent protective cover.

## Controls and indicators

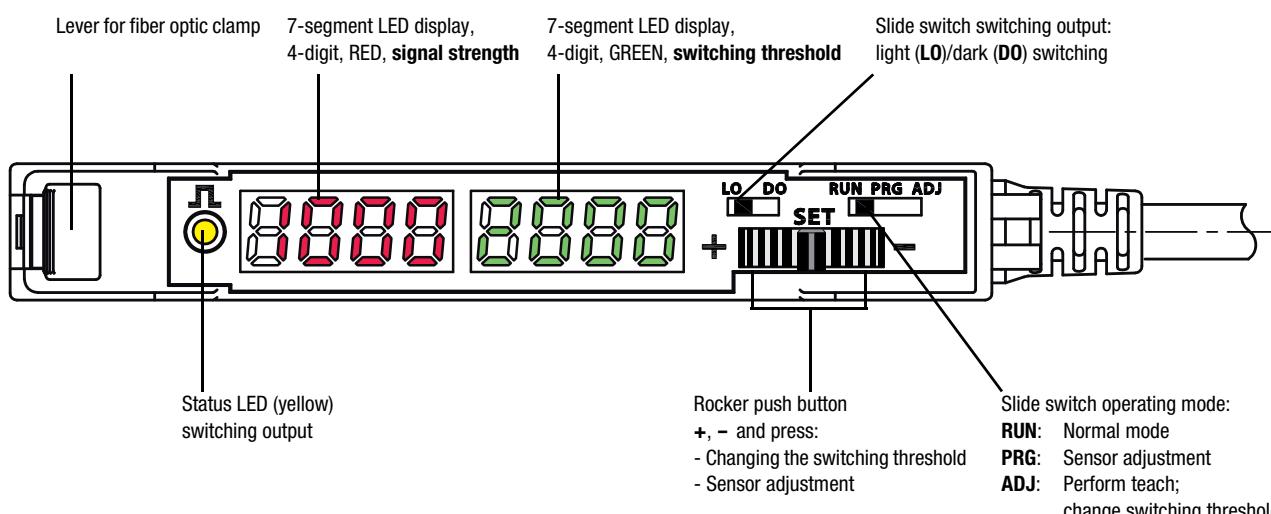

	Selector switch <b>Operating mode</b>	<b>RUN:</b> <b>ADJ:</b> <b>PRG:</b>	Normal mode - no settings possible. Press rocker push button: the set teach is executed. Rock to left - right: change the switching threshold, left = + and right = -. Menu-driven device setting via display and rocker push button.
	Selector switch <b>Switching output</b>	<b>LO:</b> <b>DO:</b>	Switching output <b>light switching</b> : If throughbeam fiber optics are installed, the switching output is active when the light path is free; if a scanning system is installed, the switching output is active when an object is detected. The status LED illuminates when the switching output is active. Switching output <b>dark switching</b> : The switching behavior is the inversion of the <b>light switching</b> setting.
	Rocker push button - Set switching threshold - Navigation in menu	Rock +, -: Button:	The <b>rocker push button</b> can be rocked <b>to the right</b> and <b>to the left</b> and <b>pressed</b> in the middle position. In the <b>ADJ</b> operating mode, the switching threshold can be increased (+) or decreased (-) by rocking. In the <b>PRG</b> operating mode, rock to navigate in the menu. Press the rocker push button in the middle position to accept a setting made in the <b>PRG</b> operating mode.
	Indicator <b>Signal strength</b>		In the <b>RUN</b> and <b>ADJ</b> operating modes, the display shows the current signal value. In the <b>PRG</b> operating mode, information on menu navigation appears on the display.
	Indicator <b>Switching threshold</b>		In the <b>RUN</b> and <b>ADJ</b> operating modes, the display shows the currently set switching threshold. In the <b>PRG</b> operating mode, information on menu navigation appears on the display.
	Status LED (yellow) <b>Switching output state</b>	LED ON LED OFF	Switching output active. Switching output inactive.

## RUN operating mode - normal operation

The RUN operating mode is the standard operating mode in which the sensor detects objects; it signals this according to the set functions. If the selector switch for the operating mode is in the **RUN** position, no changes can be made on the device. This setting is thus suitable for protection against unintended operation and changes to device settings.




## PRG operating mode - sensor adjustment

The LV463 can be adjusted to meet customer requirements with a simple menu-driven system.  
To do this, set the **selector switch** for the **operating mode** to position **PRG**.



The menu consists of 13 successive subfunctions. Rock to right or left to freely navigate through the subfunctions.

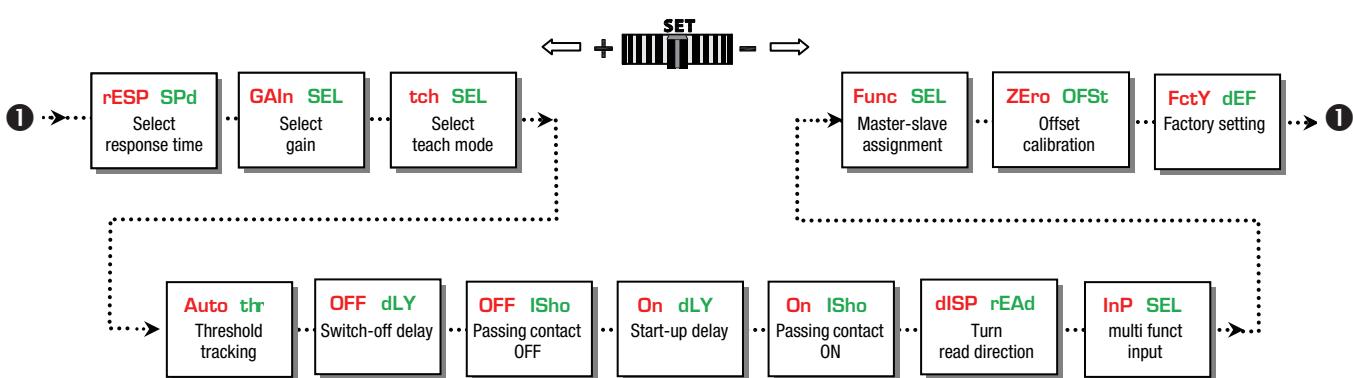

**Selecting a subfunction and changing the setting**

1. Rock to left or right to select the desired subfunction.
2. Press rocker push button in middle position. The currently set value is displayed statically.
3. Rock to right or left to display the selectable adjustment values - these flash slowly.
4. Accept the new value by pressing the rocker push button in the middle position.  
Fast flashing indicates that the new value is accepted.
5. Automatic return to the heading for the subfunction.
6. Press again to statically display the previously selected value.

**Description of the subfunctions**

Subfunction	Possible settings / value range	Factory setting (default)	Explanation
<b>rESP SPd</b> Select response time	$t_{ESP} = \frac{200}{500} \frac{2000}{5000} \mu s$ (signal range HS) (signal range STD) (signal range LR) (signal range XLR)	500 $\mu s$	The response time is the max. time required by the switching output to switch to the active state following a signal change at the input. From this, the switching frequency can be calculated as follows: $f = \frac{1}{2 \cdot t_{ESP}} \text{ [Hz]}$ <b>Notice:</b> A change to the response time is equivalent to a change to the signal range.
<b>GAIn SEL</b> Select gain	Gain stage <b>Gn 1 ... Gn 8; Auto GAIn</b>	<b>Auto GAIn</b>	The gain stage can be set either by manually presetting a value between <b>Gn 1 ... Gn 8</b> or automatically by selecting <b>Auto GAIn</b> . The left, red display shows the current signal value. The gain stage should be selected so that the signal value is approximately in the middle of the display area. If <b>Auto GAIn</b> is selected, the device automatically determines the optimum gain setting <b>during teaching</b> .
<b>tch SEL</b> Select teach mode	Teach modes <b>1 Pt tch</b> (static), <b>2 Pt tch</b> (static), <b>dYn tch</b> (dynamic)	<b>1 Pt tch</b>	Presetting a suitable teach process. To trigger the teach event, see <b>Teaching operating mode</b> . <b>1-point teach, static:</b> during teaching, the current signal value is accepted as the new switching threshold. Actuate the rocker push button to make fine adjustments to the threshold. <b>2-point teach, static:</b> the switching threshold is calculated at approximately midway between two signal values, e.g., teach to two different objects or teach to the same object at two different distances from the probe. Example: signal value 1 = 100 digits, signal value 2 = 400 digits → Switching threshold = 280 digits. Actuate the rocker push button to + or - to make fine adjustments to the threshold. <b>Dynamic teach:</b> suitable for processes that cannot be stopped for teaching. When the teach event is started, the sensor begins to scan the signal values. On the left, red display, the signal values are constantly displayed. At the end of the teach event, the switching threshold is calculated at approximately midway between the smallest and largest signal value.
<b>Auto thr</b> Threshold tracking	Tracking the switching threshold <b>off, on</b>	<b>off</b>	The function is only available during dynamic teaching. If the function is switched on, the switching threshold is automatically and continuously optimized by the sensor in such a way that maximum functional reliability is ensured. This can be used to compensate for, e.g., soiling or process changes. <b>Warning message:</b> <b>thr ALrt:</b> The limit of threshold tracking is reached - the sensor continues to operate. Cleaning and, if necessary, alignment of the fiber optics recommended. <b>Error message:</b> <b>thr Err:</b> The limit of threshold tracking is exceeded - <b>the sensor stops operating</b> . Cleaning and, if necessary, alignment of the fiber optics urgently necessary.
<b>OFF dLY</b> Switch-off delay	<b>0</b> (off), <b>1 ... 9999 ms</b> (milliseconds)	<b>0</b>	<b>Switch-off delay (OFF Delay):</b> Individually adjustable from 1 ... 9999ms. Combination options → <b>Combining timing functions</b>
<b>OFF ISho</b> Passing contact OFF	<b>0</b> (off), <b>1 ... 9999 ms</b> (milliseconds)	<b>0</b>	<b>Passing contact on fall-back (OFF 1-Shot):</b> Individually adjustable from 1 ... 9999ms. Combination options → <b>Combining timing functions</b>
<b>On dLY</b> Switch-on delay	<b>0</b> (off), <b>1 ... 9999 ms</b> (milliseconds)	<b>0</b>	<b>Switch-on delay (ON Delay):</b> Individually adjustable from 1 ... 9999ms. Combination options → <b>Combining timing functions</b>
<b>On ISho</b> Passing contact ON	<b>0</b> (off), <b>1 ... 9999 ms</b> (milliseconds)	<b>0</b>	<b>Passing contact on actuation (ON 1-Shot):</b> Individually adjustable from 1 ... 9999ms. Combination options → <b>Combining timing functions</b>

Subfunction	Possible settings / value range	Factory setting (default)	Explanation
<b>diSP rEAd</b> Turn read direction 180°	<b>diSP rEAd, diSP rEAd</b>	<b>diSP rEAd</b> (same read direction as other texts)	Changes the <b>read direction</b> of the two 7-segment displays by 180°.
<b>InP SEL</b> multi funct input	<b>oFF, tchInP, SYnc PLC, SYnc Int</b>	<b>oFF</b>	<p>Use this setting to define the function of the <b>multi funct multifunction input</b> (pin 2/ws-WH).</p> <p><b>OFF:</b> Pin/cable has no function</p> <p><b>tch InP:</b> Pin/cable can be used as teach input for line teach. For further information → <b>Line teach / remote teach</b>.</p> <p><b>SYnc PLC:</b> Pin/ cable can be used as activation input. For further information → <b>Synchronous operation of multiple amplifiers</b>.</p> <p><b>SYnc Int:</b> Setting for multiplex operation of up to six fiber optic amplifiers. For this purpose, all <b>multi funct</b> multifunction inputs (pin 2/ws-WH) are connected to one another. The master unit (defined with the next subfunction) generates a timing signal that is received by the slave units (defined with the next subfunction) via the parallel connection. In a fixed time frame, each slave successively activates its transmitter for a brief time and supplies a signal value. To avoid mutual interference, the transmitter is then again deactivated.</p> <p>For further information → <b>Multiplex operation of multiple amplifiers</b>.</p>
<b>Func SEL</b> Master-slave assignment	<b>SL 1, SL 2, SL 3, SL 4, SL 5, mA 2, mA 3, mA 4, mA 5, mA 6</b>	<b>SL 1</b>	<p>These settings must only be made if <b>multiplex operation</b> (master-slave operation) of multiple sensors is desired.</p> <p>Up to six sensors can be synchronized with one another in multiplex operation.</p> <p>In this case, <b>exactly one master and 1 ... 5 slaves</b> are always required.</p> <p><b>Master settings:</b> <b>mA n</b> (number): Defines that this unit operates as master and a total of <b>n</b> sensors were wired in parallel. <b>Value range n = 2 ... 6</b>.</p> <p>Example: <b>mA 4</b> means: Unit is the <b>master</b>, a total of four sensors are connected to one another via the <b>multi funct</b> multifunction input.</p> <p><b>Slave settings:</b> <b>SL n</b> (number):Defines that this unit operates as a slave and has the individual address <b>n</b>. <b>Value range for address n = 1 ... 5</b>.</p> <p>Example: <b>SL 3</b> means: Unit is a <b>slave</b> with the individual address 3.</p> <p>For further information → <b>Multiplex operation of multiple amplifiers</b>.</p>
<b>ZEro OFSt</b> Offset calibration	<b>no, YES</b>	<b>no</b>	<p>This subfunction is used for <b>suppressing an offset signal</b> that can result, e.g., from crosstalk between transmitter and receiver at the fiber optic head. To activate this function, select <b>YES</b> and confirm the selection by pressing the rocker push button. The current signal value is now set to <b>0</b>.</p> <p>To perform another offset calibration, the previous calibration must first be reset. To do this, select <b>no</b> and confirm by pressing the rocker push button. Now again perform the offset calibration as previously described.</p> <p><b>Notice:</b> <b>Resolution is lost when using offset suppression!</b> Example: display area = 4000 digits, offset value = 550 digits → Remaining resolution = 3450 digits.</p>
<b>FctY dEF</b> Factory setting	<b>no, YES</b>	<b>no</b>	<p><b>Attention!</b> <b>Resets all sensor settings to factory settings.</b></p> <p>If desired, select <b>YES</b> and execute by pressing the rocker push button.</p>




### Tip!

The maximum operating range can be achieved as follows:

- Set **RESP SPd** to **5000µs** (signal range **XLR**).
- Set **GAIn SEL** to **Gn 8** (gain stage 8).
- The switching threshold can be set to minimum 32 digits, the amplifier detects objects up to display value **0**.

## Time functions

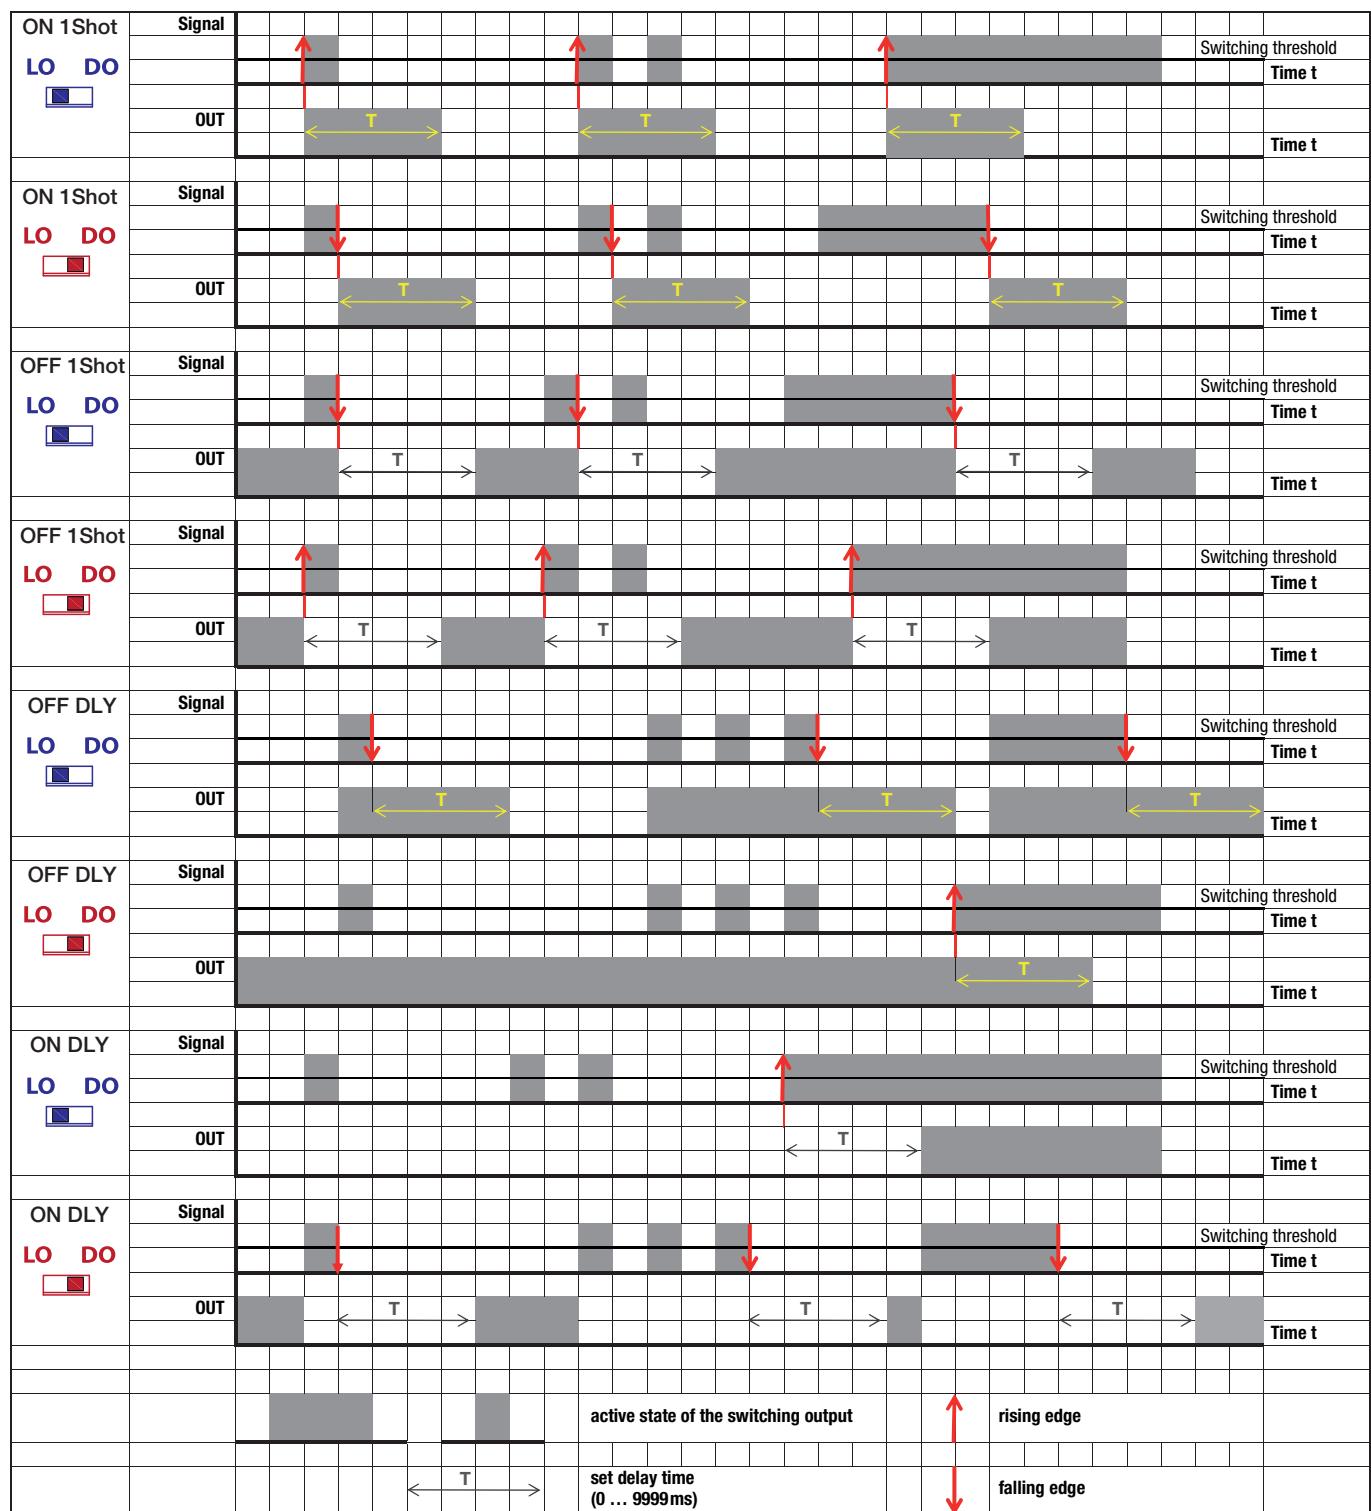

## Combining timing functions

Timing functions can only be combined to a limited extent. Impermissible combinations are suppressed from the subfunctions menu. Here is an overview of the permissible combinations (•):

	OFF dLY Switch-off delay	OFF ISho Passing contact OFF	On dLY Switch-on delay	On ISho Passing contact ON
OFF dLY Switch-off delay		•	•	
OFF ISho Passing contact OFF	•			
On dLY Switch-on delay	•			•
On ISho Passing contact ON			•	

## Teaching operating mode

Set the selector switch for the operating mode to the **ADJ** position.

RUN PRG ADJ

Depending on the setting of the **Select teach mode** subfunction (tch SEL), one of the following teach modes appears:

- **Static 1-point teach**
- **Static 2-point teach**
- **Dynamic teach**

### Teach process

Step	Static 1-point teach	Static 2-point teach	Dynamic teach
①	Place object in light beam. The red display shows the signal value, the green display the current switching threshold.	Place object in light beam. The red display shows the signal value, the green display the current switching threshold.	Press the rocker push button. The green display shows <b>DYn</b> , the red display the current signal value. The amplifier now scans signal values for approx. 1 minute.
②	Press the rocker push button; the teach value is accepted.	Press the rocker push button, <b>first</b> teach value is accepted.	Move several objects through the light beam; to end the event, press the rocker push button again. After the scanning time elapses, the teach event ends automatically.
③	Following a successful teach, <b>PASS</b> appears on the green display and the signal value is displayed as the new switching threshold. In the event of a faulty teach, <b>FAIL</b> appears on the red display. In this case, the signal value may be too small and cannot be accepted as a teach value (→ <b>Table with minimum teach values as a function of the setting</b> ). Check object and/or placement and repeat event.	<b>2nd</b> appears on the green display; the red display shows the current signal value. Place object 2 or object at distance 2 and press the rocker push button <b>within one minute</b> . The <b>second</b> teach value is accepted. If the rocker push button is not pressed within one minute, the teach event is interrupted and the previous switching threshold is retained. Following a successful teach, <b>PASS</b> appears on the green display. The new switching threshold now lies approximately midway between the two taught signal values. In the event of a faulty teach, <b>FAIL</b> appears on the red display. In this case, the minimum distance between the two teach points may be too small (→ <b>Table with minimum teach values as a function of the setting</b> ). Try to set a larger distance between the two signal values and repeat the event.	Following a successful teach, <b>PASS</b> appears on the green display. The new switching threshold now lies between the maximum and the minimum of the scanned signal values. In the event of a faulty teach, <b>FAIL</b> appears on the red display. In this case, the minimum distance between the scanned signal values may be too small (→ <b>Table with minimum teach values as a function of the setting</b> ). Try to set a larger distance between the signal values and repeat the event.
④	The switching threshold can be freely increased or decreased at a later time by rocking the rocker push button to the left (+) and right (-). The change is accepted if both displays flash briefly several times.	The switching threshold can be freely increased or decreased at a later time by rocking the rocker push button to the left (+) and right (-). The change is accepted if both displays flash briefly several times.	The switching threshold can be freely increased or decreased at a later time by rocking the rocker push button to the left (+) and right (-). The change is accepted if both displays flash briefly several times.

### Tip!

For reliable function, the difference between the signal value while an object is present and the signal value with no object should be at least 10 - 20 %. In general: the larger the difference, the more reliable the detection.

Table with minimum teach values as a function of the setting

Signal range	Static 1-point teach: MINIMUM VALUES for Setting the switching threshold				Static 2-point teach Dynamic teach: DIFFERENCE between teach values 1 and 2			
	HS	STD	LR	XLR	HS	STD	LR	XLR
	0 ... 4000	0 ... 4000	0 ... 9999	0 ... 9999	0 ... 4000	0 ... 4000	0 ... 9999	0 ... 9999
Display area (digits)	200	500	2000	5000	200	500	2000	5000
Response time [μs]								
Gain Gn 1	27	27	17	11	36	36	22	14
Gain Gn 2	27	27	17	11	36	36	22	14
Gain Gn 3	27	27	17	11	36	36	22	14
Gain Gn 4	41	41	27	17	54	54	36	22
Gain Gn 5	41	41	27	17	54	54	36	22
Gain Gn 6	41	41	27	17	54	54	36	22
Gain Gn 7	53	53	32	21	70	70	42	28
Gain Gn 8	78	78	48	32	104	104	64	42

= values for the following examples.

### Example 1:

- 1-point teach, static
- Standard signal range (**STD**) = response time **500μs**
- Gain **Gn 3**

The **signal value during teaching** must be  $\geq 27$  digits.

### Example 2:

- 2-point teach, static
- Standard signal range (**STD**) = response time **500μs**
- Gain **Gn 5**
- Teach value 1 = 150 digits**

The **signal value for teach point 2** must be  $\geq 204$  digits or  $\leq 96$  digits.

## Multiplex operation of multiple amplifiers

If multiple light axes are arranged close to each other, mutual interference – made evident by a widely varying display – may occur.

To avoid this undesirable behavior, **up to six devices can be operated in multiplex operation**. To do this, it is only necessary to connect the **multi funct** multifunction inputs (pin 2/ws-WH) of all participating amplifiers – in addition to connecting the voltage supply and the switching signal.



All **multi funct** multifunction inputs (pin 2/ws-WH) are connected in parallel

- For settings, see subfunctions:

<b>InP SEL</b> multi funct input	<b>Func SEL</b> Master-slave assignment
--	---

- Maximum 6 / minimum 2 units: 1 x master + 1 ... 5 slaves.
- Each unit can be either a master or a slave.
- The master also requires information about the number of units wired in parallel (number of slaves).
- Each slave is also assigned an individual address 1 ... 5.
- The master generates a timing signal on pin 2 or on cable ws/WH.
- Each slave switches on its transmitter for 1ms depending on its address.
- In multiplex mode, the cycle time is based on the total number of units:  
**Cycle time = number of units • 1.5ms + 0.5ms.**

## Synchronous operation of multiple amplifiers / operation with activation input


In some cases, one may also wish to query multiple light axes **simultaneously** (synchronously). Two options are available for this purpose:

### Variant 1:


Wire and set according to section **Multiplex operation of multiple amplifiers** but assign all slaves an **identical address between 1 and 5**. Result: master and slaves have a time offset of 1.5ms, slaves with the same address operate synchronously.

### Variant 2:

Synchronous operation by means of an external activation signal at **multi funct** input (pin 2/ws-WH). Setting for subfunction:

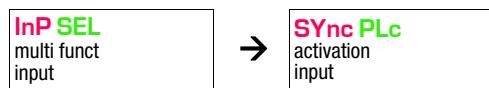


#### Function:

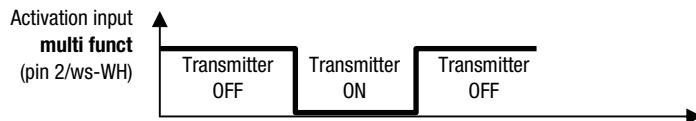

The transmitter is deactivated **with a high signal**.  
**If not actuated or in the case of a low signal**, the transmitter is **activated**.

## Line teach (remote teach)

Setting for subfunction:

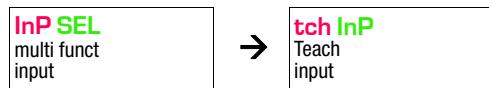

Signal level on **multi funct** teach input:

 The following description applies to PNP switching logic!

 With the NPN models, the signal levels are inverted!

$U_{Teach}$	Signal level	Function
$\leq 2V$	LOW	The <b>operating mode selector switch</b> is <b>unlocked</b> - function acc. to current switch position.
$\geq (U_B-2V)$	HIGH	The <b>operating mode selector switch</b> is <b>locked</b> - switch position has no effect on the sensor.

## Timing for line teach

The line teach that is executed is determined in the **Select teach mode** subfunction **tch SEL**.

Depending on the setting, this may be a static 1-point teach, static 2-point teach or dynamic teach.

