## WICLOLOUIC



#### **Operating Manual**

# mic+ Ultrasonic Sensors with two switching outputs

mic+25/DD/TC mic+35/DD/TC mic+130/DD/TC mic+340/DD/TC mic+600/DD/TC

mic+25/EE/TC mic+35/EE/TC mic+130/EE/TC mic+340/EE/TC mic+600/EE/TC

#### Product description

- The mic+ sensor with two switching outputs measures the distance to an object within the detection zone contactless. Depending on the adjusted detect distance the switching output is set.
- All settings are done with two pushbuttons and a three-digit LED-display (TouchControl).
- Three-colour LEDs indicate the switching status.
- The output functions are changeable from NOC to NCC.
- The sensors are adjustable manually via TouchControl or via Teach-in procedure.
- Useful additional functions are set in the Add-on-menu.
- Using the LinkControl adapter (optional accessory) all TouchControl and additional sensor parameter

settings can be adjusted by a Windows® Software.

#### Safety Notes

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried out by expert personnel.
- No safety component in accordance with the EU Machine Directive, use in the area of personal and machine protection not permitted

#### **Proper Use**

mic+ ultrasonic sensors are used for non-contact detection of objects.

The mic+ sensors have a **blind zone** in which distance measurement is not possible. The **operating range** indicates the distance of the sensor that

can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

#### Synchronisation

If the assembly distances shown in Fig. 1 for two or more sensors are exceeded the integrated synchronisation should be used. Connect Sync/Comchannels (pin 5 at the units receptable) of all sensors (10 maximum).

		D↔a
mic+25	≥0.35 m	≥2.50 m
mic+35	≥0.40 m	≥2.50 m
mic+130	≥1.10 m	≥8.00 m
mic+340	≥2.00 m	≥18.00 m
mic+600	≥4.00 m	≥30.00 m

Fig. 1: Assembly distances, indicating synchronisation/multiplex

#### Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected.

The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. To use synchronised mode all sensors must be set to address »00«.

#### Installation

- → Assemble the sensor at the installation location.
- → Plug in the connector cable to the M12 connector, see Fig. 2.

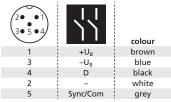


Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

#### Start-up

- → Connect the power supply.
- → Set the parameters of the sensor manually via TouchControl (see Fig. 3 and Diagram 1)
- → or use the Teach-in procedure to adjust the detect points (see Diagram 2).

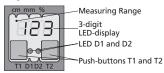


Fig. 3: TouchControl/LED display

#### **Factory setting**

mic+ sensors are delivered factory made with the following settings:

- Switching outputs on NOC
- Detecting distance at operating range and half operating range
- Measurement range set to maximum range

#### Maintenance

mic+ sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and caked-on dirt affect sensor function and therefore must be removed.

#### Notes


- mic+ sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- During normal operating mode, a yellow LED signals that the switching output has connected.
- During normal operating mode, the measured distance value is displayed on the LED-indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits.
- During Teach-in mode, the hysteresis loops are set back to factory settings.
- If no objects are placed within the detection zone the LED-indicator shows »——«.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal operating mode.


■ The sensor can be reset to its factory setting, see »Key lock and factory setting«, Diagram 3.

### Show parameters

→ In normal operating mode shortly push T1. The LED display shows »PAr.«

Each time you tap push-button T1 the actual settings of the analogue output are shown.

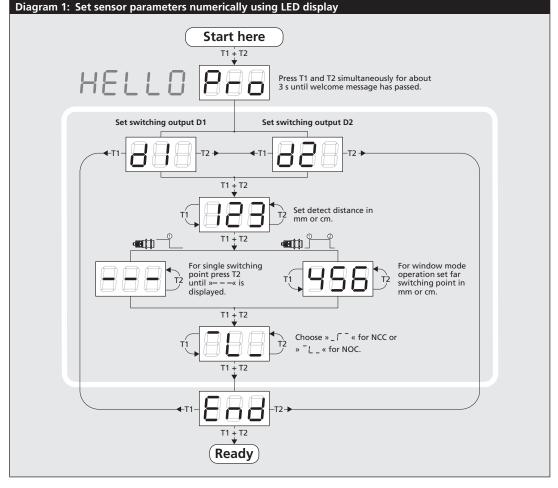

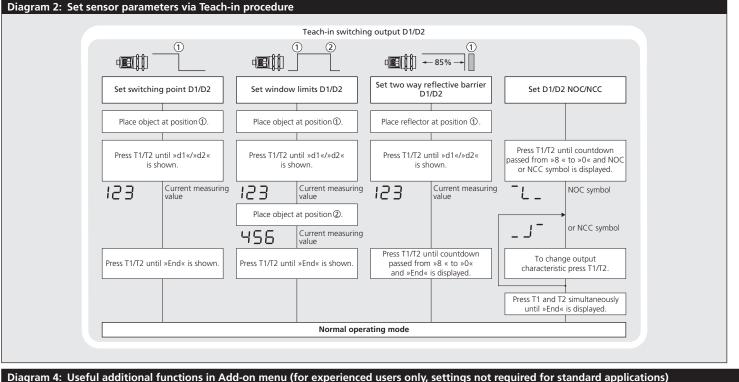

A6, A7, A8, A10, A11, A12 have influence on the response time of the sensor.

Hysteresis switching

output D1


Low power mode

Hysteresis switching

output D2

Measurement filter

Filter strength

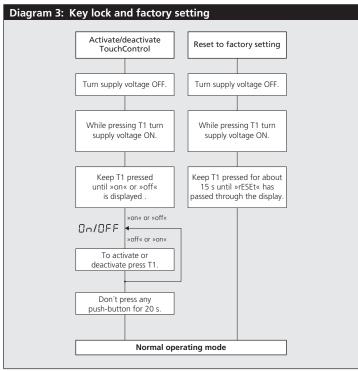

#### Start here T1 + T2 HELLO Pro 888 Press T1 and T2 simultaneously for about 13 s until »Add« is shown in the LED-display T1 + T2 »C01«: Display Minimum value Minimum value: »F00«: no filter Defines the strenath Delay in seconds Minimum value: »00«: synchronisati-To optimize multi-Minimum value Put plane reflector Affects the size of bright »001« »001« of the chosen filter. between the detecblind zone plex speed the higsensor-distant vertically disposed in the detection zone. »F01«: standard tion of an object hest sensor address window limit front of sensor: in »C02«: Display Maximum value: Maximum value: filter »P00«: weak filter Maximum value: ne-»01« to »10«: sensor »E01«: hiah Ready and the output of may be set. an exact distance of difference between difference between arwindow limit - 1 address for multi-Maximum value »F02«: averaging »E02«: standard up to the measured dis-250 mm for maximum range and maximum range and plex mode Setting range »01« 999 mm for »C03«: Display off »P09«: strong filter tance in case of obmic+ 25... and »E03«: slight switching point - 1 switching point - 1 to »10« mic+25/..., »oFF«: synchronisati »F03«: foreground ject approach (behamic+35... and mic+35/..., During window During window on deactivated filter ves as on-delay). 900 mm for all other mode operation mode operation 999 cm for types. »F04«: background "00": 0 s (no delay) hysteresis influences hysteresis influences mic+130/..., Adjust display to both switching both switching up to mic+340/... 250 mm or 900 mm. mic+600/.. points. points. "20": 20 s response Confirm calibration Changes in the Add-on menu with T1+T2. may impair the sensor function

Response time

Foreground

suppression

Multiplex mode

device addressing

Multiplex mode

highest address

Measurement range

Calibration

display

Detection zone

sensitivity

