



Programmable Controller

MELSEC iQ-F
series

MELSEC iQ-F
FX5-ENET/IP User's Manual

SAFETY PRECAUTIONS

(Read these precautions before use.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety in order to handle the product correctly.

This manual classifies the safety precautions into two categories: [⚠ WARNING] and [⚠ CAUTION].

⚠ WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
⚠ CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Depending on the circumstances, procedures indicated by [⚠ CAUTION] may also cause severe injury.

It is important to follow all precautions for personal safety.

Store this manual in a safe place so that it can be read whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

⚠ WARNING

- Make sure to set up the following safety circuits outside the PLC to ensure safe system operation even during external power supply problems or PLC failure. Otherwise, malfunctions may cause serious accidents.
 - Most importantly, set up the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as normal vs. reverse rotation), and an interlock circuit (to prevent damage to the equipment at the upper and lower positioning limits).
 - Note that when the CPU module detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the CPU module occurs in an input/output control block, output control may be disabled. External circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
 - Note that when an error occurs in a relay, transistor or triac of an output circuit, the output might stay on or off. For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machinery operation in such a case.
- In an output circuit, when a load current exceeding the current rating or an overcurrent caused by a load short-circuit flows for a long time, it may cause smoke and fire. To prevent this, configure an external safety circuit, such as a fuse.
- For the operating status of each station after a communication failure of the network, refer to relevant manuals for the network. Incorrect output or malfunction may result in an accident.
- Construct an interlock circuit in the program so that the whole system always operates on the safe side before executing the control (for data change) of the PLC in operation. Read the manual thoroughly and ensure complete safety before executing other controls (for program change, parameter change, forcible output and operation status change) of the PLC in operation. Otherwise, the machine may be damaged and accidents may occur due to erroneous operations.
- Especially, in the case of a control from an external device to a remote programmable controller, immediate action cannot be taken for a problem on the programmable controller due to a communication failure. Determine the handling method as a system when communication failure occurs along with configuration of interlock circuit on a program, by considering the external equipment and CPU module.

WARNING

- Do not write any data to the "system area" and "write-protect area" of the buffer memory in the intelligent function module. Executing data writing to the "system area" or "write-protect area" may cause malfunction of the programmable controller alarm. For the "system area" or "write-protect area", refer to  Page 136 Buffer Memory.
- If a communication cable is disconnected, the network may be unstable, resulting in a communication failure of multiple stations. Construct an interlock circuit in the program so that the system always operates on the safe side even if communications fail. Incorrect output or malfunction may result in an accident.
- To maintain the safety of the programmable controller system against unauthorized access from external devices via the network, take appropriate measures. To maintain the safety against unauthorized access via the Internet, take measures such as installing a firewall.
- For the operating status of each EtherNet/IP device after a communication failure, refer to  Page 107 TROUBLESHOOTING in this manual. Incorrect output or malfunction due to a communication failure may result in an accident.
- Configure an interlock circuit in the program to ensure that the entire system will always operate safely even if communications fail in multiple EtherNet/IP devices. Failure to do so may result in an accident due to an incorrect output or malfunction.

[DESIGN PRECAUTIONS]

CAUTION

- Do not install the control lines or communication cables together with the main circuit lines or power cables. Keep a distance of 100 mm or more between them. Failure to do so may result in malfunction due to noise.
- When an inductive load such as a lamp, heater, or solenoid valve is controlled, a large current (approximately ten times greater than normal) may flow when the output is turned from off to on. Take proper measures so that the flowing current does not exceed the value corresponding to the maximum load specification of the resistance load.
- Do not power off the CPU module or reset the CPU module while the settings are being written. Doing so will make the data in the flash ROM undefined. The values need to be set in the buffer memory and written to the flash ROM again. Doing so also may cause malfunction or failure of the module.

[INSTALLATION PRECAUTIONS]

WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Use the product within the generic environment specifications described in the User's Manual (Hardware) of the CPU module used.
Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind.
If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.

[INSTALLATION PRECAUTIONS]

CAUTION

- Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits of the PLC. Failure to do so may cause fire, equipment failures or malfunctions.
- For the product supplied together with a dust proof sheet, the sheet should be affixed to the ventilation slits before the installation and wiring work to prevent foreign objects such as cutting and wiring debris. However, when the installation work is completed, make sure to remove the sheet to provide adequate ventilation.
Failure to do so may cause fire, equipment failures or malfunctions.
- Install the product on a flat surface. If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- Install the product securely using a DIN rail or mounting screws.
- Work carefully when using a screwdriver such as installation of the product. Failure to do so may cause damage to the product or accidents.
- Connect the extension cables, peripheral device cables, input/output cables and battery connecting cable securely to their designated connectors. Loose connections may cause malfunctions.
- Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause equipment failures or malfunctions.
 - Peripheral devices, expansion board, expansion adapter, and connector conversion adapter
 - Extension modules, bus conversion module, and connector conversion module
 - Battery

[WIRING PRECAUTIONS]

WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, provided as an accessory, before turning on the power or initiating operation after installation or wiring work. Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.
- Make sure to properly wire to the spring clamp terminal block in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a shortcircuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable end should follow the dimensions described in the manual.
 - Twist the ends of stranded wires and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.

[WIRING PRECAUTIONS]

CAUTION

- Perform class D grounding (grounding resistance: 100 Ω or less) of the grounding terminal on the CPU module and extension modules with a wire 2 mm² or thicker. Do not use common grounding with heavy electrical systems (refer to the User's Manual (Hardware) of the CPU module used).
- Individually ground the FG terminal of the programmable controller with a ground resistance of 100 Ω or less. Failure to do so may result in electric shock or malfunction.
- Install module so that excessive force will not be applied to terminal blocks, or communication cables. Failure to do so may result in wire damage/breakage or PLC failure.
- Make sure to observe the following precautions in order to prevent any damage to the machinery or accidents due to malfunction of the PLC caused by abnormal data written to the PLC due to the effects of noise.
 - Do not bundle the control line and communication cables together with or lay them close to the main circuit, high-voltage line, load line or power line. As a guideline, lay the power line, control line and communication cables at least 100 mm away from the main circuit, high-voltage line, load line or power line.
 - Ground the shield of the shielded wire or shielded cable at one point on the PLC. However, do not use common grounding with heavy electrical systems.
- For Ethernet cables to be used in the system, select the ones that meet the specifications described in  Page 48 Wiring Products. If not, normal data transmission is not guaranteed.

[STARTUP AND MAINTENANCE PRECAUTIONS]

WARNING

- Do not touch any terminal while the PLC's power is on. Doing so may cause electric shock or malfunctions.
- Before cleaning or retightening terminals, cut off all phases of the power supply externally. Failure to do so in the power ON status may cause electric shock.
- Before modifying the program in operation, forcible output, running or stopping the PLC, read through this manual carefully, and ensure complete safety. An operation error may damage the machinery or cause accidents.
- Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from an engineering tool and a GOT) Doing so may cause destruction or malfunction of the PLC program.

[STARTUP AND MAINTENANCE PRECAUTIONS]

⚠ CAUTION

- When connecting an external device with a CPU module or intelligent function module to modify data of a running programmable controller, configure an interlock circuit in the program to ensure that the entire system will always operate safely. For other forms of control (such as program modification, parameter change, forced output, or operating status change) of a running programmable controller, read the relevant manuals carefully and ensure that the operation is safe before proceeding. Improper operation may damage machines or cause accidents.
- Especially, when a remote programmable controller is controlled by an external device, immediate action cannot be taken if a problem occurs in the programmable controller due to a communication failure. To prevent this, configure an interlock circuit in the program, and determine corrective actions to be taken between the external device and CPU module in case of a communication failure.
- Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. For repair, contact your local Mitsubishi Electric representative.

⚠ CAUTION

- Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause equipment failures or malfunctions.
 - Peripheral devices, expansion board, expansion adapter, and connector conversion adapter
 - Extension modules, bus conversion module, and connector conversion module
 - Battery
- Read relevant manuals carefully and ensure the safety before performing online operations (operation status change) with peripheral devices connected to the CPU modules of other stations. Improper operation may damage machines or cause accidents.

[OPERATION PRECAUTIONS]

⚠ CAUTION

- Construct an interlock circuit in the program so that the whole system always operates on the safe side before executing the control (for data change) of the PLC in operation.
Read the manual thoroughly and ensure complete safety before executing other controls (for program change, parameter change, forcible output and operation status change) of the PLC in operation. Otherwise, the machine may be damaged and accidents may occur by erroneous operations.
- Do not power off the CPU module or reset the CPU module while the setting values in the buffer memory are being written to the flash ROM in the intelligent function module. Doing so will make the data in the flash ROM card undefined. The values need to be set in the buffer memory and written to the flash ROM again. Doing so can cause malfunction or failure of the module.
- Note that the whole system may not be reset by the RUN/STOP/RESET switch when the CPU module or intelligent function module detects an error, such as a watchdog timer error, during self-diagnosis. In such cases, turn the power off and on again.

[DISPOSAL PRECAUTIONS]

CAUTION

- Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.

[TRANSPORTATION PRECAUTIONS]

CAUTION

- The PLC is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications of the User's Manual (Hardware) of the CPU module by using dedicated packaging boxes and shock-absorbing palettes. Failure to do so may cause failures in the PLC. After transportation, verify operation of the PLC and check for damage of the mounting part, etc.

INTRODUCTION

This manual contains text, diagrams and explanations which will guide the reader in the correct installation, safe use and operation of the FX5-ENET/IP Ethernet module of iQ-F series.

It should be read and understood before attempting to install or use the unit. Store this manual in a safe place so that you can read it whenever necessary.

Always forward it to the end user.

Regarding use of this product

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Note

- If in doubt at any stage during the installation of the product, always consult a professional electrical engineer who is qualified and trained in the local and national standards. If in doubt about the operation or use, please consult the nearest Mitsubishi Electric representative.
- Mitsubishi Electric will not accept responsibility for actual use of the product based on these illustrative examples.
- This manual content, specification etc. may be changed, without a notice, for improvement.
- The information in this manual has been carefully checked and is believed to be accurate; however, if you notice a doubtful point, an error, etc., please contact the nearest Mitsubishi Electric representative. When doing so, please provide the manual number given at the end of this manual.

CONTENTS

SAFETY PRECAUTIONS	1
INTRODUCTION	7
RELEVANT MANUALS	12
TERMS	14
CHAPTER 1 OUTLINE	16
CHAPTER 2 SPECIFICATIONS	18
2.1 General Specifications	18
2.2 Power Supply Specifications	18
2.3 Performance Specifications	19
2.4 Part Names	21
LED display	22
CHAPTER 3 PROCEDURES BEFORE OPERATION	23
CHAPTER 4 FUNCTION	24
4.1 Function List	24
4.2 EtherNet/IP Communication Functions	25
Class1 instance communications	27
Class3 message communications	34
UCMM message communications	38
4.3 Communication Status Setting Function When a CPU Stop Error Occurs	42
CHAPTER 5 SYSTEM CONFIGURATION	43
5.1 EtherNet/IP Configuration	43
5.2 General-purpose Ethernet Communication Configuration	44
5.3 Available Software Packages	44
CHAPTER 6 WIRING	45
6.1 Grounding	45
6.2 Wiring Method	47
6.3 Wiring Products	48
CHAPTER 7 PARAMETER SETTINGS	49
7.1 Procedure for Setting Parameters	49
7.2 Required Settings	50
7.3 Basic Setting	50
7.4 Application Settings	53
7.5 Setting EtherNet/IP Communications (Starting EtherNet/IP Configuration Tool for FX5-ENET/IP)	54
7.6 Writing Parameters	54
CHAPTER 8 EtherNet/IP Configuration Tool for FX5-ENET/IP	55
8.1 Window Structure	55
Menu	56
EtherNet/IP setting	63
Device Library	65
Network Detection	67

Network configuration settings	73
Setting Target Instance	96
Operation information list	97
8.2 Procedure for Registering EtherNet/IP Devices	98
Adding the EDS file	98
Configuring settings online	101
Configuring settings offline	101
8.3 Checking the Software Version	102
CHAPTER 9 PROGRAMMING	103
9.1 Program Example of Class 1 Instance Communications	103
Program example	103
9.2 Program Example of UCMM Message Communications	105
Program example	105
CHAPTER 10 TROUBLESHOOTING	107
10.1 Checking with LEDs	107
10.2 Checking the Module Status	109
Module diagnostics	109
Ethernet diagnostics	111
Checking the buffer memory	115
Event history function	115
10.3 Checking the Network Status	116
Network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP	116
Checking with the buffer memory	118
PING test	118
10.4 Hardware Test	119
10.5 Troubleshooting by Symptom	120
10.6 List of Error Codes	122
EtherNet/IP communication error	122
Module error	126
Ethernet communication error	129
10.7 List of Event Code	130
APPENDICES	133
Appendix 1 External Dimensions	133
Appendix 2 Standards	134
Certification of UL, cUL standards	134
Compliance with EC directive (CE Marking)	134
Requirement for compliance with EMC directive	134
Caution for compliance with EC Directive	134
Appendix 3 Module Label	135
Appendix 4 Buffer Memory	136
List of buffer memory addresses	136
Details of buffer memory addresses	137
Appendix 5 Details of Message Communication Support Command	153
Object list	153
Command explanations	153
Identity	155
Connection Manager	157

TCP/IP Interface	158
Ethernet Link	160
Appendix 6 Processing Time	163
RPI (Requested Packet Interval)	163
Transmission delay time	163
INDEX	165
REVISIONS	166
WARRANTY	167
TRADEMARKS	168

RELEVANT MANUALS

Manual name <manual number>	Description
MELSEC IQ-F FX5 User's Manual (Startup) <JY997D58201>	Performance specifications, procedures before operation, and troubleshooting of the CPU module.
MELSEC IQ-F FX5U User's Manual (Hardware) <JY997D55301>	Describes the details of hardware of the FX5U CPU module, including input/output specifications, wiring, installation, and maintenance.
MELSEC IQ-F FX5UC User's Manual (Hardware) <JY997D61401>	Describes the details of hardware of the FX5UC CPU module, including input/output specifications, wiring, installation, and maintenance.
MELSEC IQ-F FX5 User's Manual (Application) <JY997D55401>	Describes basic knowledge required for program design, functions of the CPU module, devices/labels, and parameters.
MELSEC IQ-F FX5 Programming Manual (Program Design) <JY997D55701>	Describes specifications of ladders, ST, FBD/LD, and other programs and labels.
MELSEC IQ-F FX5 Programming Manual (Instructions, Standard Functions/Function Blocks) <JY997D55801>	Describes specifications of instructions and functions that can be used in programs.
MELSEC IQ-F FX5 User's Manual (Serial Communication) <JY997D55901>	Describes N:N network, Parallel link, MELSEC Communication protocol, inverter communication, non-protocol communication, and predefined protocol support.
MELSEC IQ-F FX5 User's Manual (MELSEC Communication Protocol) <JY997D60801>	Explains methods for the device that is communicating with the CPU module by MC protocol to read and write the data of the CPU module.
MELSEC IQ-F FX5 User's Manual (MODBUS Communication) <JY997D56101>	Describes MODBUS serial communication and MODBUS/TCP communication.
MELSEC IQ-F FX5 User's Manual (PROFIBUS) <SH-081910ENG>	Describes the functions of the PROFIBUS-DP master module.
MELSEC IQ-F FX5 User's Manual (Ethernet Communication) <JY997D56201>	Describes the Ethernet communication function of the CPU module built-in and the Ethernet module.
MELSEC IQ-F FX5-ENET User's Manual <SH-082026ENG>	Describes the functions of the Ethernet module.
MELSEC IQ-F FX5-ENET/IP User's Manual <SH-082027ENG> (This manual)	Describes the functions of the FX5-ENET/IP.
MELSEC IQ-F FX5 User's Manual (SLMP) <JY997D56001>	Explains methods for the device that is communicating with the CPU module by SLMP to read and write the data of the CPU module.
MELSEC IQ-F FX5 User's Manual (CC-Link IE) <JY997D64201>	Describes CC-Link IE field network module.
MELSEC IQ-F FX5 User's Manual (CC-Link) <SH-081793ENG>	Describes CC-Link system master/intelligent device module.
MELSEC IQ-F FX5 User's Manual (ASLINK) <SH-081796ENG>	Describes AnyWireASLINK system master module.
MELSEC IQ-F FX5 User's Manual (Positioning Control - CPU module built-in, High-speed pulse input/output module) <JY997D56301>	Describes the positioning function of the CPU module built-in and the high-speed pulse input/output module.
MELSEC IQ-F FX5 User's Manual (Positioning Control - Intelligent function module) <SH-081805ENG>	Describes the positioning module.
MELSEC IQ-F FX5 Simple Motion Module User's Manual (Startup) <IB0300251>	Specifications, procedures before operation, system configuration, wiring, and operation examples of the Simple Motion module.
MELSEC IQ-F FX5 Simple Motion Module User's Manual (Application) <IB0300253>	Functions, input/output signals, buffer memories, parameter settings, programming, and troubleshooting of the Simple Motion module.
MELSEC IQ-F FX5 Simple Motion Module User's Manual (Advanced Synchronous Control) <IB0300255>	Functions and programming for the synchronous control of the Simple Motion module.
MELSEC IQ-F FX5 User's Manual (Analog Control - CPU module built-in, Expansion adapter) <JY997D60501>	Describes the analog function of the CPU module built-in and the analog adapter.
MELSEC IQ-F FX5 User's Manual (Analog Control - Intelligent function module) <SH-081802ENG>	Describes the analog input module, analog output module, and multiple input module.
MELSEC IQ-F FX5 User's Manual (Temperature Control) <SH-081799ENG>	Describes the temperature control module.
GX Works3 Operating Manual <SH-081215ENG>	System configuration, parameter settings, and online operations of GX Works3.

Manual name <manual number>	Description
Transition from MELSEC FX3U, FX3UC Series to MELSEC iQ-F Series Handbook <JY997D66201>	Describes the transition from MELSEC FX3U/FX3UC series to MELSEC iQ-F series.

TERMS

Unless otherwise specified, this manual uses the following terms.

For details on the FX3 devices that can be connected with the FX5, refer to the User's Manual (Hardware) of the CPU module to be used.

Terms	Description
■Devices	
FX5	Generic term for FX5U and FX5UC PLCs
FX3	Generic term for FX3S, FX3G, FX3GC, FX3U, and FX3UC PLCs
FX5 CPU module	Generic term for FX5U CPU module and FX5UC CPU module
FX5U CPU module	Generic term for FX5U-32MR/ES, FX5U-32MT/ES, FX5U-32MT/ESS, FX5U-64MR/ES, FX5U-64MT/ES, FX5U-64MT/ESS, FX5U-80MR/ES, FX5U-80MT/ES, FX5U-80MT/ESS, FX5U-32MR/DS, FX5U-32MT/DS, FX5U-32MT/DSS, FX5U-64MR/DS, FX5U-64MT/DS, FX5U-64MT/DSS, FX5U-80MR/DS, FX5U-80MT/DS, and FX5U-80MT/DSS
FX5UC CPU module	Generic term for FX5UC-32MT/D, FX5UC-32MT/DSS, FX5UC-64MT/D, FX5UC-64MT/DSS, FX5UC-96MT/D, FX5UC-96MT/DSS, FX5UC-32MT/DS-TS, and FX5UC-32MT/DSS-TS
Extension module	Generic term for FX5 extension modules and FX3 function modules
• FX5 extension module	Generic term for I/O modules, FX5 extension power supply modules, and FX5 intelligent function modules
• FX3 extension module	Generic term for FX3 extension power supply module and FX3 intelligent function module
• Extension module (extension cable type)	Generic term for Input modules (extension cable type), Output modules (extension cable type), Input/output modules (extension cable type), Powered input/output module, High-speed pulse input/output module, Extension power supply module (extension cable type), Connector conversion module (extension cable type), Intelligent function modules, and Bus conversion module (extension cable type)
• Extension module (extension connector type)	Generic term for Input modules (extension connector type), Output modules (extension connector type), Input/output modules (extension connector type), Extension power supply module (extension connector type), Connector conversion module (extension connector type), and Bus conversion module (extension connector type)
I/O module	Generic term for Input modules, Output modules, Input/output modules, Powered input/output modules, and High-speed pulse input/output modules
Input module	Generic term for Input modules (extension cable type) and Input modules (extension connector type)
• Input module (extension cable type)	Generic term for FX5-8EX/ES and FX5-16EX/ES
• Input module (extension connector type)	Generic term for FX5-C16EX/D, FX5-C16EX/DS, FX5-C32EX/D, FX5-C32EX/DS, and FX5-C32EX/DS-TS
Output module	Generic term for Output modules (extension cable type) and Output modules (extension connector type)
• Output module (extension cable type)	Generic term for FX5-8EYR/ES, FX5-8EYT/ES, FX5-8EYT/ESS, FX5-16EYR/ES, FX5-16EYT/ES, and FX5-16EYT/ESS
• Output module (extension connector type)	Generic term for FX5-C16EYT/D, FX5-C16EYT/DSS, FX5-C32EYT/D, FX5-C32EYT/DSS, FX5-C32EYT/D-TS, and FX5-C32EYT/DSS-TS
Input/output module	Generic term for Input/output modules (extension cable type) and Input/output modules (extension connector type)
• Input/output module (extension cable type)	Generic term for FX5-16ER/ES, FX5-16ET/ES, and FX5-16ET/ESS
• Input/output module (extension connector type)	Generic term for FX5-C32ET/D, FX5-C32ET/DSS, FX5-C32ET/DS-TS, and FX5-C32ET/DSS-TS
Powered input/output module	Generic term for FX5-32ER/ES, FX5-32ET/ES, FX5-32ET/ESS, FX5-32ER/DS, FX5-32ET/DS, and FX5-32ET/DSS
High-speed pulse input/output module	Generic term for FX5-16ET/ES-H and FX5-16ET/ESS-H
Extension power supply module	Generic term for FX5 extension power supply module and FX3 extension power supply module
• FX5 extension power supply module	Generic term for FX5 extension power supply module (extension cable type) and FX5 extension power supply module (extension connector type)
• FX5 extension power supply module (extension cable type)	Different name for FX5-1PSU-5V
• FX5 extension power supply module (extension connector type)	Different name for FX5-C1PS-5V
• FX3 extension power supply module	Different name for FX3U-1PSU-5V
Intelligent module	The abbreviation for intelligent function modules
Intelligent function module	Generic term for FX5 intelligent function modules and FX3 intelligent function modules
• FX5 intelligent function module	Generic term for FX5-4AD, FX5-4DA, FX5-8AD, FX5-4LC, FX5-20PG-P, FX5-20PG-D, FX5-40SSC-S, FX5-80SSC-S, FX5-ENET, FX5-ENET/IP, FX5-CCLIEF, FX5-CCL-MS, FX5-ASL-M, and FX5-DP-M

Terms	Description
• FX3 intelligent function module	Generic term for FX3U-4AD, FX3U-4DA, FX3U-4LC, FX3U-1PG, FX3U-2HC, FX3U-16CCL-M, FX3U-64CCL, FX3U-128ASL-M, and FX3U-32DP
Expansion board	Generic term for board for FX5U CPU module
• Communication board	Generic term for FX5-232-BD, FX5-485-BD, and FX5-422-BD-GOT
Expansion adapter	Generic term for adapter for FX5 CPU module
• Communication adapter	Generic term for FX5-232ADP and FX5-485ADP
• Analog adapter	Generic term for FX5-4AD-ADP, FX5-4DA-ADP, FX5-4AD-PT-ADP, and FX5-4AD-TC-ADP
Bus conversion module	Generic term for Bus conversion module (extension cable type) and Bus conversion module (extension connector type)
• Bus conversion module (extension cable type)	Different name for FX5-CNV-BUS
• Bus conversion module (extension connector type)	Different name for FX5-CNV-BUSC
Connector conversion module	Generic term for Connector conversion module (extension cable type) and Connector conversion module (extension connector type)
• Connector conversion module (extension cable type)	Different name for FX5-CNV-IF
• Connector conversion module (extension connector type)	Different name for FX5-CNV-IFC
Extended extension cable	Generic term for FX5-30EC and FX5-65EC
Connector conversion adapter	Different name for FX5-CNV-BC
Battery	Different name for FX3U-32BL
SD memory card	Generic term for NZ1MEM-2GBSD, NZ1MEM-4GBSD, NZ1MEM-8GBSD, NZ1MEM-16GBSD, L1MEM-2GBSD and L1MEM-4GBSD SD memory cards Abbreviation of Secure Digital Memory Card. Device that stores data using flash memory.
Peripheral device	Generic term for engineering tools and GOTs
GOT	Generic term for Mitsubishi Electric Graphic Operation Terminal GOT1000 and GOT2000 series
■Software packages	
Engineering tool	The product name of the software package for the MELSEC programmable controllers
GX Works3	The product name of the software package, SWnDND-GXW3, for the MELSEC programmable controllers (The 'n' represents a version.)
■EtherNet/IP	
Ethernet module	Generic term for FX5-ENET and FX5-ENET/IP
EtherNet/IP	An industrial Ethernet protocol offered by ODVA.
CIP	The abbreviation for Common Industrial Protocol. One of the open protocols of ODVA, a specialized application protocol for EtherNet/IP, DeviceNet and ControlNet.
EtherNet/IP device	A generic term for devices, personal computers, and other equipment connected by EtherNet/IP for data communication.
Scanner	The EtherNet/IP station type that corresponds to the master station.
Adapter	The EtherNet/IP station type that corresponds to slave stations.
Originator	Originator indicates an EtherNet/IP device that transmits a connection establishment request of EtherNet/IP.
Target	Target indicates an EtherNet/IP device that receives a connection establishment request of EtherNet/IP.
Client	An EtherNet/IP device that transmits commands to the external device.
Server	An EtherNet/IP device that returns responses to the commands from the external device.
PPS	The abbreviation of Packets Per Second. It indicates the number of packets that can be processed in one second.
RPI	The abbreviation for Requested Packet Interval. It is the communication cycle determined by the originator during communications between EtherNet/IP devices.
TCP	The abbreviation for Transmission Control Protocol. In communications among programmable controllers and networked devices, this protocol establishes a connection between port numbers of the two devices to perform reliable data communications.
UDP	The abbreviation for User Datagram Protocol. This is a connectionless protocol and thereby its speed is faster than that of TCP, but less reliable. (Data may be lost or not be received in correct order.)


1 OUTLINE

FX5-ENET/IP Ethernet module (hereinafter referred to as FX5-ENET/IP) is an intelligent function module for connecting to a EtherNet/IP network and general-purpose Ethernet.

EtherNet/IP communication


The module can communicate seamlessly with an EtherNet/IP network by using the communication protocol CIP.

FX5-ENET/IP functions as a scanner (originator/client) or an adapter (target/server) of the EtherNet/IP network.

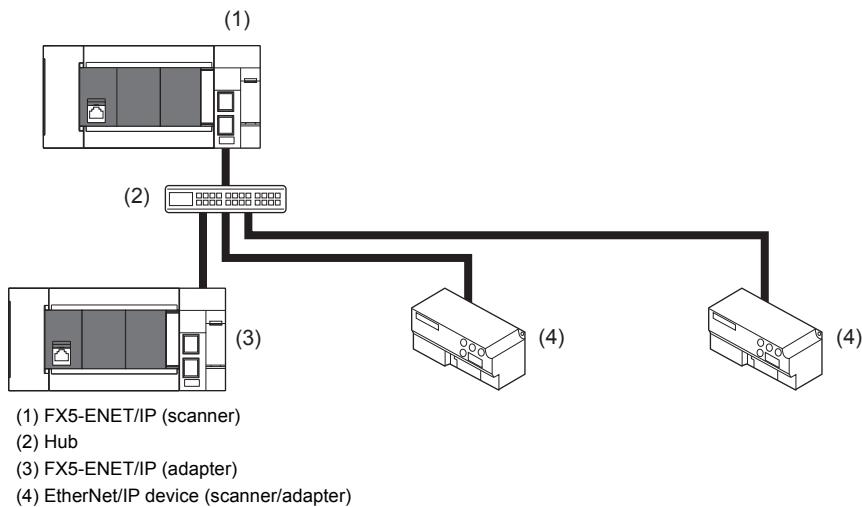

General-purpose Ethernet communication

The module can be connected with a host system, such as a personal computer, by using the communication protocol TCP/UDP.

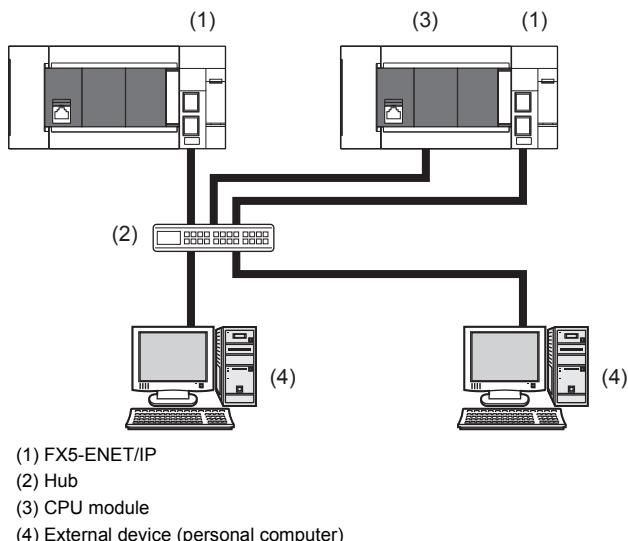

MEMO

2 SPECIFICATIONS

This chapter describes the FX5-ENET/IP specifications.

2.1 General Specifications

The items other than the following are equivalent to those of the CPU module.

For the general specification, refer to the following manual.

 MELSEC iQ-F FX5U User's Manual (Hardware)

 MELSEC iQ-F FX5UC User's Manual (Hardware)

Items	Specifications	
Dielectric withstand voltage	500 V AC for 1 minute	Between all terminals and ground terminal
Insulation resistance	10 MΩ or higher by 500 V DC insulation resistance tester	

2.2 Power Supply Specifications

The following table lists the power supply specifications.

Items	Specifications
Internal power supply	Power supply voltage
	Current consumption

2.3 Performance Specifications

The following table lists the performance specifications.

Items	Specifications	
EtherNet/IP communications	Class 1 communications	Communication format
		Number of connections
		Communication data size
		Connection type
		RPI (communication cycle)
		PPS (communication processing performance)
	Class 3 communications	Communication format
		Number of connections
		Communication data size
		Connection type
	UCMM communications	Communication format
		Number of connections (number of simultaneous executions)
		Communication data size
		Connection type
	Transmission specifications	Data transmission speed
		Communication mode
		Transmission method
		Interface
		IP version
		Maximum segment length (Maximum distance between hub and node)
		Number of cascade connections
		100BASE-TX
	Network topology	
	Hub ⁵	
	Connection cable ⁷	
	100BASE-TX	
General-purpose Ethernet communication	Transmission specifications	Data transfer speed
		Communication mode
		Transmission method
		Interface
		Maximum segment length (Maximum distance between hub and node)
		Number of cascade connections
		100BASE-TX
		10BASE-T
	Protocol type	
	Number of connections	
	Hub ⁵	
	Connection cable ⁷	
	100BASE-TX	
	10BASE-T	
Number of ports		2 ⁹
Number of occupied I/O points		8 points
Applicable CPU module		<ul style="list-style-type: none"> FX5U CPU module (Ver. 1.110 or later) FX5UC CPU module¹⁰ (Ver. 1.110 or later)
Applicable engineering tool		<ul style="list-style-type: none"> GX Works3 (Ver. 1.050C or later) EtherNet/IP Configuration Tool for FX5-ENET/IP (Ver. 1.00A or later)
Number of connectable units		1 module

- *1 The total number of connections for Class 3 communications and UCMM communications is 32.
- *2 This size is the maximum size which can be specified to 'Data length' of Class1 communication input data area of the request command during the client operation.
During the sever operation, since the FX5-ENET/IP automatically responds according to the request command received from the client, the maximum size is not prescribed.
- *3 For maximum segment length (length between hubs), consult the manufacturer of the hub used.
- *4 This number applies when a repeater hub is used. When using a switching hub, check the number of cascaded stages with the manufacturer of the hub to be used.
- *5 IEEE802.3x flow control is not supported.
- *6 The ports must comply with the IEEE802.3 100BASE-TX standards.
- *7 A straight/cross cable can be used.
- *8 The ports must comply with the IEEE802.3 100BASE-TX or IEEE802.3 10BASE-T standards.
- *9 Since the IP address is shared by two ports, only one address can be set.
- *10 FX5-CNV-IFC or FX5-C1PS-5V is necessary to connect FX5-ENET/IP to the FX5UC CPU module.

Point

- If the destination device of the FX5-ENET/IP does not respond due to power off or other reasons, Ethernet communication of the FX5-ENET/IP may get delayed by up to 500 ms.
- In the case of general-purpose Ethernet communication, when FX5-ENET/IP is connected with a hub, it distinguishes between 100BASE-TX and 10BASE-T and between full-duplex and half-duplex communication modes according to the hub. Set the hub to the half-duplex mode if the hub does not have the auto-negotiation function.



Precautions

The operation of the following connections is not guaranteed. Check the operation before using the module.

- Connection using internet (general public line) (Internet-access service offered by an Internet service provider or a telecommunications carrier)
- Connection using firewall device(s)
- Connection using broadband router(s)
- Connection using wireless LAN

2.4 Part Names

This chapter describes the names of each part of the FX5-ENET/IP.

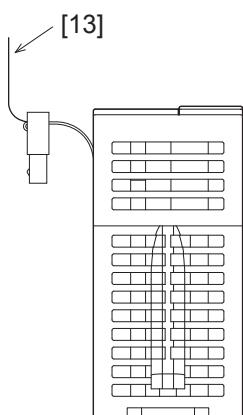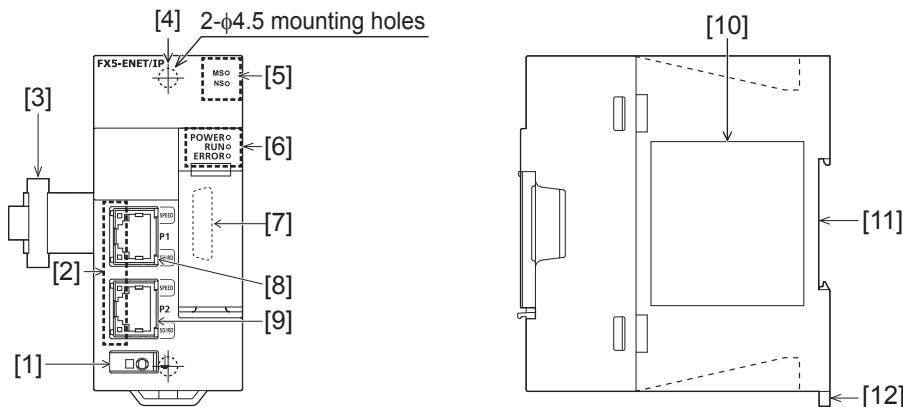

No.	Name	Description
[1]	External ground terminal	Connect an external ground. (Spring clamp terminal block)
[2]	Link status display LEDs	Displays the link status of module. (参照 Page 22 LED display)
[3]	Extension cable	Cable for connecting the module when adding the FX5-ENET/IP
[4]	Direct mounting hole	Screw holes (2-φ4.5, mounting screw: M4 screw) for direct installation
[5]	Module/network status display LEDs	Displays the module and network status. (参照 Page 22 LED display)
[6]	Operation status display LEDs	Refer to 参照 Page 22 LED display.
[7]	Extension connector (for next module)	Connector for connecting the extension cable of an extension module.
[8]	Modular jack for P1 (RJ-45) (with cap)	A port 1 connector for EtherNet/IP network and general-purpose Ethernet network. Connect an Ethernet cable.
[9]	Modular jack for P2 (RJ-45) (with cap)	A port 2 connector for EtherNet/IP network and general-purpose Ethernet network. Connect an Ethernet cable.
[10]	Name plate	The product model name, manufacturer's serial number etc. are shown.
[11]	DIN rail mounting groove	The module can be installed on DIN46277 rail (35 mm wide).
[12]	DIN rail mounting hook	Hook for mounting the module on a DIN rail of DIN46277 (35 mm wide).
[13]	Pullout tab	They are used when drawing out an extension cable.

LED display

The following table lists the LED display.

LED display	LED color	Description
MS	Green, Red	<p>Indicates the error status of the EtherNet/IP device.</p> <p>■LED color: Green</p> <ul style="list-style-type: none"> • On: Data communication possible • Flashing: No parameter setting • Off: Power failure occurred <p>■LED color: Red</p> <ul style="list-style-type: none"> • On: Moderate error or major error • Flashing: Minor error • Off: Power failure occurred
NS	Green, Red	<p>Indicates the EtherNet/IP network status.</p> <p>■LED color: Green</p> <ul style="list-style-type: none"> • On: Data communications being performed • Flashing: Failed to establish connection • Off: Power failure occurred <p>■LED color: Red</p> <ul style="list-style-type: none"> • Flashing: Connection time out • Off: Power failure occurred
POWER	Green	<p>Indicates the power supply status.</p> <ul style="list-style-type: none"> • On: Power on • Off: Power off or module failure
RUN	Green	<p>Indicates the operating status.</p> <ul style="list-style-type: none"> • On: Normal operation • Off: Error
ERROR	Red	<p>Indicates the module error status.</p> <ul style="list-style-type: none"> • On: Minor error or major error • Flashing: Moderate error or major error • Off: Normal operation
P1	SPEED	<p>Indicates the transmission speed of P1.</p> <ul style="list-style-type: none"> • On: Link-up (100 Mbps) • Off: Link-up (10 Mbps)
	SD/RD	<p>Indicates the data sending/receiving status of P1.</p> <ul style="list-style-type: none"> • On, Flashing: Data being sent or received • Off: Data not transmitted or received
P2	SPEED	<p>Indicates the transmission speed of P2</p> <ul style="list-style-type: none"> • On: Link-up (100 Mbps) • Off: Link-up (10 Mbps)
	SD/RD	<p>Indicates the data sending/receiving status of P2.</p> <ul style="list-style-type: none"> • On, Flashing: Data being sent or received • Off: Data not transmitted or received

3 PROCEDURES BEFORE OPERATION

This chapter describes the procedures before operation.

EtherNet/IP communication

1. Checking the specifications of the FX5-ENET/IP

Check the specifications of the FX5-ENET/IP. (☞ Page 18 SPECIFICATIONS)

2. Installation of the FX5-ENET/IP

Connect the FX5-ENET/IP to the CPU module. For details, refer to the following.

BOOK MELSEC iQ-F FX5U User's Manual (Hardware)

BOOK MELSEC iQ-F FX5UC User's Manual (Hardware)

3. Configuring a network

Configure a network and set parameters which are required for start-up.

- Wiring (☞ Page 45 WIRING)

- Parameter setting (☞ Page 49 PARAMETER SETTINGS)

4. Network diagnostics

Check the connection status of the connected EtherNet/IP device using EtherNet/IP Configuration Tool for FX5-ENET/IP.

(☞ Page 116 Checking the Network Status)

5. Programming

Create a program. (☞ Page 103 PROGRAMMING)

6. Check the communication status

Check the communication status of FX5-ENET/IP. (☞ Page 109 Checking the Module Status)

Precautions

When referring to the above manuals, replace the module name as shown below.

- FX5-ENET → FX5-ENET/IP

General-purpose Ethernet communication

1. Checking the specifications of the FX5-ENET/IP

Check the specifications of the FX5-ENET/IP. (☞ Page 18 SPECIFICATIONS)

2. Installation of the FX5-ENET/IP

Connect the FX5-ENET/IP to the CPU module. For details, refer to the following.

BOOK MELSEC iQ-F FX5U User's Manual (Hardware)

BOOK MELSEC iQ-F FX5UC User's Manual (Hardware)

3. Configuring a network

Configure a network and set parameters which are required for start-up.

- Wiring (☞ Page 45 WIRING)

- Parameter setting (☞ Page 49 PARAMETER SETTINGS)

In the following steps, see the following manual for each function.

BOOK MELSEC iQ-F FX5 User's Manual (Ethernet Communication)

Precautions

When referring to the above manuals, replace the module name as shown below.

- FX5-ENET → FX5-ENET/IP

4 FUNCTION

The following table lists the function available for the FX5-ENET/IP.

4.1 Function List

EtherNet/IP communication functions

Function	Description	Reference
Class1 instance communications	Periodically performs data communications between the FX5-ENET/IP and the EtherNet/IP device to which the connection has been established using an instance ID. Data communications are performed between the originator that sends the connection request and the target that receives the connection request.	Page 27
Class3 message communications	Performs message communications between the FX5-ENET/IP and the EtherNet/IP device to which the connection has been established by specifying a message communication destination using an instance ID. Class3 message communications support the server function.	Page 34
UCMM message communications	Performs message communications between the FX5-ENET/IP and the EtherNet/IP device by specifying a message communication destination using an instance ID without establishing the connection. UCMM message communications support the client function and the server function.	Page 38

General-purpose Ethernet communication functions

For details on general-purpose Ethernet communication functions, refer to  MELSEC iQ-F FX5 User's Manual (Ethernet Communication).

Function	Description
IP filter function	Identifies the IP address of the access source to limit access to the FX5-ENET/IP.
Socket communication function	By using socket communication instructions, any data can be transferred from and to the external devices connected through Ethernet using TCP or UDP.
IP address change function	The IP address of FX5-ENET/IP can be changed by operating a peripheral device without using GX Works3.

Precautions

When referring to the above manuals, replace the module name as shown below.

- FX5-ENET to FX5-ENET/IP

Others

Function	Description	Reference
Communication status setting function at the occurrence of a CPU stop error	Sets whether to stop or continue EtherNet/IP communications when a stop error occurs on the CPU module to which the FX5-ENET/IP is connected. This setting can be made for each module.	Page 42
Hardware test	Performs hardware tests (RAM and ROM) of FX5-ENET/IP.	Page 119
Ethernet diagnostics	Diagnoses the Ethernet port from GX Works3.	Page 111
Event history function	Collects errors from FX5-ENET/IP, and stores them as event information into the CPU module	Page 115

4.2 EtherNet/IP Communication Functions

The EtherNet/IP communication functions are used to perform data communications over a network between the FX5-ENET/IP and EtherNet/IP devices.

The FX5-ENET/IP can perform the following types of EtherNet/IP communications.

- Class1 communications
- Class3 communications
- UCMM communications

Class1 communications

With Class1 communications, data communications are performed periodically by establishing connections between the FX5-ENET/IP and EtherNet/IP devices over a network.

Class1 communications has the following functions.

- Class1 instance communications (☞ Page 27)

4

Class3 communications

With Class3 communications, data are read or written using message communication support commands by establishing connections between the FX5-ENET/IP and EtherNet/IP devices over a network.

Class3 communications has the following function.

- Class3 message communications (☞ Page 34)

UCMM communications

With UCMM communications, message communication support commands are used to read and write data without establishing connections over a network between the FX5-ENET/IP and EtherNet/IP devices.

UCMM communications has the following function.

- UCMM message communications (☞ Page 38)



FX5-ENET/IP has 32 connections for Class1 communications and 32 connections for Class3 and UCMM communications together. (☞ Page 19 Performance Specifications)

Applied connection of EtherNet/IP communications

■When the FX5-ENET/IP is the target

○: Requests can be accepted from the EtherNet/IP device, ×: Requests cannot be accepted from EtherNet/IP device, —: No combination

EtherNet/IP communications	Connection settings							
	Connection type	Trigger type			Input type (target to originator)		Output type (originator to target)	
Class1 instance communications		Cyclic	Application Trigger	Change of State ^{*1}	Fixed ^{*2}	Variable ^{*3}	Fixed ^{*2}	Variable ^{*3}
Exclusive Owner ^{*4}	○	×	×	○	×	○	×	
Input Only ^{*5}	○	×	×	○	×	—	—	
Listen Only ^{*6}	○	×	×	○	×	—	—	—

*1 A method to send data when the status changes.

*2 A method for communicating with a fixed size.

*3 A method for communicating with a variable size.

*4 A connection simultaneously set from the originator to the FX5-ENET/IP for receiving data and set from the FX5-ENET/IP to the originator for sending data.

*5 A connection set from the FX5-ENET/IP to the originator only for receiving data.

*6 A connection monitored by the originator for data communication with a connection established FX5-ENET/IP.

■When the FX5-ENET/IP is the originator

○: Requests can be accepted from the EtherNet/IP device, ×: Requests cannot be accepted from EtherNet/IP device, —: No combination

EtherNet/IP communications	Connection settings							
	Connection type	Trigger type			Input type (target to originator)		Output type (originator to target)	
Class1 instance communications		Cyclic	Application Trigger	Change of State ^{*1}	Fixed ^{*2}	Variable ^{*3}	Fixed ^{*2}	Variable ^{*3}
Exclusive Owner ^{*4}	○	○	○	○	○	○	○ ^{*7}	
Input Only ^{*5}	○	○	○	○	○	—	—	
Listen Only ^{*6}	○	○	○	○	○	—	—	—

*1 A method to send data when the status changes.

*2 A method for communicating with a fixed size.

*3 A method for communicating with a variable size.

*4 A connection simultaneously set from the FX5-ENET/IP to the target for sending data and set from the target to the FX5-ENET/IP for receiving data.

*5 A connection set from the target to the FX5-ENET/IP only for receiving data.

*6 A connection that monitors the data communication with a connection established target

*7 Connection requests can be set, but are sent from the FX5-ENET/IP with a fixed size.



For the connection setting method, refer to the following.

☞ Page 85 [Connections] tab


Class1 instance communications

Function overview

Class1 instance communications is a function for periodically performing data communication between the FX5-ENET/IP and an EtherNet/IP device over a connection that has been established using an instance ID.


Data communications are performed between the originator (the device on the sending side that requests the connection) and the target (the device on the receiving side that is requested to connect).

■When the connection type is Exclusive Owner

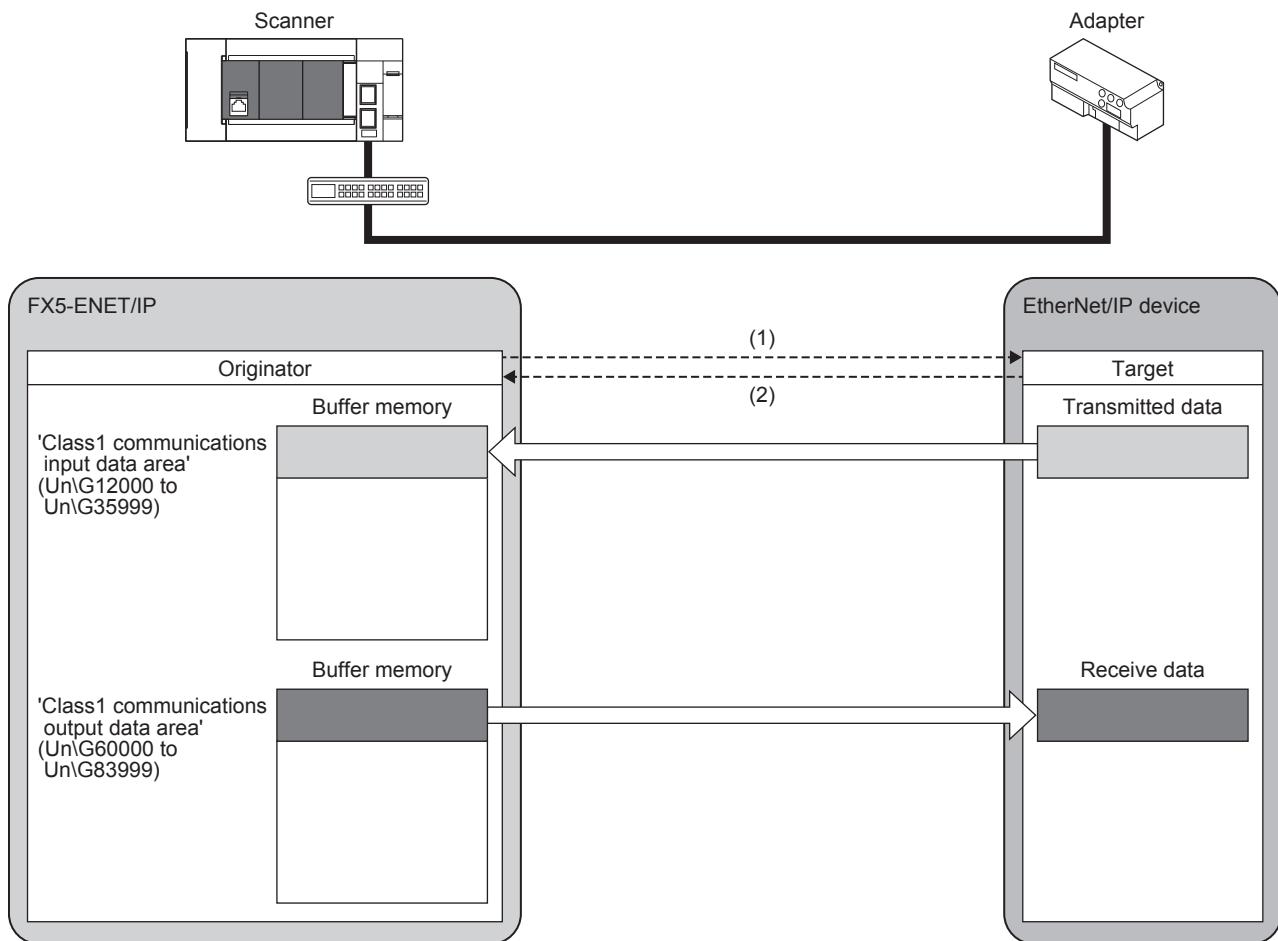


(1) Connection open
(2) Response

■When the connection type is Input Only

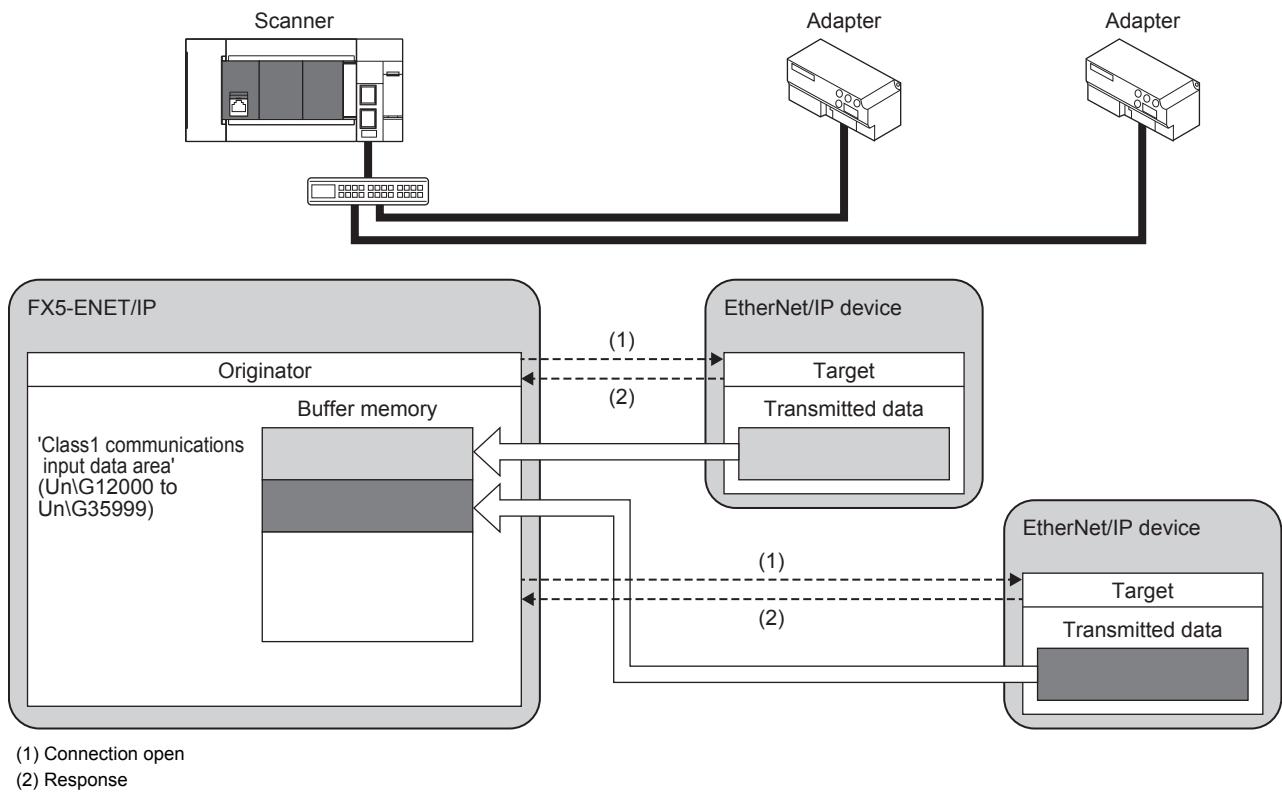

■When the connection type is Listen Only

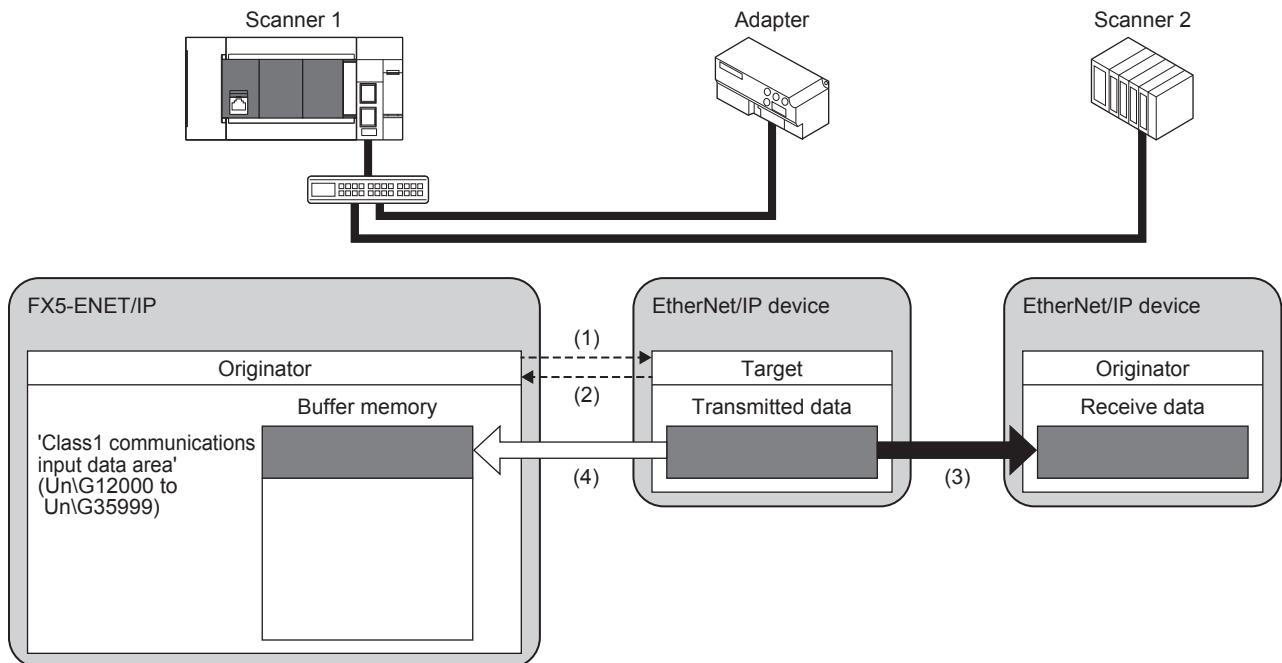

Point

- Listen Only is a connection for the target of which connection such as Exclusive Owner and Input Only that is set for multicast communications is already opened. It can receive only multicast-type data sent to the FX5-ENET/IP.
- The connection of Listen Only cannot be opened when the connection such as Exclusive Owner and Input Only that is set for multicast communications is not opened.
- Even when communications are performed normally with the target that is opened using Listen Only, the data receiving will be stopped if all the communications with other originators that are opened using the connection such as Exclusive Owner and Input Only that is set for multicast communications.

Instance ID

The instance ID is a number that indicates an EtherNet/IP device and is specified when the EtherNet/IP communication connection is established.

With settings from the FX5-ENET/IP, the instance ID is not specified. Instead, the connection number is specified to determine the target.

Communication timing

Class1 instance communications are performed at the RPI interval set with the FX5-ENET/IP on the scanner side.

The RPI can be set for each connection. (☞ Page 85 [Connections] tab)

The communication trigger type is Cyclic.


Data sending

Data is sent from the originator to the target.

Data can be sent when the connection type is Exclusive Owner.

■ Sending data with the Cyclic trigger type

Data transmission can be repeated periodically.

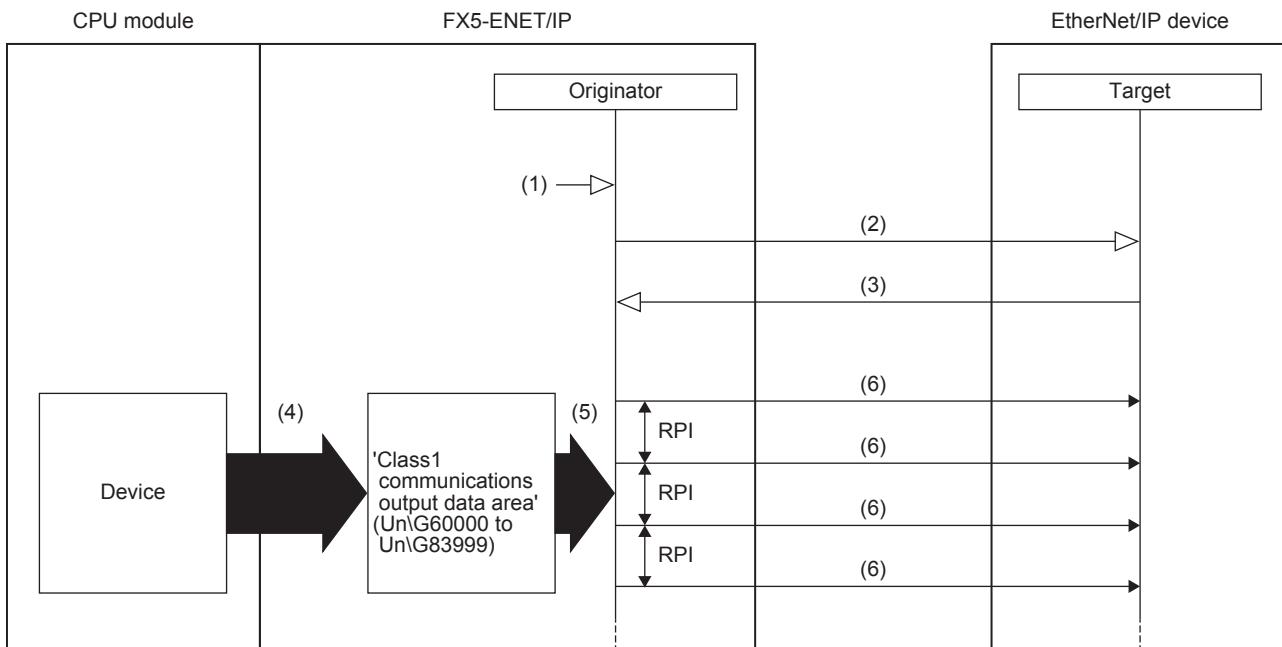

(1) Turn on 'EtherNet/IP communication start request' (Un\G37.b0)

(2) Connection open

(3) Response (normal)

(4) Transfer the stored data with a program

(5) Send the stored data at the RPI interval

(6) Sending data

Data is sent with the Cyclic trigger type according to the following procedure.

1. Connection establishment ((1) to (3) shown above)

The connection is established when 'EtherNet/IP communication start request' (Un\G37.b0) on the FX5-ENET/IP on the scanner side is turned on, the connection open request is sent, and then a response is received from the EtherNet/IP device on the adapter side.

2. Sending data ((5) to (6) shown above)

If the connection is established normally, the originator sends the data stored in 'Class1 communications output data area' (Un\G60000 to Un\G83999).




For the operation timing of EtherNet/IP communications, refer to the following.

☞ Page 139 Operation timing of EtherNet/IP communications

Data receiving

Data is received by the originator from the target.

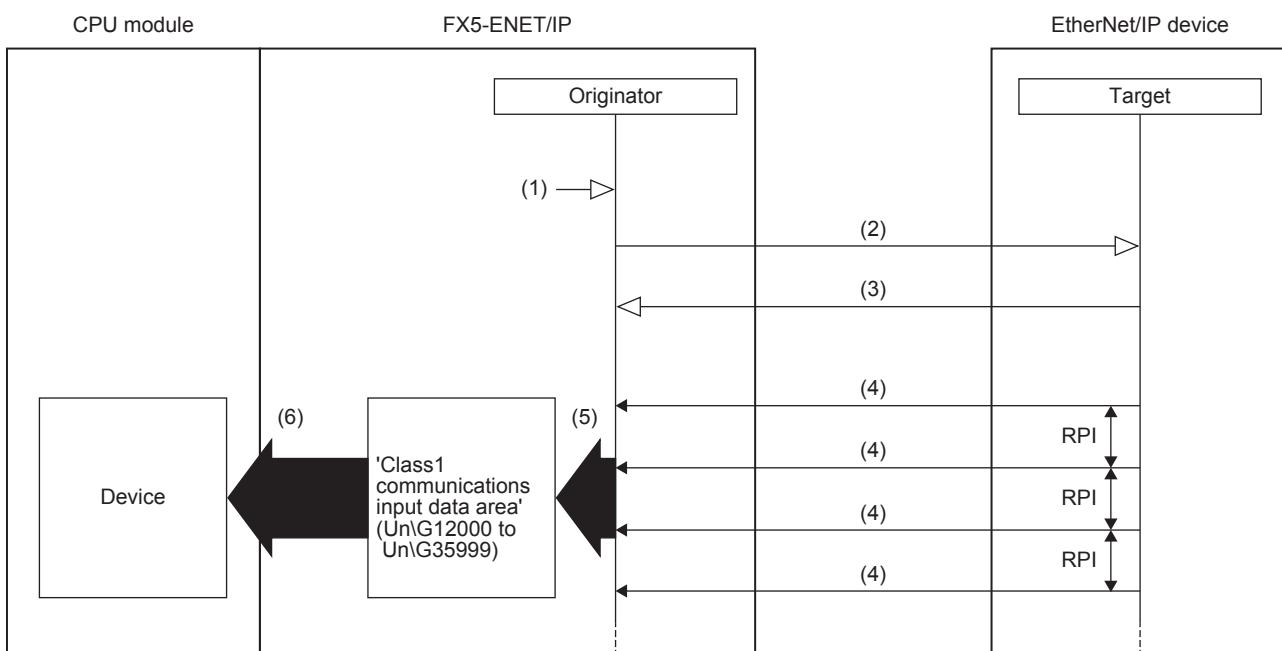

(1) Turn on 'EtherNet/IP communication start request' (Un\G37.b0)

(2) Connection open

(3) Response (normal)

(4) Receiving data

(5) Store the data received at the RPI interval

(6) Transfer the stored data with a program

Data is received according to the following procedure.

1. Connection establishment ((1) to (3) shown above)

The connection is established when 'EtherNet/IP communication start request' (Un\G37.b0) on the FX5-ENET/IP on the scanner side is turned on, the connection open request is sent, and then a response is received from the EtherNet/IP device on the adapter side.

2. Receiving data ((4) to (5) shown above)

If the connection is established normally, the originator stores the received data in 'Class1 communications input data area' (Un\G12000 to Un\G35999).



For the operation timing of EtherNet/IP communications, refer to the following.

☞ Page 139 Operation timing of EtherNet/IP communications

Setting method

For Class1 instance communications, set the originator and target on the FX5-ENET/IP on the scanner side.

■Originator (on scanner side) settings

Under "Basic Setting" in the GX Works3, set the IP address, subnet mask, and default gateway of the FX5-ENET/IP.

 [Navigation window] \Rightarrow [Parameter] \Rightarrow [Module Information] \Rightarrow [FX5-ENET/IP] \Rightarrow [Basic Setting]

Item	Setting
Own Node Settings	
IP Address	
IP Address	
Subnet Mask	
Default Gateway	
Opening Method	Do Not Open by Program
Operational Setting	
External Device Configuration	

For details on the setting window, refer to the following.

 Page 50 Basic Setting


■Target (on adapter side) settings

After registering the EtherNet/IP device with EtherNet/IP Configuration Tool for FX5-ENET/IP, set the adapter side for each connection.

For details on registering EtherNet/IP devices, refer to the following.

 Page 98 Procedure for Registering EtherNet/IP Devices

 Select the EtherNet/IP device in the network configuration settings \Rightarrow [Device] \Rightarrow [Properties] \Rightarrow [Connections] tab

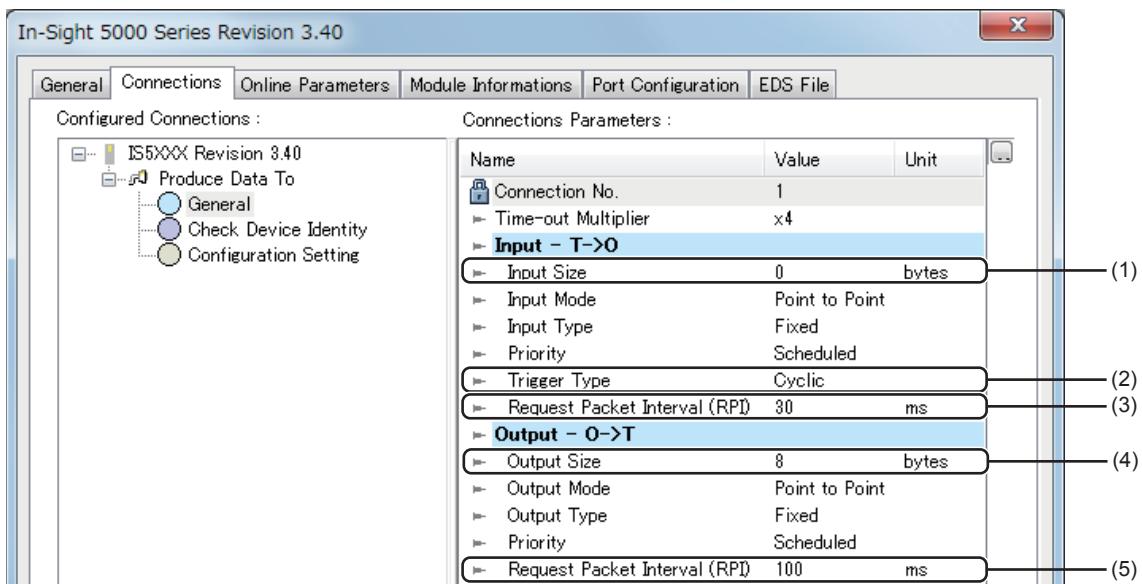

(1) Input data size

(2) Trigger type

(3) RPI

(4) Output data size

(5) RPI

For details on the setting window, refer to the following.

 Page 85 [Connections] tab

Assurance of input/output data

The data received from EtherNet/IP devices and the data transmitted to EtherNet/IP devices can be assured for each connection. The data assurance is enabled by setting the buffer memory and acquiring the input data and setting the output data using the following module FBs.

- Class1 communication input data acquisition (Class1GetInputData)
- Class1 communication output data setting (Class1SetOutputData)

■Procedure

1. Write “16: Perform data assurance” in ‘Block assurance specification per connection’ (Un\G5000) while the module is not communicating with the EtherNet/IP communication device.
2. Turn on ‘EtherNet/IP communication start request’ (Un\G37.b0) to start the communications with the EtherNet/IP communication device.
3. Acquire the received data and set the transmitted data using the unit FBs “Class1 communication input data acquisition” and “Class1 communication output data setting” on the program.

Class3 message communications

Function overview


Class3 message communications is a function for performing message communications between the FX5-ENET/IP and an EtherNet/IP device over a connection that has been established by specifying the message communication destination with an instance ID.

Class3 message communication supports the server functions.

■Server function

With the server function, message communication support commands are used to communicate with arbitrary timing.

(☞ Page 35 Server function)

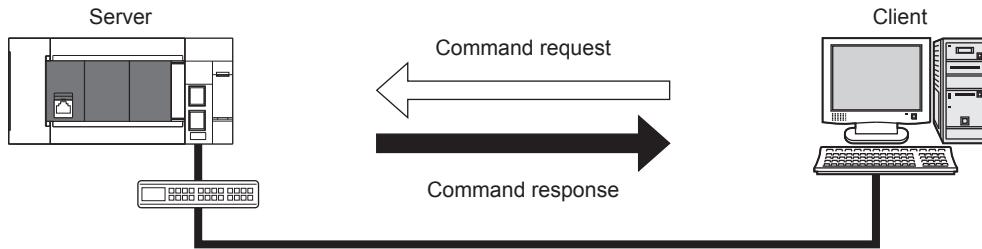

Message communication support commands


Items such as data and parameters can be read and written with message communication support commands.

For details on message communication support command objects, refer to the following.

☞ Page 153 Details of Message Communication Support Command

Server function

With the Class3 message communication server function, when the FX5-ENET/IP receives a command request from an EtherNet/IP device, the FX5-ENET/IP executes the command processing and returns the command response.

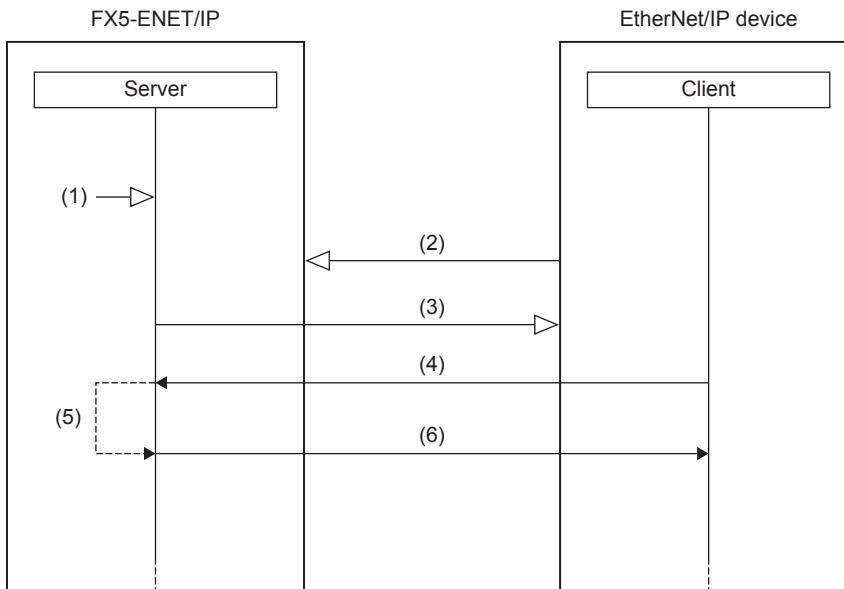

(1) Turn on 'EtherNet/IP communication start request' (Un\G37.b0)

(2) Connection open

(3) Response (normal)

(4) Command request

(5) Command processing execution

(6) Command response

Class3 message communications with the server function is performed according to the following procedure.

1. Connection establishment ((1) to (3) shown above)

The connection is established when 'EtherNet/IP communication start request' (Un\G37.b0) of the FX5-ENET/IP on the server side is turned on, a connection open request is received from the EtherNet/IP device on the client side, and then a response is returned.

2. Command request acceptance and response ((4) to (6) shown above)

If the connection is established normally, a command request is sent from the EtherNet/IP device with arbitrary timing.

When the FX5-ENET/IP receives the command request from the EtherNet/IP device, the FX5-ENET/IP executes the command processing and returns the command response to the EtherNet/IP device.



For the operation timing of EtherNet/IP communications, refer to the following.

☞ Page 139 Operation timing of EtherNet/IP communications

Setting method

Set the server for the FX5-ENET/IP that performs Class3 message communications.

Under "Basic Setting" in the GX Works3, set the IP address, subnet mask, and default gateway of the FX5-ENET/IP.

☞ [Navigation window] ⇒ [Parameter] ⇒ [Module Information] ⇒ [FX5-ENET/IP] ⇒ [Basic Setting]

Item	Setting
Own Node Settings	
IP Address	
IP Address	...
Subnet Mask	...
Default Gateway	...
Opening Method	Do Not Open by Program
Operational Setting	
External Device Configuration	

For details on the setting window, refer to the following.

☞ Page 50 Basic Setting

Communication method


Open the connection from the client side, and execute the command request.

When the server receives the command request, it returns the command response to the client side.

To request commands using EtherNet/IP Configuration Tool for FX5-ENET/IP, use the "Online Action" window.

1. Start EtherNet/IP Configuration Tool for FX5-ENET/IP, and set the IP address on the server side.

☞ Select the "FX5-ENET/IP" in the EtherNet/IP setting ⇒ [Description] ⇒ [Properties]

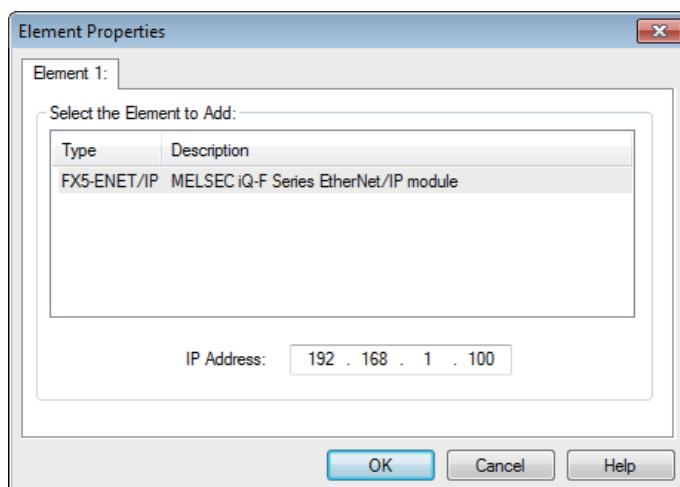


2. Switch EtherNet/IP Configuration Tool for FX5-ENET/IP to the online state.

☞ Select the EtherNet/IP device in the network configuration settings ⇒ [File] ⇒ [Go Online]

3. Execute the command request of Class3 message communications in the "Online Action" window.

→ [Network]⇒[Online Action]

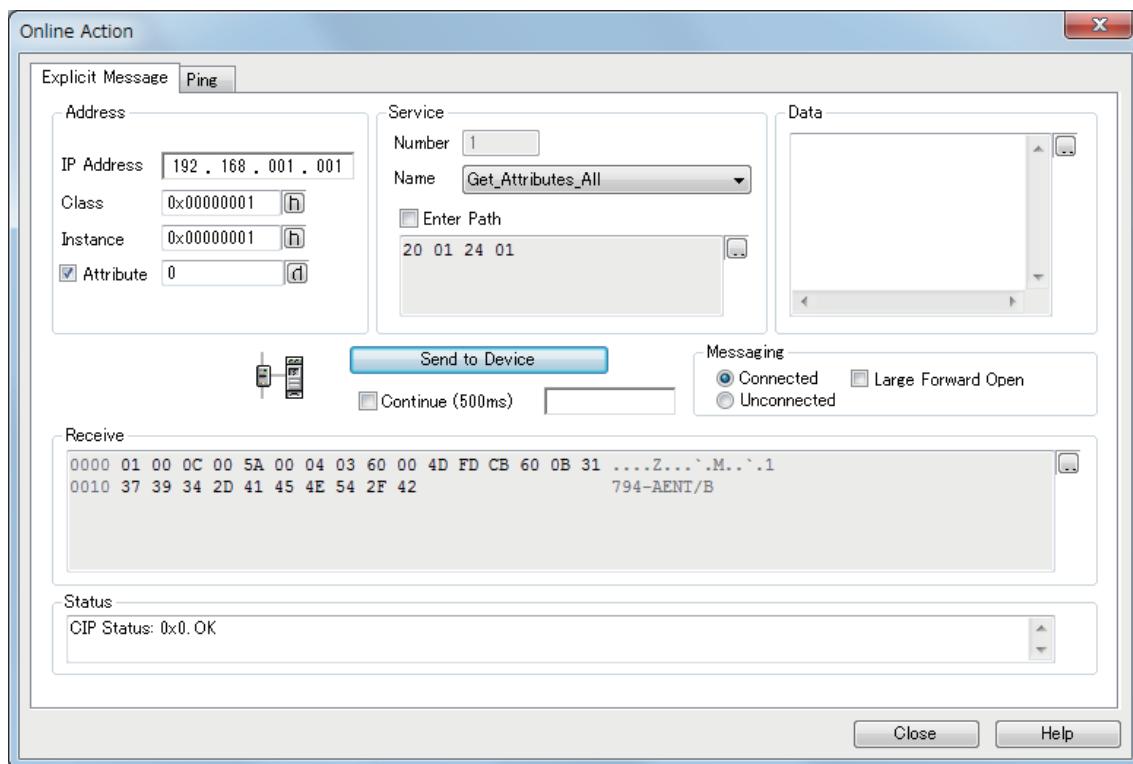

For details on the setting window, refer to the following.

→ Page 69 "Online Action" window



Commands for message communications can be requested from software made by other companies. When requesting commands from software made by other companies, refer to the manual of the software used.

UCMM message communications


Function overview

UCMM message communications is a function for performing message communications between the FX5-ENET/IP and an EtherNet/IP device by specifying the message communication destination with an instance ID and not by establishing a connection.

UCMM message communication supports the client and server functions.

■Client function


With the client function, the buffer memory is used to communicate with arbitrary timing. ([Page 39 Client function](#))

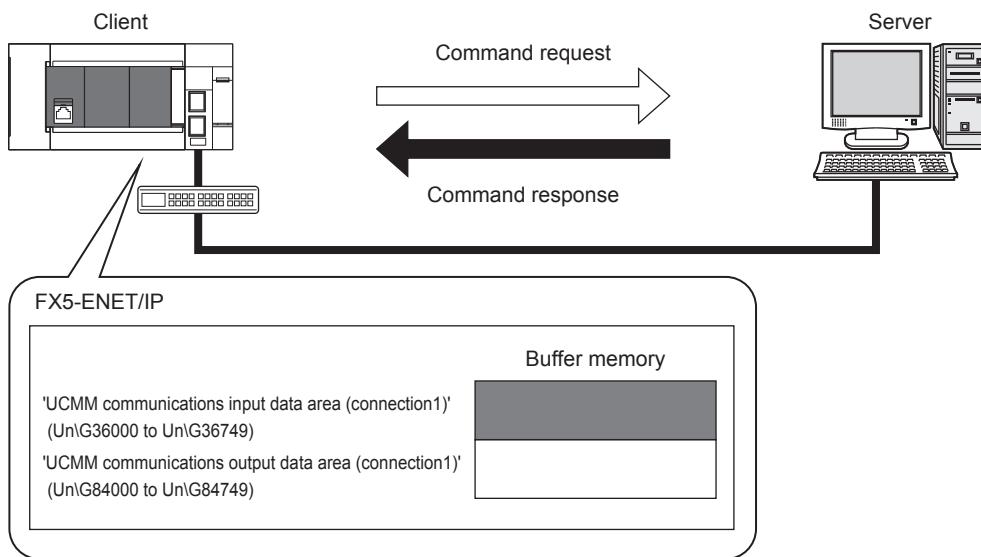

■Server function

With the server function, message communication support commands are used to communicate with arbitrary timing.

([Page 40 Server function](#))

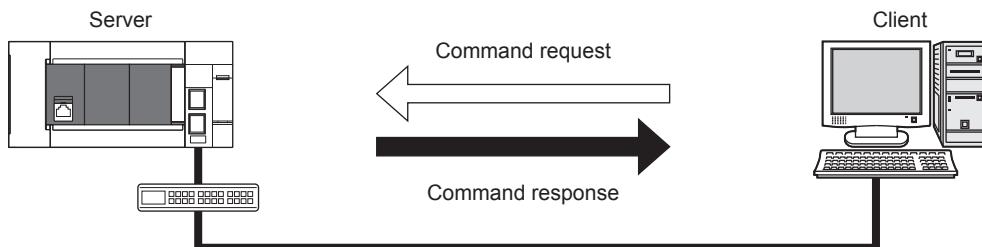

Message communication support commands

Items such as data and parameters can be read and written with message communication support commands.


For details on message communication support command objects, refer to the following.

[Page 153 Details of Message Communication Support Command](#)

Client function

With the UCMM message communication client function, the buffer memory of the FX5-ENET/IP is used to send command requests to and receive command responses from the EtherNet/IP device.

The client function can be used to access the services of each EtherNet/IP device and thereby read and write items such as the data and parameters with arbitrary timing.

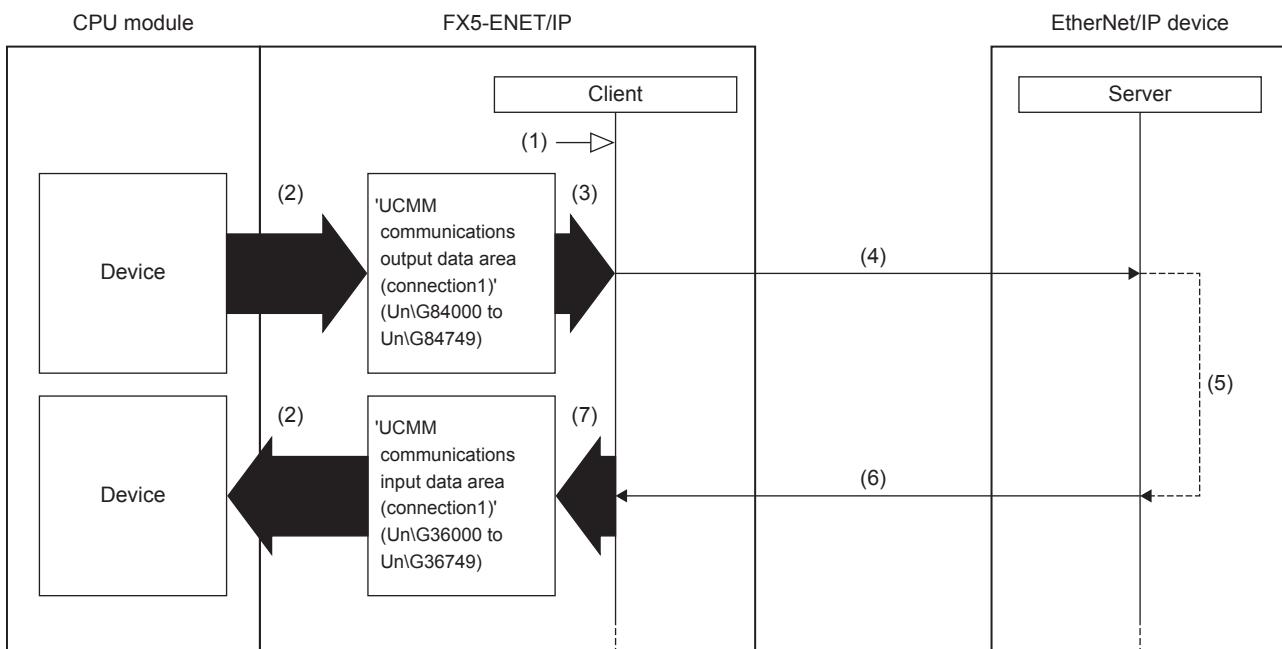

(1) Turn on 'EtherNet/IP communication start request' (Un\G37.b0)

(2) Transfer the stored data with a program

(3) Turn on 'Application Trigger request' (Un\G5274 to Un\G5275)

(4) Command request

(5) Command processing execution

(6) Command response

(7) Turn on 'Application Trigger completion' (Un\G5282 to Un\G5283)

UCMM message communications with the client function is performed according to the following procedure.

1. Starting the UCMM communication execution request ((1) to (3) shown above)

Turn on 'EtherNet/IP communication start request' (Un\G37.b0) and then turn on 'Application Trigger request' (Un\G5274 to Un\G5275) from the FX5-ENET/IP on the client side.

2. Sending the command request ((4) shown above)

When the FX5-ENET/IP checks the UCMM data link execution request, 'Application Trigger acceptance' (Un\G5278 to Un\G5279) is turned on, and then the command request is sent to the EtherNet/IP device.

3. Command response acceptance ((5) to (6) shown above)

The EtherNet/IP device executes the command processing, and then returns the command response.

When the FX5-ENET/IP receives the command response from the EtherNet/IP device, the FX5-ENET/IP turns on 'Application Trigger completion' (Un\G5282 to Un\G5283) to complete the processing.




For the operation timing of EtherNet/IP communications, refer to the following.

☞ Page 148 Application Trigger

Server function

With the UCMM message communication server function, when the FX5-ENET/IP receives a command request from an EtherNet/IP device, the FX5-ENET/IP executes the command processing and returns the command response.

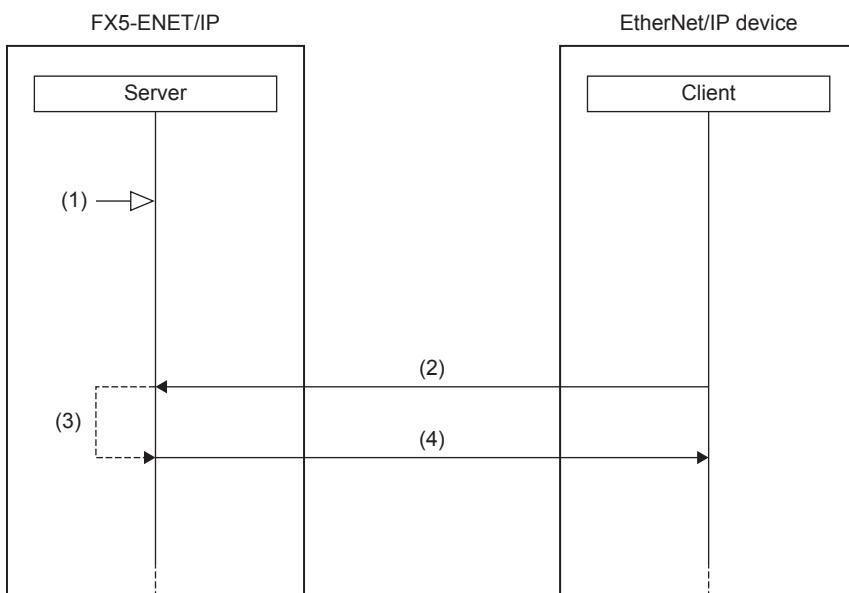

(1) Turn on 'EtherNet/IP communication start request' (Un\G37.b0)
(2) Command request
(3) Command processing execution
(4) Command response

UCMM message communications with the server function is performed according to the following procedure.

1. Starting the EtherNet/IP communication start request ((1) shown above)

Turn on 'EtherNet/IP communication start request' (Un\G37.b0) from the FX5-ENET/IP on the server side.

2. Command request acceptance and response ((2) to (4) shown above)

When the FX5-ENET/IP receives the command request from the EtherNet/IP device with arbitrary timing, the FX5-ENET/IP executes the command processing and returns the command response to the EtherNet/IP device.



For the operation timing of EtherNet/IP communications, refer to the following.

☞ Page 139 Operation timing of EtherNet/IP communications

Setting method

Set the server and the client for the FX5-ENET/IP that performs UCMM message communications.

Under "Basic Setting" in the GX Works3, set the IP address, subnet mask, and default gateway of the FX5-ENET/IP.

☞ [Navigation window] ⇒ [Parameter] ⇒ [Module Information] ⇒ [FX5-ENET/IP] ⇒ [Basic Setting]

Item	Setting
Own Node Settings	
IP Address	
IP Address	...
Subnet Mask	...
Default Gateway	...
Opening Method	Do Not Open by Program
Operational Setting	
External Device Configuration	

For details on the setting window, refer to the following.

☞ Page 50 Basic Setting

Communication method

■When the client function is used

Execute a command request from the FX5-ENET/IP by operating a program that uses the buffer memory.

For program example of UCMM message communications, refer to the following.

☞ Page 105 Program Example of UCMM Message Communications

■When the server function is used

Open the connection from the client side, and execute the command request.

When the server receives the command request, it returns the command response to the client side.


To request commands using EtherNet/IP Configuration Tool for FX5-ENET/IP, use the "Online Action" window.

For communication method, refer to the following.

☞ Page 36 Communication method

For UCMM message communications, set "Messaging" to "Unconnected" in the "Online Action" window.

4

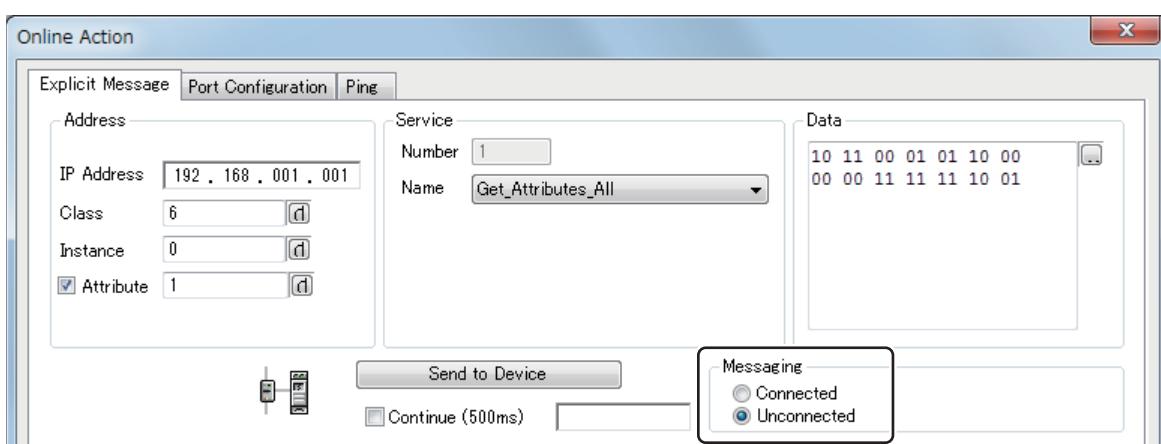

Point

With message communications, commands can also be requested from software made by other companies. When requesting commands from software made by other companies, refer to the manual of the software used.

4.3 Communication Status Setting Function When a CPU Stop Error Occurs

Each FX5-ENET/IP can be set to stop or continue EtherNet/IP communications when a stop error occurs on the CPU module which the FX5-ENET/IP is mounted on.



Therefore, EtherNet/IP communications can be continued even when the stop error occurring CPU module goes into the STOP state.

Procedure

1. Write “16: Continues EtherNet/IP communications” in ‘EtherNet/IP data link continuation specification’ (Un\G5004) while the module is not communicating with the EtherNet/IP communication device.
2. Turn on ‘EtherNet/IP communication start request’ (Un\G37.b0) to start the communications with the EtherNet/IP communication device.

Operation of EtherNet/IP communications

When a CPU stop error occurs, the EtherNet/IP communications are made by the communication status setting function as shown below.

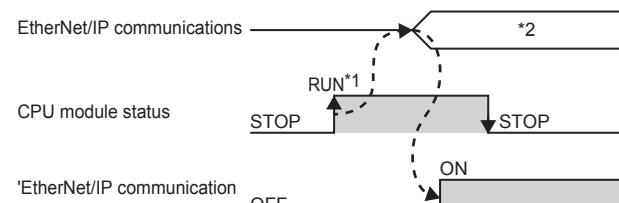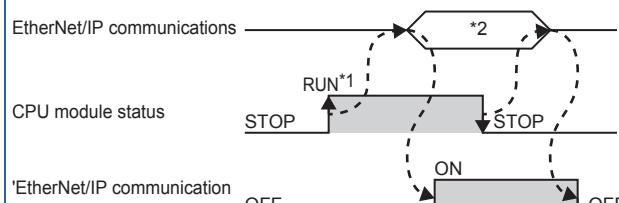When the EtherNet/IP communications are continued (Un\G5004 = 16)	When the EtherNet/IP communications are stopped (Un\G5004 = 0)
 <p>The diagram shows three horizontal timelines. The top timeline is for 'EtherNet/IP communications' and the bottom two are for 'CPU module status'. The bottom timeline is labeled 'RUN *1' and the bottom-most is labeled 'ON'. A switch symbol with an arrow labeled '*2' connects the RUN timeline to the ON timeline. A vertical dashed line labeled 'STOP' is positioned between the RUN and ON timelines. The 'ON' timeline starts at the end of the RUN timeline and ends at a point where an arrow labeled 'OFF' points to it.</p>	 <p>The diagram shows three horizontal timelines. The top timeline is for 'EtherNet/IP communications' and the bottom two are for 'CPU module status'. The bottom timeline is labeled 'RUN *1' and the bottom-most is labeled 'ON'. A switch symbol with an arrow labeled '*2' connects the RUN timeline to the ON timeline. A vertical dashed line labeled 'STOP' is positioned between the RUN and ON timelines. The 'ON' timeline ends at the point where the arrow labeled 'OFF' points to it.</p>

*1 When the CPU module starts running after it stops, the EtherNet/IP communications will start.

*2 Communication enabled

5 SYSTEM CONFIGURATION

5.1 EtherNet/IP Configuration


Network topology

EtherNet/IP consists of the FX5-ENET/IP (1) and EtherNet/IP devices (2).

For the FX5-ENET/IP, configure the network in star topology, or line topology using the Ethernet cables. Ring topologies are not possible.

■Star topology


The network is configured into a star shape using a switching hub and Ethernet cables.

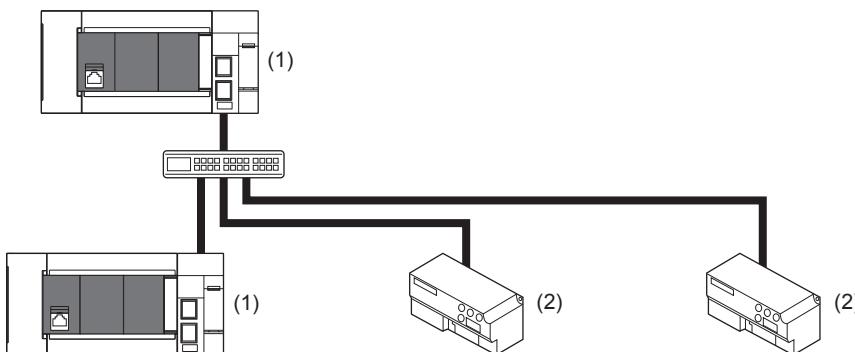

5

■Line topology

The network is configured into a line using Ethernet cables. A switching hub is not required.

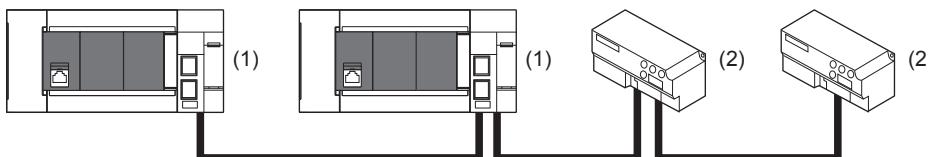

- In EtherNet/IP, other external devices that perform TCP/IP communications can be used with the devices on the same network.
- Up to 33 units can be connected in line topology.

Scanner and adapter

In EtherNet/IP, station types are separated into scanner and adapter.

Station type	Description
Scanner	A station type of EtherNet/IP that corresponds to the master station. The scanner has the control information and controls the overall network. Devices that have a connection of originator or target can be operated as the scanner.
Adapter	A station type of EtherNet/IP that corresponds to slave stations. The adapter indicates stations other than the scanner. Devices that have a connection of target can be operated as the adapter.

5.2 General-purpose Ethernet Communication Configuration

For details on general-purpose Ethernet communication configuration, refer to  MELSEC iQ-F FX5 User's Manual (Ethernet Communication).

5.3 Available Software Packages

To configure the settings of the FX5-ENET/IP, the GX Works3 and EtherNet/IP Configuration Tool for FX5-ENET/IP are required.

Software	Supported version
GX Works3	Ver.1.050C or later
EtherNet/IP Configuration Tool for FX5-ENET/IP	Ver.1.00A or later

Profile of the FX5-ENET/IP

Profile is the data in which the information (such as models) of the connected devices is stored.

Register the profile of the FX5-ENET/IP in GX Works3 at the installation of EtherNet/IP Configuration Tool for FX5-ENET/IP.

For details on operating procedure, refer to the following.


 GX Works3 Operating Manual

6 WIRING

6.1 Grounding

Perform the following.


- Perform class D grounding (Grounding resistance: 100 Ω or less).
- Ground the PLC independently when possible.
- If the PLC cannot be grounded independently, perform the "Shared grounding" shown below.

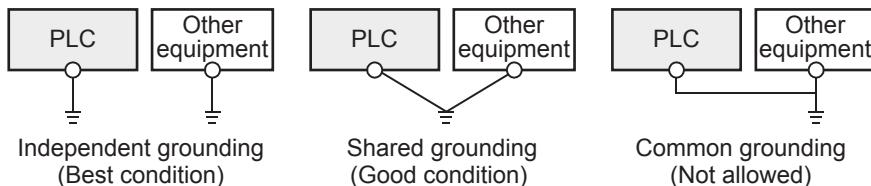

- Bring the grounding point close to the PLC as much as possible so that the ground cable can be shortened.

Grounding of FX5-ENET/IP

6

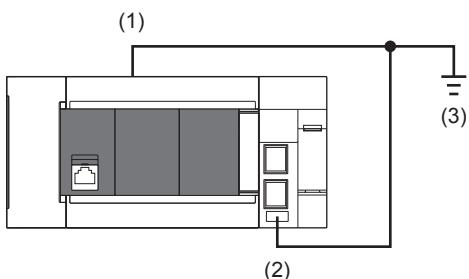

(1) Ground terminal of CPU module
 (2) FG terminal of FX5-ENET/IP
 (3) D grounding (Grounding resistance: 100 Ω or less)

Terminal name	Content
— FG (Ground terminal)	Perform class D grounding. (Grounding resistance: 100 Ω or less)

The connection destination for the FG terminal of FX5-ENET/IP is a spring clamp terminal block. To connect to the terminal block, there are two ways: by using single wires/strand wires or by using ferrules. Make sure to properly connect in accordance with the following specifications.

■Ferrule

The following table shows wire ferrules and its associated tools compatible with the terminal block. The shape of the wire ferrule differs depending on the crimp tool to be used, use the reference product. If the product other than referenced products is used, the wire ferrule cannot be removed. Sufficiently confirm that the wire ferrule can be removed before use.

<Reference product>

Manufacturer	Sleeve	Ferrules model	Suitable wiring size	Crimp tool
PHOENIX CONTACT GmbH & Co. KG	Ferrules with insulation sleeve	AI 0.25-8 YE	0.25 mm ²	CRIMPFOX 6
		AI 0.34-8 TQ	0.3, 0.34 mm ²	
		AI 0.5-8 WH	0.5 mm ²	
		AI 0.75-8 GY	0.75 mm ²	
	Ferrules without insulation sleeve	A 0,25-7	0.25 mm ²	
		A 0,34-7	0.3, 0.34 mm ²	
		A 0,5-8	0.5 mm ²	
		A 0,75-8	0.75 mm ²	
		AI 1.0-8	1.0 mm ²	
		AI 1.5-7	1.25, 1.5 mm ²	



The wires to connect the spring clamp terminal block are described below.

No. of wire per terminal	Wire size	
	Single wire, strand wire	Ferrule with insulation sleeve
One wiring	AWG24 to 16 (0.2 to 1.5 mm ²)	AWG23 to 19 (0.25 to 0.75 mm ²)


■Wire end treatment

Strip the cable about 10 mm from the tip to connect a wire ferrule at the stripped area. Failure to do so may result in electric shock due to the conductive part. If the wire strip length is too short, it may result in the poor contact to the spring clamp terminal part.

Depending on the thickness of the sheath, it may be difficult to insert into the insulation sleeve, so select the wires by referring to the appearance diagram.

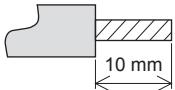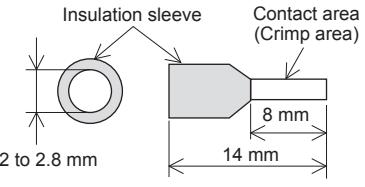Strand wire/single wire	Ferrule with insulation sleeve
	

Check the shape of the wire insertion opening with the following chart, and use the smaller wire ferrule than the described size. Also, insert the wire with care so that the wire ferrule is in proper orientation. Failure to do so may cause the bite of the terminal and the damage of the terminal block.

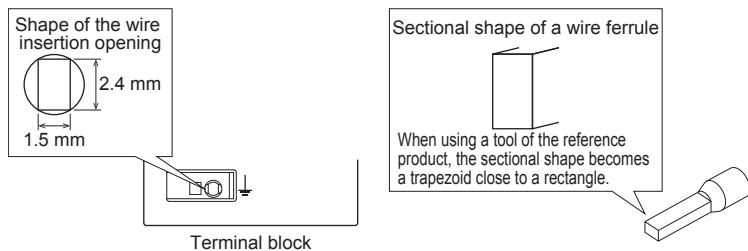

■Connection and disconnection of the cable

- Connection of the cable

Fully insert a cable whose end has been properly processed into the wire insertion opening.

If the cable cannot be inserted with this procedure, fully insert the cable while pushing the open/close button with a flathead screwdriver having a tip width of 2.0 to 2.5 mm. After fully inserting the cable, remove the screwdriver.

<Reference>

Manufacturer	Model
PHOENIX CONTACT GmbH & Co. KG	SZS 0.4 x 2.5 VDE

Precautions

Pull the cable or wire ferrule slightly to check that the cable is securely clamped.

- Disconnection of the cable

Push the open/close button of the wire to be disconnected with a flathead screwdriver. Pull out the wire with the open/close button pushed.

6.2 Wiring Method

This section describes how to connect and disconnect the Ethernet cable.

Connecting the cable

1. Turn the power supply of FX5-ENET/IP (CPU module) and external device off.
2. Push the Ethernet cable connector into the FX5-ENET/IP until it clicks. Pay attention to the orientation of the connector.
3. Lightly pull the connector to check that the connector is securely connected.
4. Turn the power supply of FX5-ENET/IP (CPU module) and external device on.
5. Check whether the SPEED LED of the port connected with an Ethernet cable is on.*1

*1 The time between the cable connection and the turning on of the SPEED LED may vary. The SPEED LED usually turns after a few seconds. Note, however, that the time may be extended further if the link-up processing is repeated depending on the status of the device on the line.

Disconnecting the cable

1. Turn the power supply of FX5-ENET/IP (CPU module) off.
2. Unplug the Ethernet cable while pressing the latch connector down.

6

Precautions

- Place the Ethernet cable in a duct or clamp it. Failure to do so may lead to swinging or inadvertent pulling of dangling cable, resulting in damage to the module or the cable or malfunction due to poor contact.
- Do not touch the core of the cable-side or module-side connector, and protect them from dirt or dust. If oil on your hands, dirt, or dust adheres to the core, transmission loss may increase, causing communication problems.
- Check that the Ethernet cable is not disconnected or not shorted and check that the cable is connected properly.
- Do not use Ethernet cables with broken latch connectors. Doing so may cause the Ethernet cables to be disconnected or the module to malfunction.
- Hold the connector part of the Ethernet cable when connecting and disconnecting it. Pulling the cable connected to the module may result in damage to the module or the cable or malfunction due to poor contact.
- For connectors without Ethernet cable, attached connector cover should be placed to prevent foreign matter such as dirt or dust.
- The maximum station-to-station distance of the Ethernet cable is 100 m. However, the acceptable length may be shorter depending on the environment where the cable is used. For details, contact the cable manufacturer.
- The bending radius of the Ethernet cable is limited. For details, check the specifications of the Ethernet cable to be used.

6.3 Wiring Products

This section describes the devices used to comprise a network.

Ethernet cable

Use Ethernet cables that meet the following standards.

■EtherNet/IP

Communication speed	Specifications	Connector	Ethernet standard
100 Mbps	Ethernet cable: Category 5 or higher (STP cable ^{*1})	RJ45 connector	100BASE-TX

■General-purpose Ethernet

Communication speed	Specifications	Connector	Ethernet standard
100 Mbps	Ethernet cable: Category 5 or higher (STP cable ^{*1})	RJ45 connector	100BASE-TX
10 Mbps	Ethernet cable: Category 3 or higher (STP/UTP cable ^{*1})	RJ45 connector	10BASE-T

*1 Shielded twisted pair cable.

A straight/cross cable can be used.



Depending on the connection environment, communication errors may occur due to high-frequency noise from devices other than programmable controllers. The following describes precautionary measures to be taken on the FX5-ENET/IP to avoid the influence of high-frequency noise.

[Wiring]

- When wiring cables, do not bundle them together with or keep them in close proximity to the main circuit lines or power cables.
- Place cables in a duct.
- Use STP cables in place of UTP cables.

Hub

When using hubs, use hubs that support the transmission speed of communications.

7 PARAMETER SETTINGS

This section explains the parameter settings necessary for EtherNet/IP and general-purpose Ethernet communications with FX5-ENET/IP.

For details on each operation of GX Works3, refer to GX Works3 Operating Manual.

7.1 Procedure for Setting Parameters

1. Add the "Information Module (FX5-ENET/IP)" in the GX Works3.*1

 [Navigation window] \Rightarrow [Parameter] \Rightarrow [Module Information] \Rightarrow Right-click \Rightarrow [Add New Module]

2. Select the "FX5-ENET/IP".

 [Navigation window] \Rightarrow [Parameter] \Rightarrow [Module Information] \Rightarrow [FX5-ENET/IP]

3. Set the parameter.

4. Write the parameter settings to the CPU module.

 [Online] \Rightarrow [Write to PLC]

5. The settings are reflected by resetting the CPU module or powering off and on the system.


The following steps are required when EtherNet/IP is used.

6. Connect the personal computer and FX5-ENET/IP, and start EtherNet/IP Configuration Tool for FX5-ENET/IP.
7. Set the communication parameter of EtherNet/IP. ( Page 55 EtherNet/IP Configuration Tool for FX5-ENET/IP)
8. Write the parameter settings to the FX5-ENET/IP. ( Page 54 Writing Parameters)

*1 FX5-ENET/IP can be added to GX Works3 also from the module configuration diagram.

7.2 Required Settings

Set the operation mode of the FX5-ENET/IP.

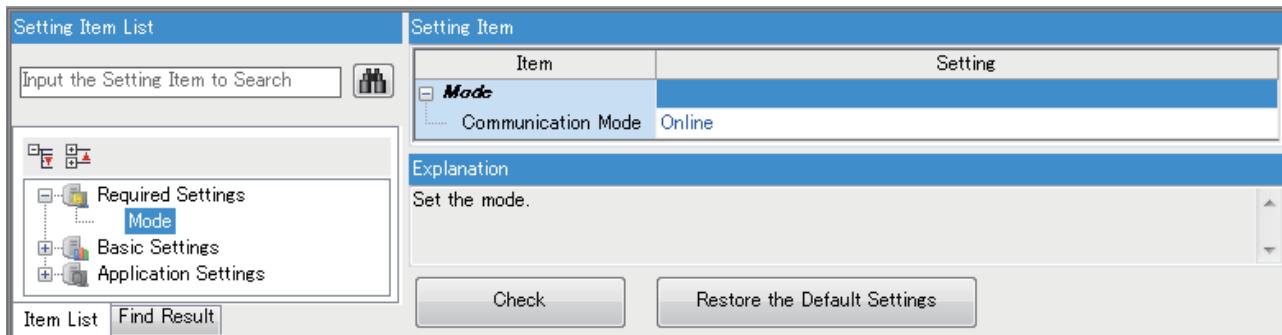

The screenshot shows the 'Setting Item List' interface. On the left, there is a search bar and a tree view with nodes: 'Required Settings' (selected), 'Mode', 'Basic Settings', and 'Application Settings'. On the right, the 'Setting Item' table shows a single entry: 'Mode' with 'Communication Mode' set to 'Online'. Below the table is an 'Explanation' box stating 'Set the mode.' and two buttons: 'Check' and 'Restore the Default Settings'.

Mode

Set the operation mode of the FX5-ENET/IP.


Item	Description	Setting range
Communication Mode	Sets the operation mode of the FX5-ENET/IP. <ul style="list-style-type: none">• Online: Normal operation mode• Hardware Test: Mode in which the module performs a self-diagnostics test. Select this mode when checking the operation of the module due to an error or similar problem. (Page 119 Hardware Test)	<ul style="list-style-type: none">• Online• Hardware Test (Default: Online)



In the hardware test mode, other parameters cannot be set.

7.3 Basic Setting

Set the IP address and functions of FX5-ENET/IP.

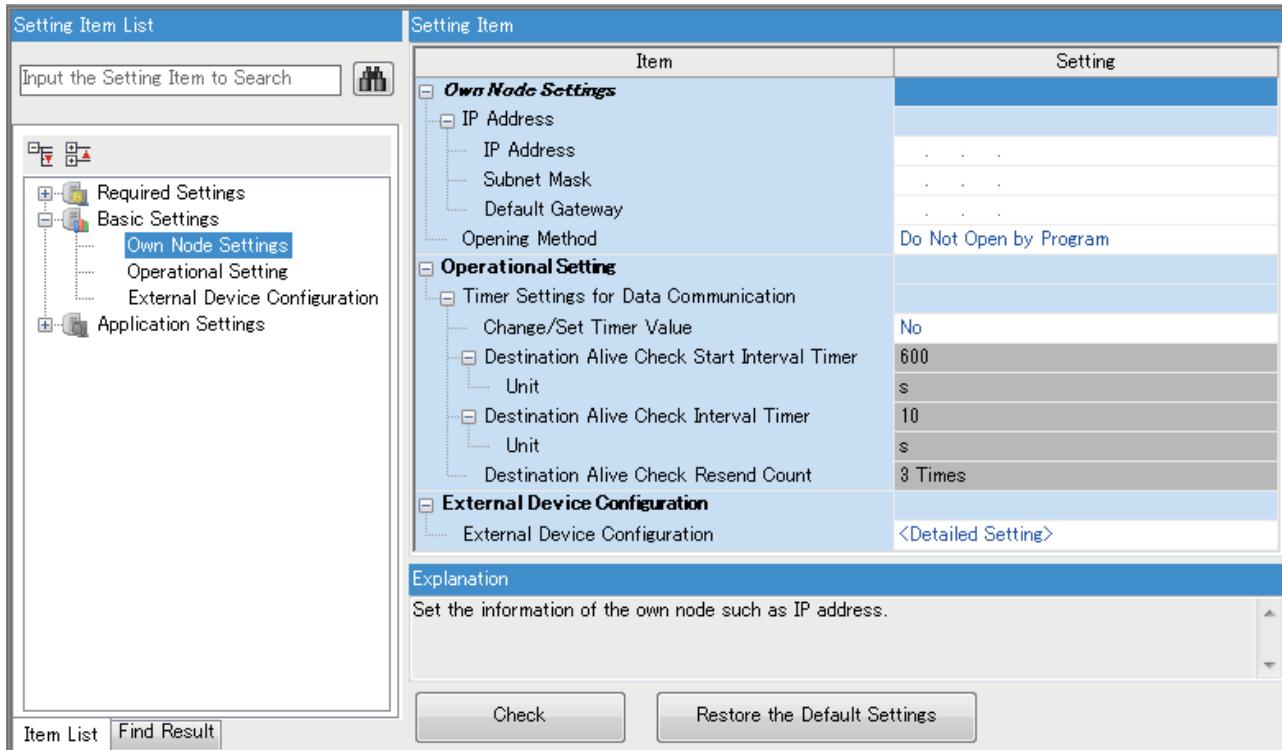

The screenshot shows the 'Setting Item List' interface. On the left, there is a search bar and a tree view with nodes: 'Required Settings', 'Basic Settings' (selected), 'Own Node Settings' (selected), 'Operational Setting', 'External Device Configuration', and 'Application Settings'. On the right, the 'Setting Item' table shows settings for 'Own Node Settings' (IP Address, Subnet Mask, Default Gateway, Opening Method), 'Operational Setting' (Timer Settings for Data Communication, Destination Alive Check Start Interval Timer, Destination Alive Check Interval Timer, Destination Alive Check Resend Count), and 'External Device Configuration' (External Device Configuration). Below the table is an 'Explanation' box stating 'Set the information of the own node such as IP address.' and two buttons: 'Check' and 'Restore the Default Settings'.

Own Node Setting

Set the IP address of the FX5-ENET/IP.

Item	Description	Setting range
IP Address Setting	IP Address	Sets the IP address of the FX5-ENET/IP*1 Set the class and subnet address of the FX5-ENET/IP to the same settings as those of the EtherNet/IP devices that communicate with the FX5-ENET/IP. Contact the network administrator before setting the IP address.
	Subnet Mask	Sets the subnet mask of the FX5-ENET/IP. When setting the IP address of the default gateway and performing communication with an EtherNet/IP device in another network through a router, set the subnet mask pattern of the default gateway. All the devices in the same subnetwork should have a common subnet mask. The subnet mask setting is not required for communication in a single network.
	Default Gateway	Sets the default gateway of the FX5-ENET/IP. Set the IP address of the relay device (default gateway) to access the EtherNet/IP device in another network. Set a value that satisfies the following conditions as the IP address of the default gateway. <ul style="list-style-type: none"> • The class of the IP address is A, B, or C. • The subnet address of the default gateway is the same as that of the FX5-ENET/IP. • The host address part is not a sequence of "0" or "1".
Opening Method	Select how to open a connection. <ul style="list-style-type: none"> • Do Not Open by Program: Select this item to perform open processing and open the connection by the external device. Program for open/close processing is not required. • Open by Program: Select this item to perform open/close processing and open/close the connection by a program. 	• Do Not Open by Program • Open by Program (Default: Do Not Open by Program)

*1 When the parameter is written without the IP address setting (blank), the following address is set.

192.168.3.251

7

Operational Setting


Set the destination alive check conditions for socket communication.

Item	Description	Setting range
Timer Settings for Data Communication	Change/Set Timer Value	Select whether to change timer values from the default. The timer operates with its default value when "No" is selected.
	Destination Alive Check Start Interval Timer	Set the time interval between the reception of the last message from the external device and the start of alive check.
	Destination Alive Check Interval Timer	Set the time interval for performing alive check again when no response is returned from the external device of alive check target.
	Destination Alive Check Resend Count	Set the number of times to perform alive check when no response is returned from the external device of alive check target.

External Device Configuration

Set the conditions of the external devices with which the module will communicate through general-purpose Ethernet.

Double-click <Detailed Setting> of the "External Device Configuration".

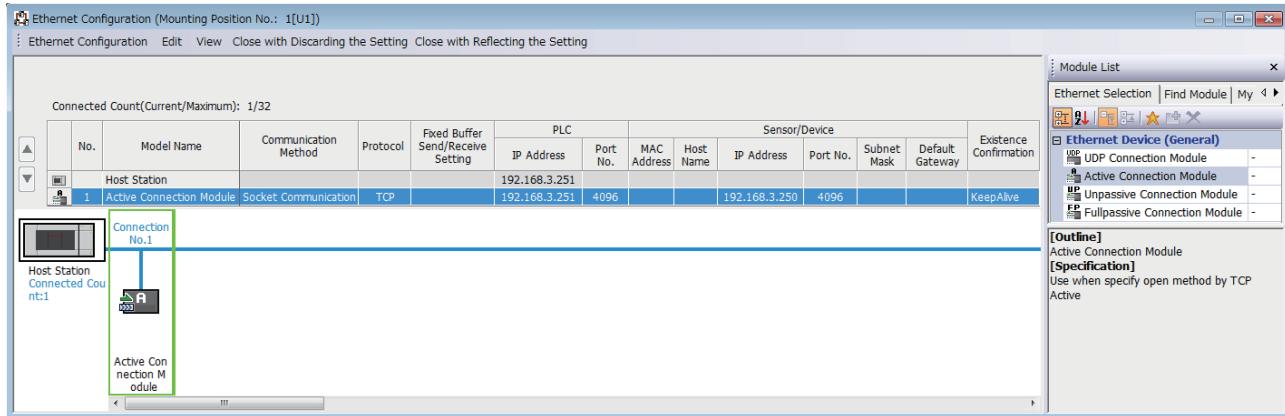

Drag and drop an "Ethernet Device" in the "Module List" to the left side of the screen, and set the following items. The setting items vary depending on the "Ethernet Device" and "Communication Method".


Item	Description		Setting range
No.	Connection number for distinguishing settings for each user connection.		—
Model Name	The name of the external device is displayed.		—
Communication Method	Set the method for communication with the external device.*1		Socket Communication (fixed)
Protocol	Select the communication protocol for the external device.*1		<ul style="list-style-type: none"> • TCP • UDP
Fixed Buffer Send/Receive Setting	Not supported.		—
PLC	IP Address	The IP address of host station (FX5-ENET/IP) is displayed.	
	Port No.	The port no. of host station (FX5-ENET/IP) is displayed.	
Sensor/Device	MAC Address	Not supported.	
	Host Name	Not supported.	
	IP Address	Set the IP address of the external device.	
	Port No.	Set the port no. of the external device.	
	Subnet Mask	Set the subnet mask of the external device.	
	Default Gateway	Set the default gateway of the external device.	
Existence Confirmation	Select the method of alive check which is performed when the Ethernet-equipped module has not communicated with the external device for a certain period of time. When the module cannot communicate with the external device, the connection will be closed.*1		<ul style="list-style-type: none"> • KeepAlive • Do not confirm existence

*1 Automatically set by the "Ethernet Device".

*2 Do not specify 5549 to 5569 because these ports are used by the system.

7.4 Application Settings

Set the following parameters when the functions of the general-purpose Ethernet will be used on FX5-ENET/IP.

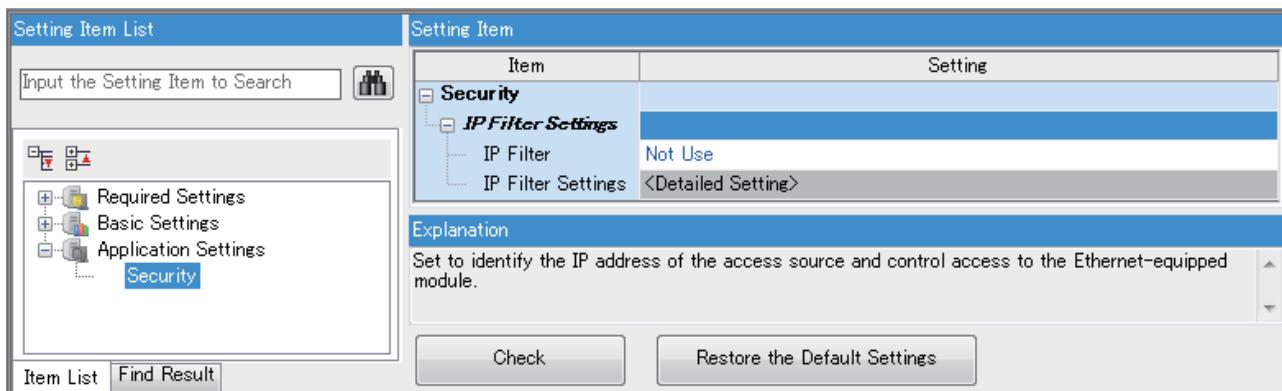

Security


Set the security function.

Item	Description	Setting range
IP Filter Settings	IP Filter	<ul style="list-style-type: none"> Not Use Use (Default: Not Use)
	IP Filter Settings	—

■IP Filter Settings

Set the IP address for which the IP filter function will be used.

→ Double-click <Detailed Setting> of the "IP Filter Settings".

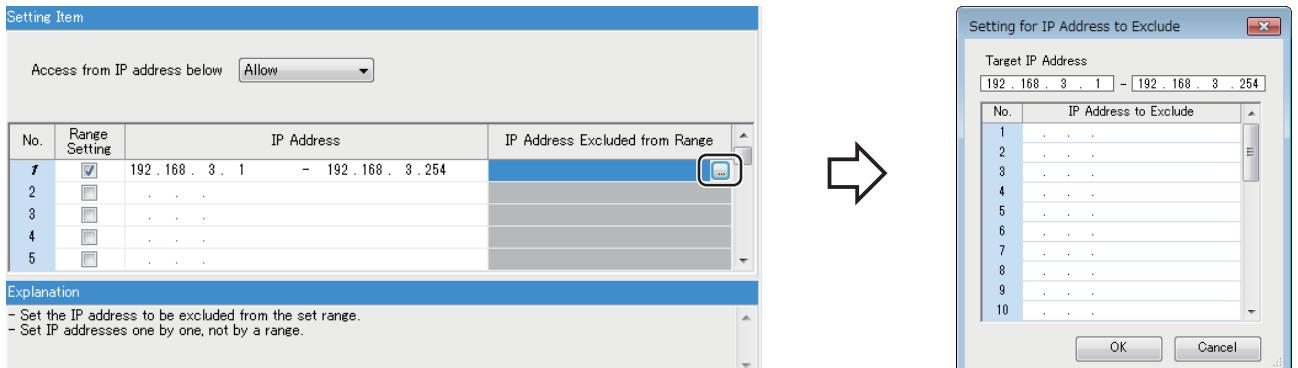

Item	Description	Setting range
Access from IP address below	Select whether to allow or deny the access from the specified IP addresses.	<ul style="list-style-type: none"> Allow Deny (Default: Allow)
Range Setting	Select this item when specifying the IP addresses by range.	—
IP Address	Set the IP address to be allowed or denied. When selecting "Range Setting", enter the start IP address (left field) and end IP address (right field) of the range.	<ul style="list-style-type: none"> Blank 0.0.0.1 to 223.255.255.254 (Default: Blank)
IP Address Excluded from Range	When selecting "Range Setting", set the IP address to be excluded from the set range. Up to 32 IP addresses can be set.	<ul style="list-style-type: none"> Blank 0.0.0.1 to 223.255.255.254 (Default: Blank)

7.5 Setting EtherNet/IP Communications (Starting EtherNet/IP Configuration Tool for FX5-ENET/IP)

Start EtherNet/IP Configuration Tool for FX5-ENET/IP, and then set EtherNet/IP communications.

For details, refer to the following.

☞ Page 55 EtherNet/IP Configuration Tool for FX5-ENET/IP

Point

- Even if the GX Works3 is closed while EtherNet/IP Configuration Tool for FX5-ENET/IP is starting, it can operate independently. Configuration tool operations can continue.
- While EtherNet/IP Configuration Tool for FX5-ENET/IP is running, another EtherNet/IP Configuration Tool for FX5-ENET/IP cannot be started.

7.6 Writing Parameters

The parameters set on the FX5-ENET/IP have different write destinations.

Parameter type	Configuration tool	Write destination
Module parameter	GX Works3	CPU module
EtherNet/IP communication setting	EtherNet/IP Configuration Tool for FX5-ENET/IP	FX5-ENET/IP

For writing parameters to the CPU module, refer to the following.

☞ GX Works3 Operating Manual

This section describes writing procedure to the FX5-ENET/IP.


Operating procedure

- Switch EtherNet/IP Configuration Tool for FX5-ENET/IP to the online state.

☞ [File] ⇒ [Go Online]

- Write the set parameters to the FX5-ENET/IP.

☞ [File] ⇒ [Download]

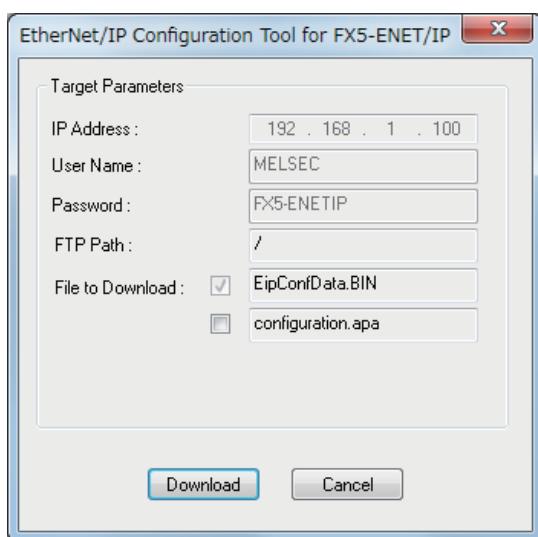

Point

The parameters written to the FX5-ENET/IP with EtherNet/IP Configuration Tool for FX5-ENET/IP are reflected when the following operations are executed.


- The power supply of FX5-ENET/IP (CPU module) is turned off and on.

8 EtherNet/IP Configuration Tool for FX5-ENET/IP

This chapter describes operations of EtherNet/IP Configuration Tool for FX5-ENET/IP.

8.1 Window Structure

The following figure shows the window structure.

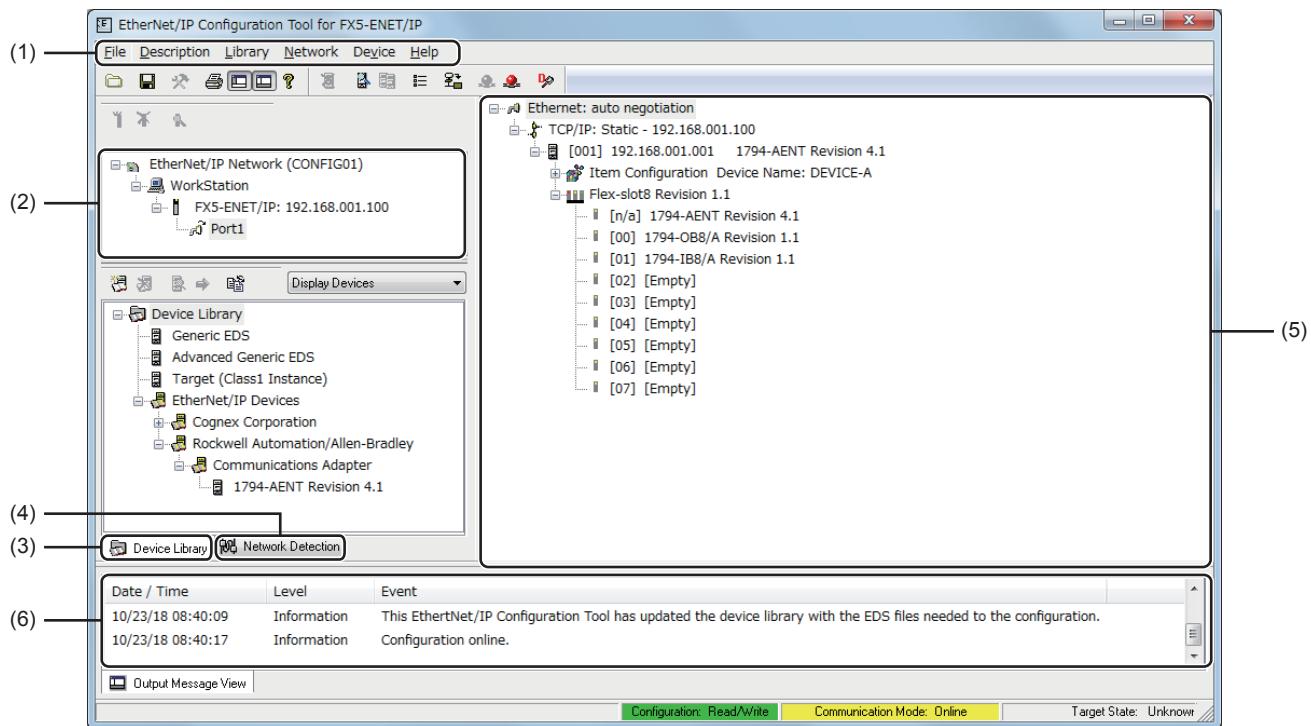

8

No.	Name	Reference
(1)	Menu	Page 56
(2)	EtherNet/IP setting	Page 63
(3)	Device Library	Page 65
(4)	Network Detection	Page 67
(5)	Network configuration setting	Page 73
(6)	Operation information list	Page 97

Menu

The following table lists the menu items of EtherNet/IP Configuration Tool for FX5-ENET/IP.


Item	Description	Reference
File	Saves a project and configures print setting and window structure.	Page 56
Description	Sets the FX5-ENET/IP information.	Page 60
Library	Performs operations such as adding EDS files, displaying EDS file information, and adding EtherNet/IP devices.	Page 60
Network	Performs operations such as detecting EtherNet/IP devices on the network to add them to the network configuration settings and configuring the settings for EtherNet/IP communications.	Page 61
Device	Performs operations such as adding the selected EtherNet/IP device to the network configuration settings, configuring the settings for EtherNet/IP devices, and enabling diagnostic mode.	Page 62
Help	Displays the help or version information of EtherNet/IP Configuration Tool for FX5-ENET/IP.	Page 62

File

Save a project and configure print setting and window structure.

Item	Description
Save	Saves an EtherNet/IP Configuration Tool for FX5-ENET/IP project.
List and Print	Opens the "Preview or Print Listings" window. (☞ Page 57 "Preview or Print Listings" window)
Download	Opens the download window. (☞ Page 57 Download window)
Verify	Opens the structure setting check window. (☞ Page 58 Structure setting check window)
Upload	Opens the upload window. (☞ Page 59 Upload window)
Go Online	Enables online mode.*1
Go Offline	Disables online mode. This mode is disabled by default.
Preferences	Selects a window structure layout and "Advanced Mode". <ul style="list-style-type: none">Clicking "Workspace": Displays or hides the EtherNet/IP settings, "Device Library", and "Network Detection".Clicking "Output Window": Displays or hides the operation information list.Selecting "Advanced Mode": Enables configuration of detailed EtherNet/IP settings in each setting window.
Message View	Performs the following actions on the operation information list. <ul style="list-style-type: none">Copy: Copies the information displayed in the operation information list.Clear: Clears the information displayed in the operation information list.Configuration: Sets the information displayed in the operation information list. (☞ Page 97 "Output Message View Configuration" window)
Exit	Exits EtherNet/IP Configuration Tool for FX5-ENET/IP.


*1 The following dialog appears when the changed project setting is not stored in EtherNet/IP Configuration Tool for FX5-ENET/IP.

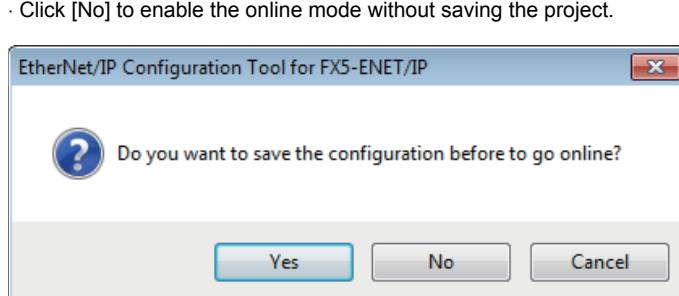

■"Preview or Print Listings" window

Print the information of the current network configuration settings.

☛ [File] ⇒ [List and Print]

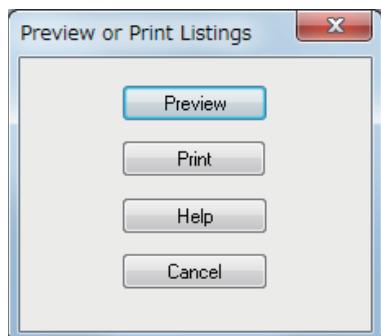


Item	Description
[Preview] button	Displays the information of the network configuration settings in a text file.
[Print] button	Prints the selected information.
[Help] button	Displays the help.
[Cancel] button	Closes the "Preview or Print Listings" window.

■Download window

The information of the current network configuration settings is written to the FX5-ENET/IP.

☛ [File] ⇒ [Download]

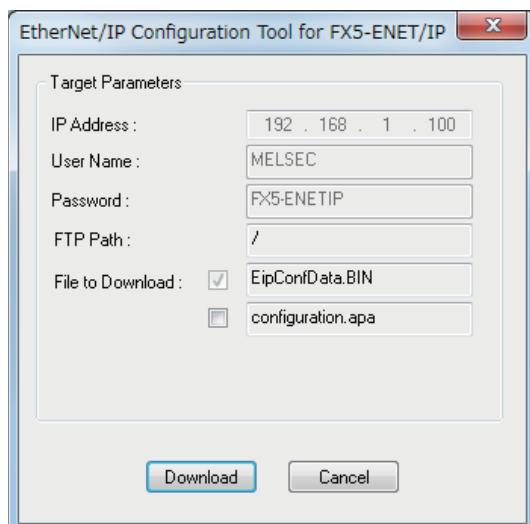

Item	Description	Setting range
IP Address	Displays the IP address of the FX5-ENET/IP.	—
User Name	Displays the name.	— (Fixed to MELSEC.)
Password	Displays the password.	— (Fixed to the FX5-ENET/IP.)
FTP Path	Displays the FTP path.	—
File to Download	When these check boxes are selected, EipConfData.BIN and configuration.apa will be overwritten.*1*2 (The check box for EipConfData.BIN cannot be cleared.)	• Selected • Not selected (Default: Not selected)
[Download] button	Performs writing with the set details. The writing result is displayed in a dialog box.	—
[Cancel] button	Closes the download window.	—


*1 EipConfData.BIN is the data used to manage the information of the network configuration settings.

*2 Configuration.apa is the data containing the IP address of the FX5-ENET/IP set in the EtherNet/IP setting and the EtherNet/IP device configuration and parameter settings set in the network configuration setting.

■Structure setting check window

Verify the information of the network configuration settings saved on the FX5-ENET/IP (EipConfData.BIN) against the information of the network configuration settings of EtherNet/IP Configuration Tool for FX5-ENET/IP (EipConfData.BIN) to check whether they are the same.

 [File] ⇔ [Verify]

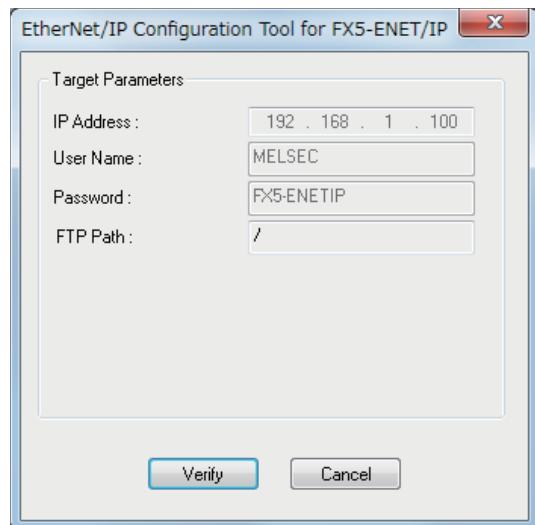


Item	Description	Setting range
IP Address	Displays the IP address of the FX5-ENET/IP.	—
User Name	Displays the name. (Fixed to MELSEC.)	—
Password	Displays the password. (Fixed to the FX5-ENET/IP.)	—
FTP Path	Displays the FTP path.	—
[Verify] button	Performs verification with the set details. The verification result is displayed in a dialog box.	—
[Cancel] button	Closes the structure setting check window.	—

■Upload window

The information of the network configuration settings saved on the FX5-ENET/IP is read.

 [File] ⇒ [Upload]

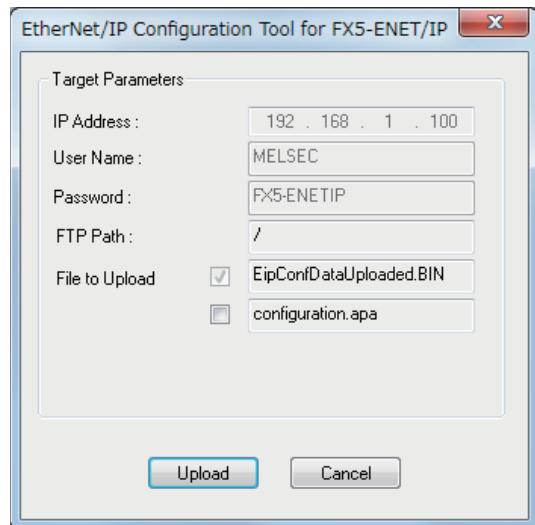

Item	Description	Setting range
IP Address	Displays the IP address of the FX5-ENET/IP.	—
User Name	Displays the name. (Fixed to MELSEC.)	—
Password	Displays the password. (Fixed to the FX5-ENET/IP.)	—
FTP Path	Displays the FTP path.	—
File to Upload	When these check boxes are selected, EipConfDataUploaded.BIN and configuration.apa will be overwritten.*1*2 (The check box for EipConfDataUploaded.BIN cannot be cleared.)	<ul style="list-style-type: none"> Selected Not selected (Default: Not selected)
[Upload] button	Performs reading with the set details. The reading result is displayed in a dialog box.	—
[Cancel] button	Closes the upload window.	—

*1 EipConfDataUploaded.BIN is the data used to manage the information of the network configuration settings.

*2 Configuration.apa is the data containing the IP address of the FX5-ENET/IP set in the EtherNet/IP setting and the EtherNet/IP device configuration and parameter settings set in the network configuration setting.

Description

Set the FX5-ENET/IP information.

Item	Description
Add	Adds the FX5-ENET/IP information. (The FX5-ENET/IP information can be added when the existing information is deleted using "Delete".)*1
Delete	Deletes the FX5-ENET/IP information.*2
Properties	Opens the "Element Properties" window. (Page 63 "Element Properties" window)*2

*1 This action can be performed when WorkStation is selected in the EtherNet/IP setting. ([Page 55 Window Structure](#))

*2 This action can be performed when the FX5-ENET/IP is selected in the EtherNet/IP setting. ([Page 55 Window Structure](#))

Library

Set operations such as adding EDS files, displaying file information, and adding EtherNet/IP devices.

This item can be selected when "Device Library" is displayed.

Item	Description
Add	Opens the EDS Management wizard to add EDS files. (Page 98 Adding the EDS file)
Delete	Deletes selected EtherNet/IP devices from "Device Library".
Sort	Opens the "Sort Device Library" window. (Page 60 "Sort Device Library" window)
Insert in Configuration	Adds the selected EtherNet/IP device to the network configuration settings. (Page 101 Configuring settings offline)
Properties	Displays the EDS file information of the selected EtherNet/IP device. (Page 66 EDS file information)

■"Sort Device Library" window

Select the display order of the EtherNet/IP devices added in "Device Library".

☞ [Library] ⇒ [Sort]



Item	Description
By Manufacturer	Displays EtherNet/IP devices by device manufacturer name.
By Category	Displays EtherNet/IP devices by vendor name.
By File Name	Displays EtherNet/IP devices by EDS file name.
By Device Name	Displays EtherNet/IP devices by name.

Network

Perform operations such as detecting EtherNet/IP devices on the network to add them to the network configuration settings and configuring the settings for EtherNet/IP communications.

This item can be selected when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state and "Network Detection" is displayed. (☞ Page 55 Window Structure)

Item	Description
Choose network adapter	Opens the "Choose Network Adapter" window. (☞ Page 61 "Choose Network Adapter" window)
Read Network Configuration	Scans the network to detect EtherNet/IP devices on the "Network Detection" tab. (☞ Page 67 Detecting the FX5-ENET/IP and EtherNet/IP devices)
Online Action	Opens the "Online Action" window. (☞ Page 69 "Online Action" window)
Insert in Configuration	Adds the selected EtherNet/IP device to the network configuration settings. (☞ Page 101 Configuring settings online)
Insert and Replace All	Deletes all the EtherNet/IP devices set in the network configuration settings and adds all the EtherNet/IP devices detected by "Network Detection".
Properties	Opens the properties of the selected EtherNet/IP device. (☞ Page 68 EtherNet/IP device properties)*1


*1 This action can be performed when an EtherNet/IP device to which a module can be mounted is selected in "Network Detection".
(☞ Page 55 Window Structure)

■"Choose Network Adapter" window

Select the network adapter to use in EtherNet/IP communications from the list of network adapters detected with EtherNet/IP Configuration Tool for FX5-ENET/IP.

When the "Automatic" check box is selected, all the detected network adapters are used in EtherNet/IP communications.

☞ [Network] ⇔ [Choose network adapter]

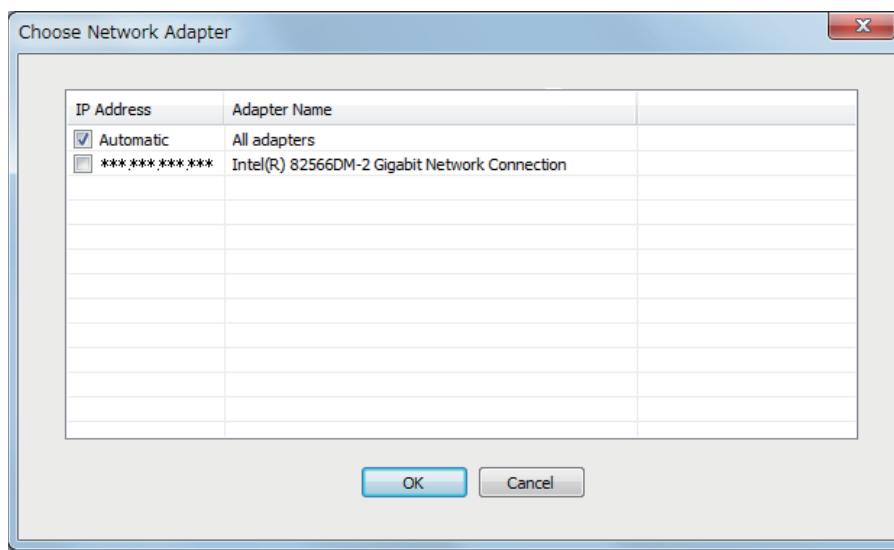

8

Item	Description
IP Address	Displays the IP address of the network adapter.
Adapter Name	Displays the name of the network adapter.

Device

Perform operations such as adding the selected EtherNet/IP device to the network configuration settings, configuring the settings for EtherNet/IP devices, and enabling diagnostic mode.

Item	Description
Duplicate	Adds a copy of the selected EtherNet/IP device to the network configuration settings.*1
Delete	Deletes the selected EtherNet/IP device from the network configuration settings.*1
Add	Adds the modules for EtherNet/IP devices to which modules can be mounted.*2
Collapse/Expand All	Collapses/expands the module tree in the network configuration settings.
Properties	Opens the properties of a selected item as shown below. <ul style="list-style-type: none">When "Ethernet" in the network configuration settings is selected: Page 75 "Channel Properties" windowWhen the EtherNet/IP module display in the network configuration settings is selected: Page 81 IP address management windowWhen the EtherNet/IP display in the network configuration settings is selected: Page 82 EtherNet/IP device setting window (Class1 instance communications)When other item in the network configuration settings is selected: The window corresponding to the selected item is displayed. Displayed content varies depending on the EtherNet/IP device used. Page 67 Display content For names of each display, refer to the following. Page 67 Display content
Diagnostic	Enables diagnostic mode. (Page 116 Network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP)*3
Options	Opens the "Display Option" window. (Page 74 "Display Option" window)

*1 This action can be performed when an EtherNet/IP device is selected in the network configuration settings. ([Page 55 Window Structure](#))

*2 This action can be performed when an EtherNet/IP device to which a module can be mounted is selected in the network configuration settings.

*3 This action can be performed when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state. ([Page 56 File](#))

Help

The help or version information of EtherNet/IP Configuration Tool for FX5-ENET/IP is displayed.

Item	Description
EIT CT Help	Opens the help of EtherNet/IP Configuration Tool for FX5-ENET/IP.
About	Displays the version information of EtherNet/IP Configuration Tool for FX5-ENET/IP. (Page 102 Checking the Software Version)

EtherNet/IP setting


EtherNet/IP setting displays the project information of the FX5-ENET/IP set with EtherNet/IP Configuration Tool for FX5-ENET/IP.

"Element Properties" window

Set the IP address of the FX5-ENET/IP.

Set the same IP address as that set in "Basic Setting" in the GX Works3.


☞ Select "FX5-ENET/IP" in the EtherNet/IP setting ⇒ [Description] ⇒ [Properties]

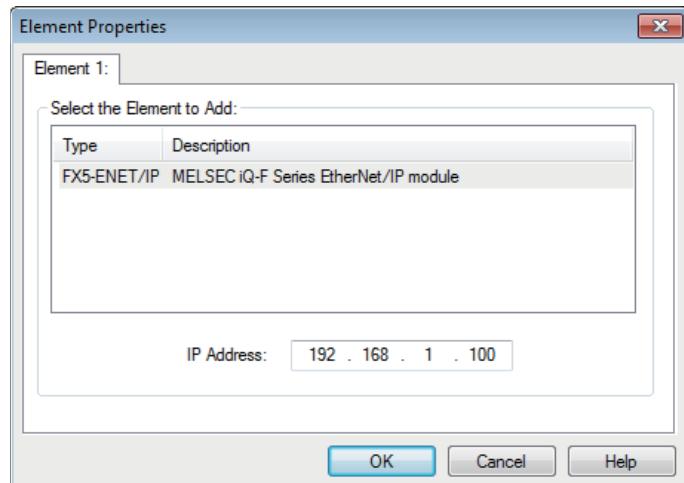

"Configuration Manager" window

Manage the project of EtherNet/IP Configuration Tool for FX5-ENET/IP.

Right-click "Ethernet/IP Network" in the EtherNet/IP setting \Rightarrow [Configuration Manager]

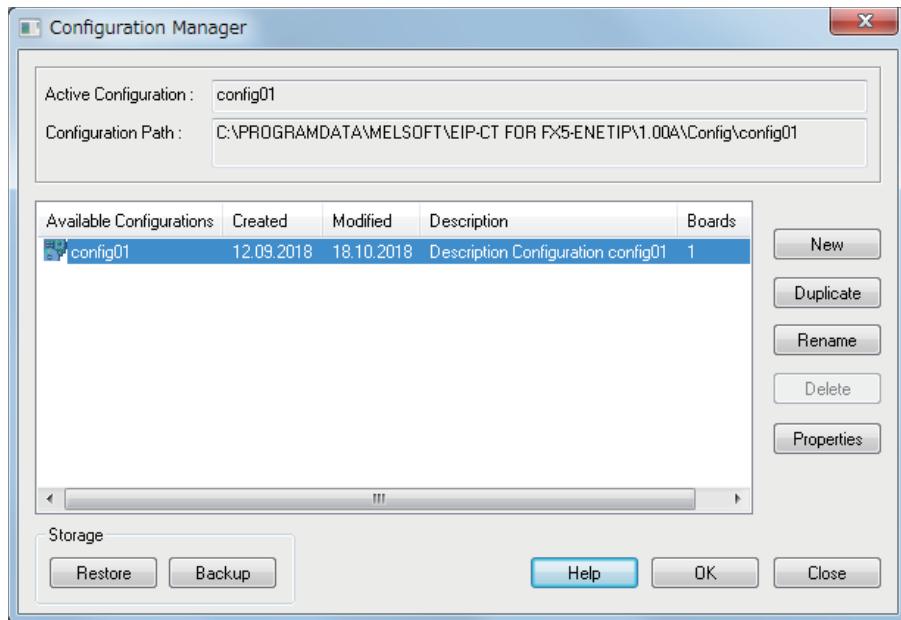

Item	Description
Active Configuration	Displays the name of the currently active project.
Configuration Path	Displays the storage location of the currently active project file.
[New] button	Creates a new project.
[Duplicate] button	Creates a new project from the copy of the selected project.
[Rename] button	Changes the name of the selected project.
[Delete] button	Deletes the selected project.
[Properties] button	Displays the property of the selected project.
[Restore] button	Restores the backup copy of the specified project file.
[Backup] button	Stores the backup copy of the selected project.

Device Library


"Device Library" lists the EtherNet/IP devices added in EtherNet/IP Configuration Tool for FX5-ENET/IP.

The EtherNet/IP devices added to "Device Library" can be added to the network configuration settings.

When EtherNet/IP device information is displayed at execution of Network Detection, the information of the EtherNet/IP devices added to "Device Library" is used.

To add EtherNet/IP devices to "Device Library", add EDS files provided by manufacturers of the EtherNet/IP devices in EtherNet/IP Configuration Tool for FX5-ENET/IP. For details, refer to the following.

☞ Page 98 Adding the EDS file

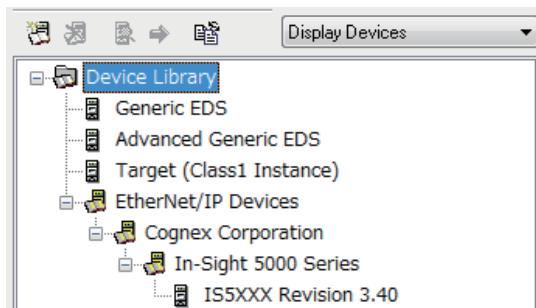

Perform the action related to "Device Library" when it is set offline. For the operating procedure, refer to the following.

☞ Page 101 Configuring settings offline

Display options


The list of display options in the upper-right corner of the "Device Library" can be used to switch its display.

Item	Description
Display Devices	Displays the EtherNet/IP devices not configured by modules.
Display Modules and Chassis	Displays the EtherNet/IP devices configured by modules.
Display all Nodes	Displays all the EtherNet/IP devices.

EDS file information

The EDS file information of the EtherNet/IP device is displayed.

>Select the EtherNet/IP device in "Device Library" \Rightarrow [Library] \Rightarrow [Properties]

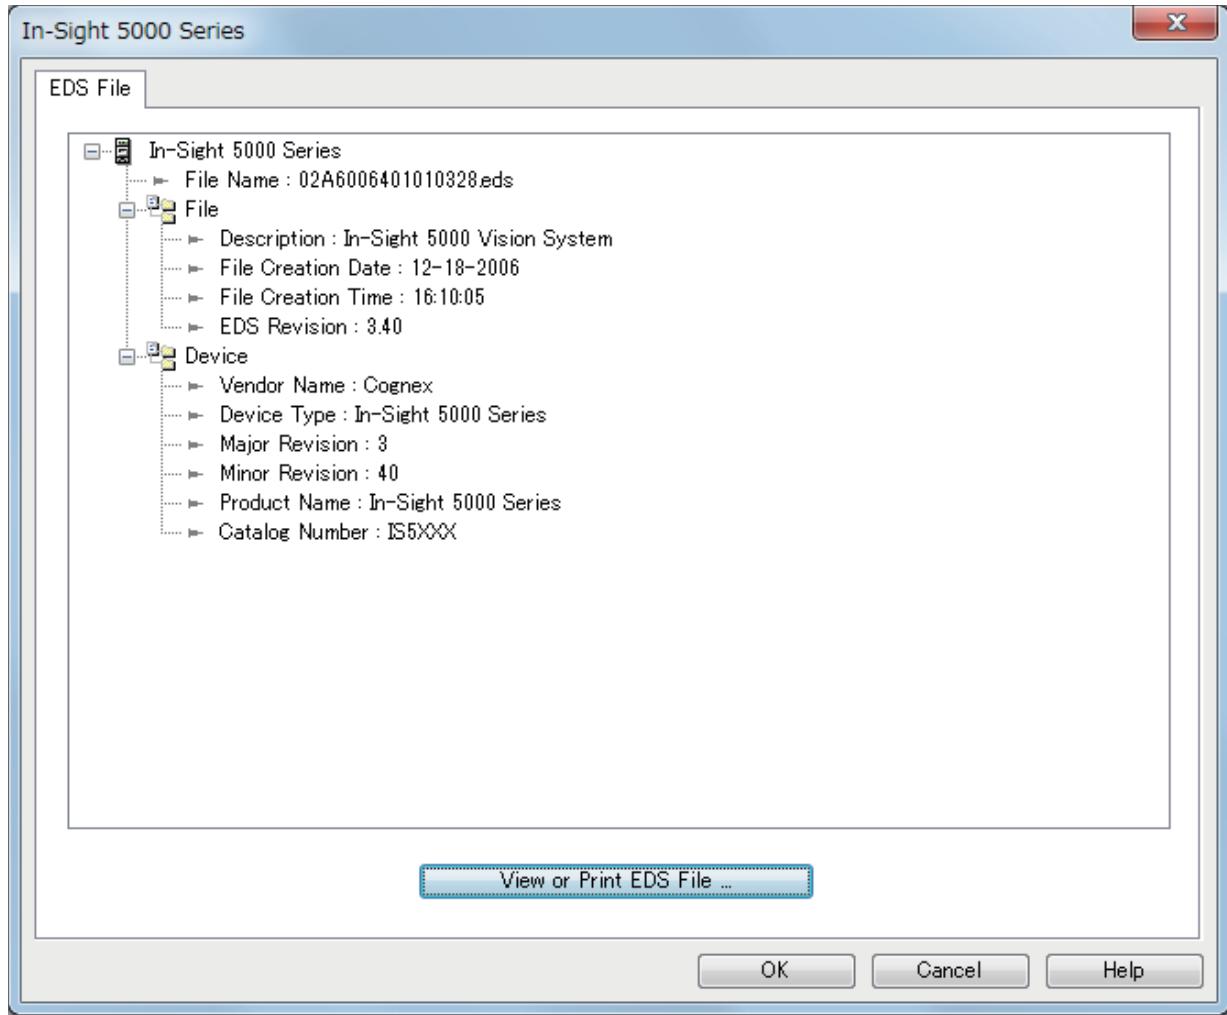

Item	Description
[View or Print EDS File] button	Displays EDS file information in the text format.


Network Detection

"Network Detection" detects EtherNet/IP devices on the network and configures EtherNet/IP communication settings online.

Detecting the FX5-ENET/IP and EtherNet/IP devices

Scan the network to detect the FX5-ENET/IP and EtherNet/IP devices on the "Network Detection" tab.

- Select the [Network Detection] tab ^{*1} ⇒ [Network] ⇒ [Read Network Configuration]

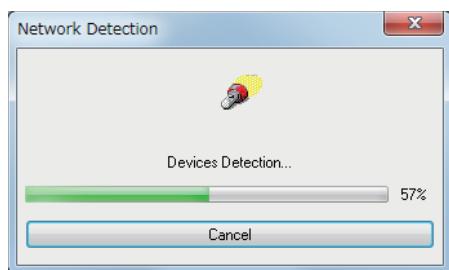


*1 For the [Network Detection] tab, refer to the following.

☞ Page 55 Window Structure

Display content

The "Network Detection" content is displayed.

"Network Detection" displays the FX5-ENET/IP and EtherNet/IP devices.

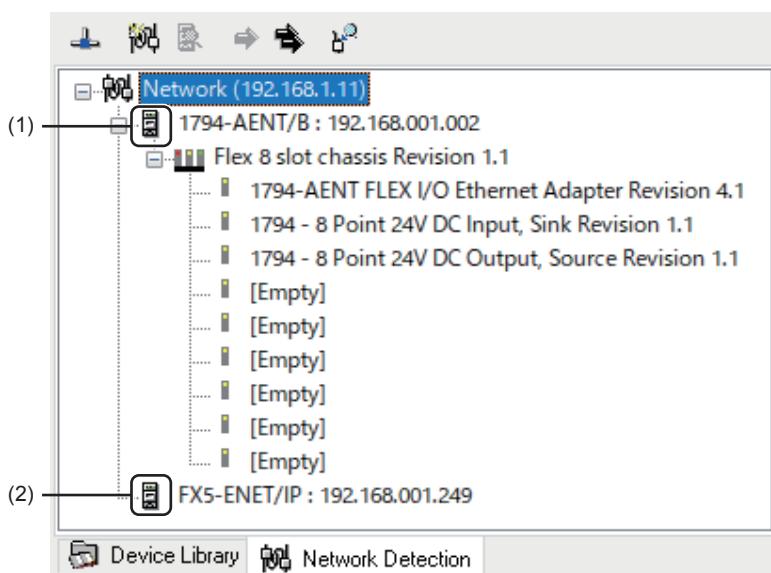

8

(1) Indicates that the EDS file for the detected FX5-ENET/IP or EtherNet/IP device is added in "Device Library".

(2) Indicates that the EDS file for the detected FX5-ENET/IP or EtherNet/IP device is not added in "Device Library".

When detecting EtherNet/IP devices on the network, note the following points.

- The FX5-ENET/IP and EtherNet/IP devices must be connected to the network.
- An IP address has been set to the EtherNet/IP device, and the IP address does not duplicate the IP addresses of other EtherNet/IP devices. ^{*1}
- The EDS file of each EtherNet/IP device has been added to "Device Library". (The EtherNet/IP communication settings are based on the EDS files or Generic EDS.) ^{*2}

*1 The EtherNet/IP device IP address can be set in the "Online Action" window. (☞ Page 69 "Online Action" window)

*2 EDS files can be added in the "EDS Management" window. (☞ Page 98 Adding the EDS file)



Perform the action related to "Network Detection" when it is set online. For the operating procedure, refer to the following.

☞ Page 101 Configuring settings online

EtherNet/IP device properties


The properties of an EtherNet/IP device in "Network Detection" is displayed.

Select the EtherNet/IP device module in "Network Detection".⇒[Network]⇒[Properties]

Point

This window shows properties of an EtherNet/IP device to which a module can be mounted.

No properties are displayed for EtherNet/IP devices to which a module cannot be mounted.

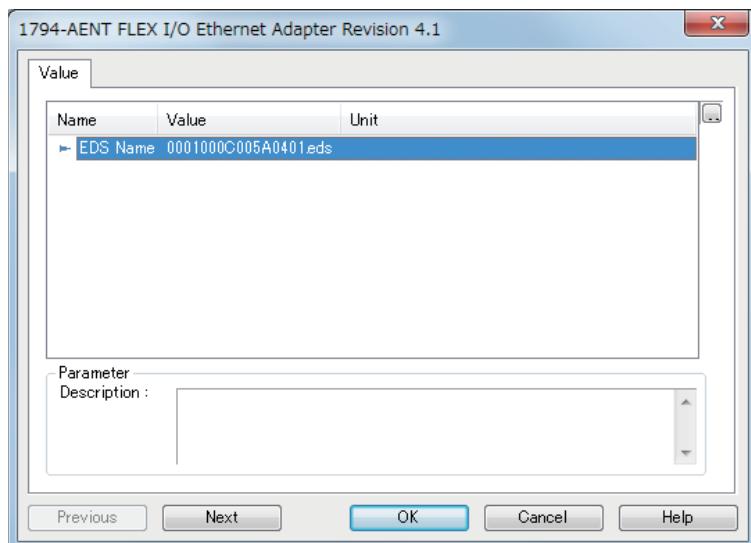

Item	Description
EDS Name	Displays the EDS file name of the EtherNet/IP device.
Description	Displays the description of the selected item.

"Online Action" window

The "Online Action" window is used to perform Class3 message communications and UCMM message communications.


Items in this window can be used when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state.

( Page 56 File)

 Select the [Network Detection] tab ⇒ [Network] ⇒ [Online Action]

■[Explicit Message] tab

Use this tab when performing message communications with an EtherNet/IP device.

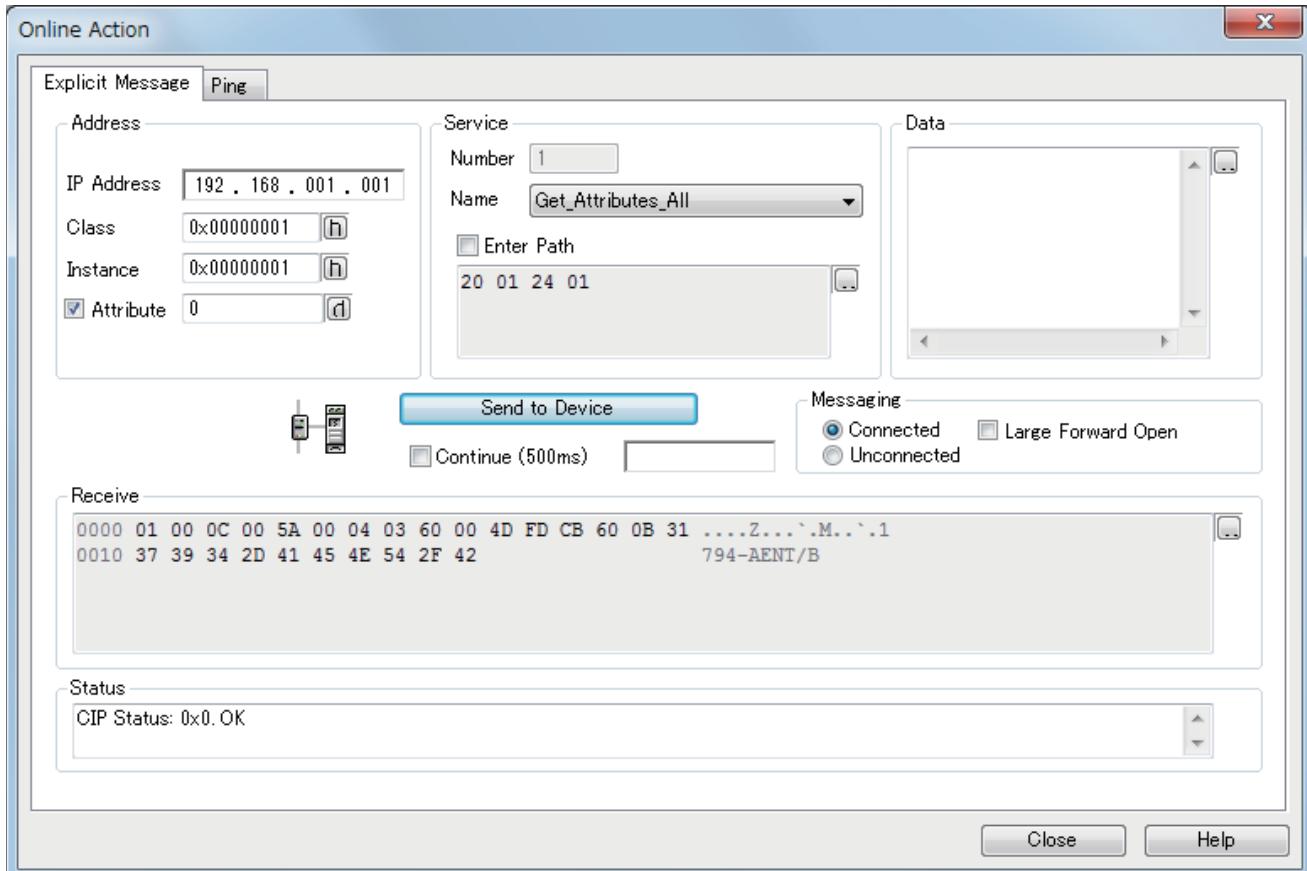

Item	Description	Setting range
Address	IP Address	Specifies the IP address of the EtherNet/IP device to perform Class3 communications and UCMM communications with. The valid range of IP address is 0.0.0.1 to 223.255.255.254.
	Class	Specifies the class ID for performing message communications.
	Instance	Specifies the instance ID for performing message communications.
	Attribute	Specifies the attribute ID for performing message communications.
Service	Number	Specifies the service value for performing message communications. This item cannot be entered if a value other than "Customer Service" is specified for "Name".
	Name	Specifies the service for performing message communications. To specify the service that is not displayed in this item, specify "Customer Service", and specify a value for "Number". Although there are other setting items than those described to the right, they are not supported on the FX5-ENET/IP.*1
	Enter Path*2	When this check box is selected, the following items can be input. <ul style="list-style-type: none">• Identifier of CIP object• Instance• Attribute of instance
Data	Enters the data to send to the EtherNet/IP device.	—

Item	Description	Setting range
[Send to Device] button	Starts Class3 communications and UCMM communications.	—
Continue (500ms)	When this check box is selected, Class3 communications and UCMM communications will be executed repeatedly at intervals of 500 ms.	<ul style="list-style-type: none"> • Selected • Not selected (Default: Not selected)
Messaging	Selects the communication method. <ul style="list-style-type: none"> • Connected: Class3 communications • Unconnected: UCMM communications When selecting "Connected", select whether to use "Large Forward Open". <ul style="list-style-type: none"> • Selected: Performs Class3 communications using Large Forward Open.*³ • Not selected: Performs Class3 communications using Forward Open.*⁴ 	<ul style="list-style-type: none"> • Connected • Unconnected (Default: Unconnected)
Receive	Displays the response data from the EtherNet/IP device. The response data is the data excluding the first four bytes including the CIP service code and the status code.* ⁵	—
Status	Displays the communication result. For details, refer to the manuals of the EtherNet/IP device.	—

*1 To perform message communications with products other than the FX5-ENET/IP, refer to the manual of the product used.

*2 This item is displayed when "Advanced Mode" is selected. ( Page 56 File)

*3 Large Forward Open is used when the size of data to be sent/received is 512 bytes or more.


*4 Forward Open is used when the size of data to be sent/received is 511 bytes or less.

*5 Due to the restrictions of EtherNet/IP Configuration Tool for FX5-ENET/IP, when the response data exceeds 1410 bytes, the response data is not displayed and "Status = 58 (0x3A), Status EtherNet/IP = 0 (0x0)" is displayed in "Status".

■[Port Configuration] tab

Read and write the connection status of the EtherNet/IP device.


This tab can be used when the "Online Action" window is displayed with an EtherNet/IP device selected.

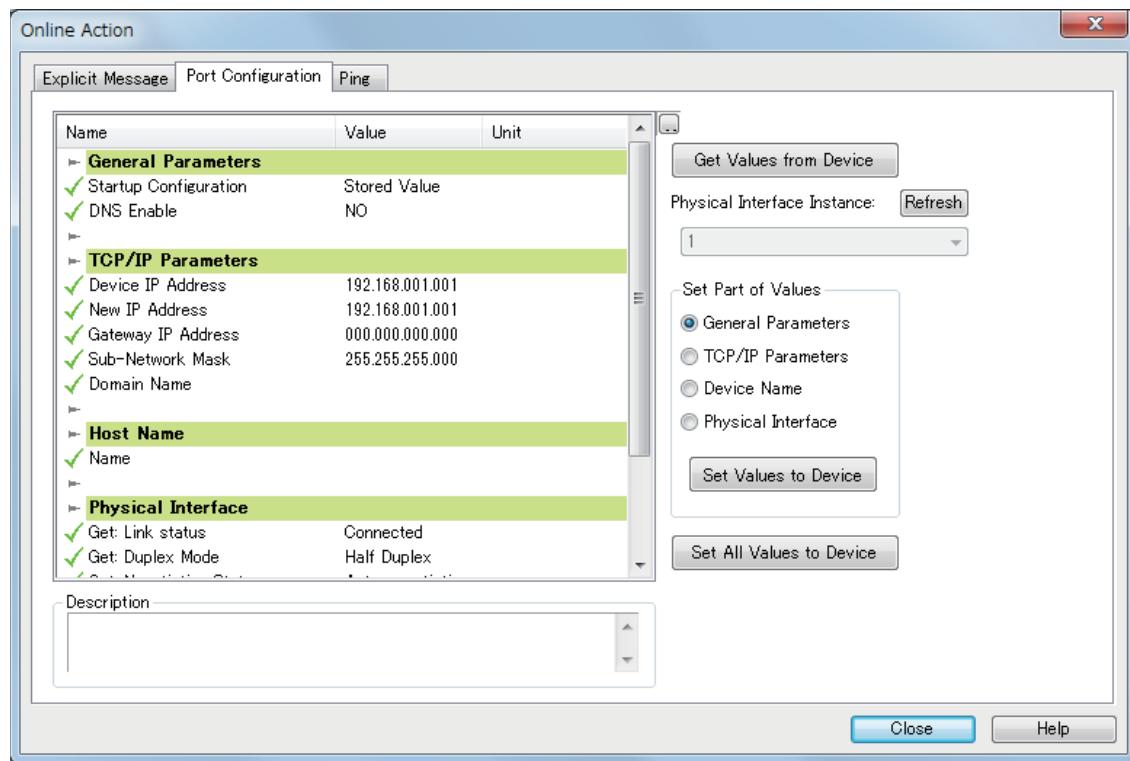

Item	Description
[Get Values from Device] button	Reads and displays the connection status of the EtherNet/IP device.
Physical Interface Instance	Specifies the port number from the list when the EtherNet/IP device is configured with multiple ports.
[Refresh] button	Updates the port number of the "Physical Interface Instance".
Set Part of Values	Selects the items of the values to write to the EtherNet/IP device from the following. <ul style="list-style-type: none"> General Parameters: Basic parameter settings TCP/IP Parameters: TCP/IP parameter settings Device Name: Device name settings Physical Interface: Physical interface settings
[Set Values to Device] button	Writes the values of the items selected with "Set Part of Values" to the EtherNet/IP device.
[Set All Values to Device] button	Writes all the values of the displayed connection status to the EtherNet/IP device.
Description	Displays the description of the selected item.
[Set Chassis Size in the Device] button	Sets the number of modules to be mounted to the slice-type EtherNet/IP device. Writing the specified number of modules enables error detection when the specified number is different from that of the actual system or when an error occurs on the module.

■[Ping] tab

Check for the existence of the EtherNet/IP device with the specified IP address over EtherNet/IP.

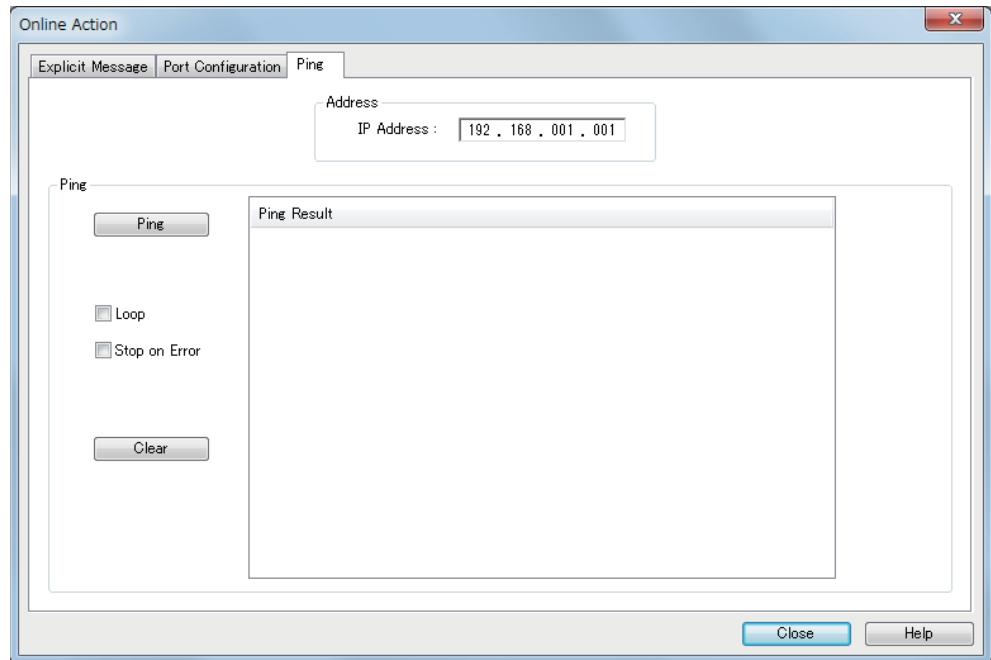


Item	Description		Setting range
Address	IP Address	Specifies the IP address of the EtherNet/IP device to ping.	0.0.0.0 to 255.255.255.255 (Default: Current IP address of the EtherNet/IP device)
Ping	[Ping] button	Pings the specified EtherNet/IP device.	—
	Loop	Select this check box to repeatedly ping the device once every 100 ms.	<ul style="list-style-type: none"> Selected Not selected (Default: Not selected)
	Stop on Error	Sets whether to interrupt pinging if an error occurs when the "Loop" check box is selected. <ul style="list-style-type: none"> Selected: Pinging will be interrupted if an error occurs. Not selected: Pinging will continue even if an error occurs. 	<ul style="list-style-type: none"> Selected Not selected (Default: Not selected)
	[Clear] button	Deletes the content of "Ping Result".	—
	Ping Result	Displays the result of pinging.	—

Network configuration settings

Network configuration settings are used for check the EtherNet/IP device settings and the connection status.

Display content

The network configuration settings is displayed.

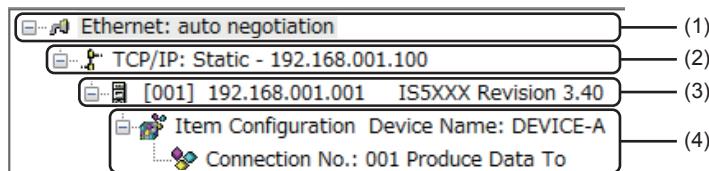

No.	Display area	Display example	Display description
(1)	Ethernet	Ethernet: auto negotiation	— (Fixed to the display shown on the left)
(2)	EtherNet/IP module display	TCP/IP: Static - 192.168.001.100 ①	① IP address of the FX5-ENET/IP
(3)	EtherNet/IP device display	① ② ③ [001] 192.168.001.001 IS5XXX Revision 3.40	① Device number of the EtherNet/IP device*1 ② IP address of the EtherNet/IP device ③ Product name of the EtherNet/IP device
(4)	Item display	Item Configuration Device Name: DEVICE-A ① Connection No.: 001 Produce Data To ②	① Name of the EtherNet/IP device*2 ② Connection number*3

*1 The device number is used to manage the EtherNet/IP device in EtherNet/IP Configuration Tool for FX5-ENET/IP.


*2 The name set for "Device Name" in the [General] tab in the EtherNet/IP device setting window is used.

*3 When buffer memory areas are used and their bits need to be specified for each connection, the connection number is used to distinguish each connection.

"Display Option" window

The display of the network configuration settings can be changed.

→ [Device] → [Options]

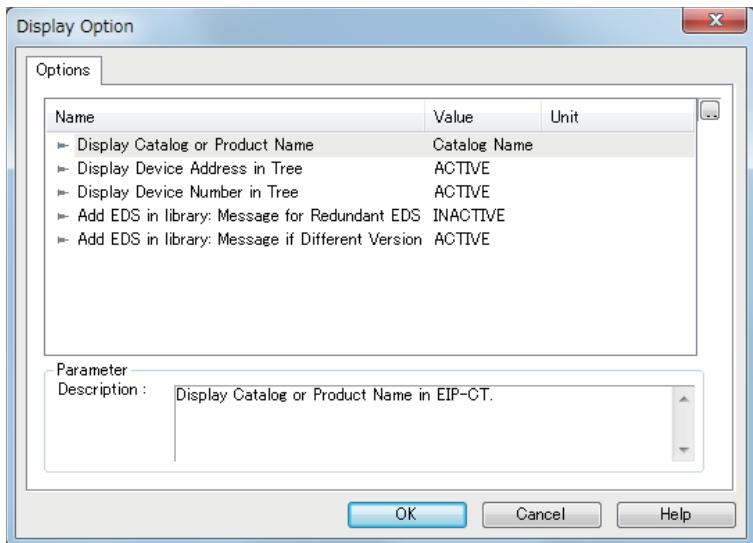

Item	Description	Setting range
Display Catalog or Product Name	Changes the display method according to the EtherNet/IP device product name. Select the "Catalog Name" or "Product Name" set with the EDS file.	• Product Name • Catalog Name (Default: Catalog Name)
Display Device Address in Tree	Displays the IP address of each EtherNet/IP device in the navigation tree of the network configuration settings when "ACTIVE" is selected.	• ACTIVE • INACTIVE (Default: ACTIVE)
Display Device Number in Tree	Displays the device number in the navigation tree of the network configuration settings when "ACTIVE" is selected.	• ACTIVE • INACTIVE (Default: ACTIVE)
Add EDS in library: Message for Redundant EDS	Displays a message when an EDS file is added and the same EDS file exists when "ACTIVE" is selected. When "INACTIVE" is selected, the message is not displayed.	• ACTIVE • INACTIVE (Default: ACTIVE)
Add EDS in library: Message if Different Version	Displays a message when an EDS file is added and the same EDS file with a different version exists when "ACTIVE" is selected. When "INACTIVE" is selected, the message is not displayed.	• ACTIVE • INACTIVE (Default: ACTIVE)
Parameter Description	Displays the description of the selected item.	—

"Channel Properties" window

The information of the EtherNet/IP devices set in the network configuration settings is displayed.


☛ Select "Ethernet" in the network configuration settings*1 ⇒ [Device] ⇒ [Properties]

*1 For names of each display, refer to the following.

☛ Page 73 Display content

■[General] tab

The basic information related to the communications of the FX5-ENET/IP is displayed.

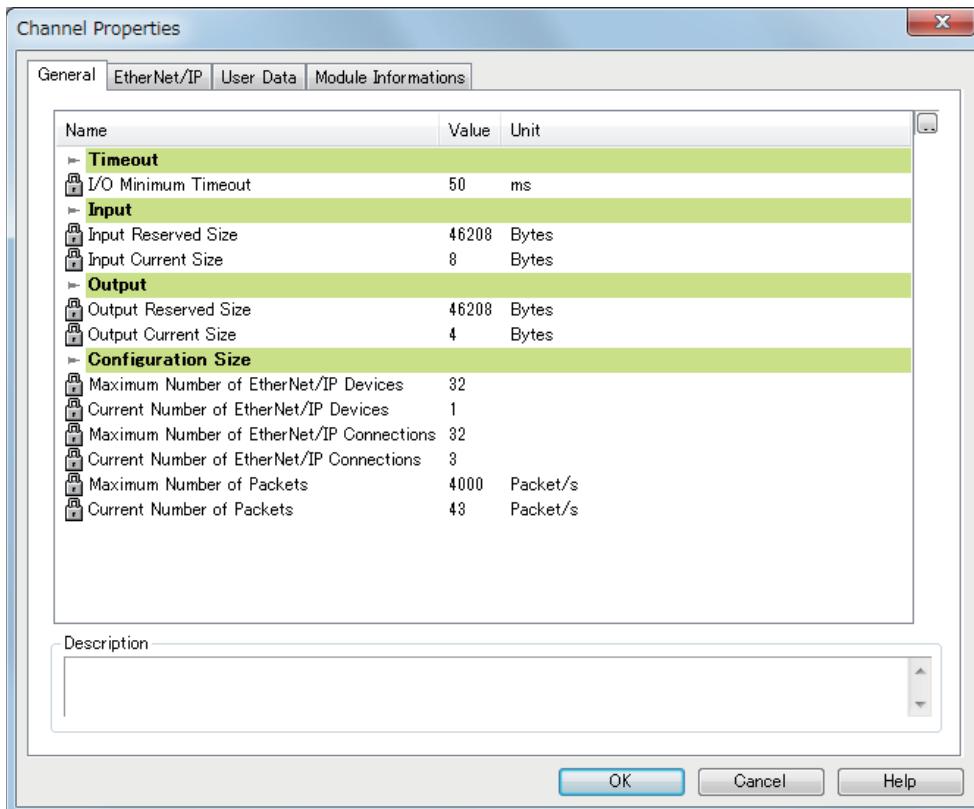


Item		Description
Timeout	I/O Minimum Timeout	Displays the minimum timeout time that can be set for EtherNet/IP communications. (Unit: ms)
Input	Input Reserved Size	Displays the maximum size of the input data. (Unit: Bytes)
	Input Current Size	Displays the total size of the currently set input data. (Unit: Bytes)
Output	Output Reserved Size	Displays the maximum size of the output data. (Unit: Bytes)
	Output Current Size	Displays the total size of the currently set output data. (Unit: Bytes)
Configuration Size	Maximum Number of EtherNet/IP Devices	Displays the number of EtherNet/IP devices that can be connected to the FX5-ENET/IP.
	Current Number of EtherNet/IP Devices	Displays the number of currently set EtherNet/IP devices.
	Maximum Number of EtherNet/IP Connections	Displays the maximum number of FX5-ENET/IP connections.
	Current Number of EtherNet/IP Connections	Displays the number of currently set connections.
	Maximum Number of Packets	Displays the maximum value of communication processing performance (PPS) of the FX5-ENET/IP. (Unit: Packet/s)
	Current Number of Packets	Displays the communication processing performance (PPS) in the current settings. (Unit: Packet/s)
Description		Displays the description of the selected item.

■[EtherNet/IP] tab

Configure settings related to the connection between the FX5-ENET/IP and the EtherNet/IP device.

The [EtherNet/IP] tab can be set when "Advanced Mode" is selected. ([Page 56 File](#))

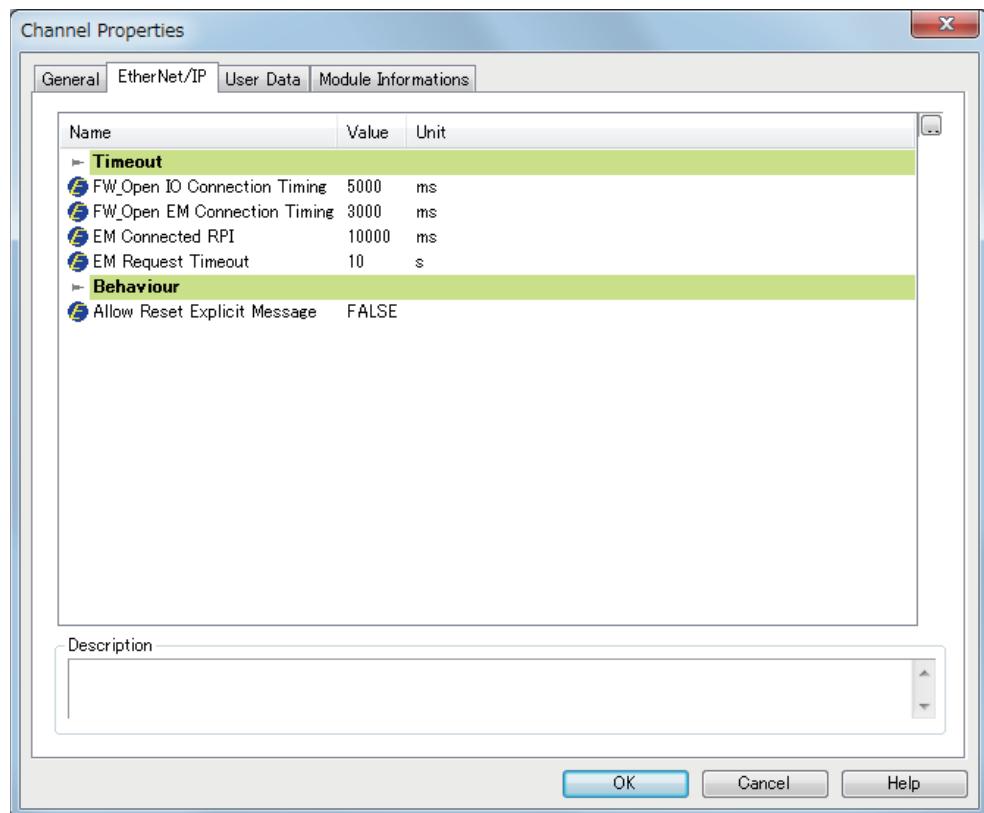

Item	Description		Setting range
Timeout	FW_Open IO Connection Timing	Sets the response waiting time for the connection open request sent from the FX5-ENET/IP to the EtherNet/IP device during Class1 communications. (Unit: ms)	5000 to 8335840 (Default: 5000)
	FW_Open EM Connection Timing	Sets the response waiting time for the connection open request sent from the FX5-ENET/IP to the EtherNet/IP device during Class3 communications. (Unit: ms)	3000 to 8335840 (Default: 3000)
	EM Connected RPI	Sets the communication cycle (RPI) for Class3 communications. (Unit: ms)	0 to 4294967 (Default: 1000)
	EM Request Timeout	Sets the response waiting time for Class3 communications. (Unit: s)	0 to 65535 (Default: 10)
Behaviour	Allow Reset Explicit Message	Sets the behavior of the FX5-ENET/IP when it receives a reset request message. • FALSE: Reset. • TRUE: Do not reset.	• FALSE • TRUE (Default: FALSE)
Description		Displays the description of the selected item.	—


■[User Data] tab

This tab is not supported in the FX5-ENET/IP.

■[Module Informations] tab

The parameters of the FX5-ENET/IP is displayed.

The [Module Informations] tab can be checked when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state. (☞ Page 56 File)

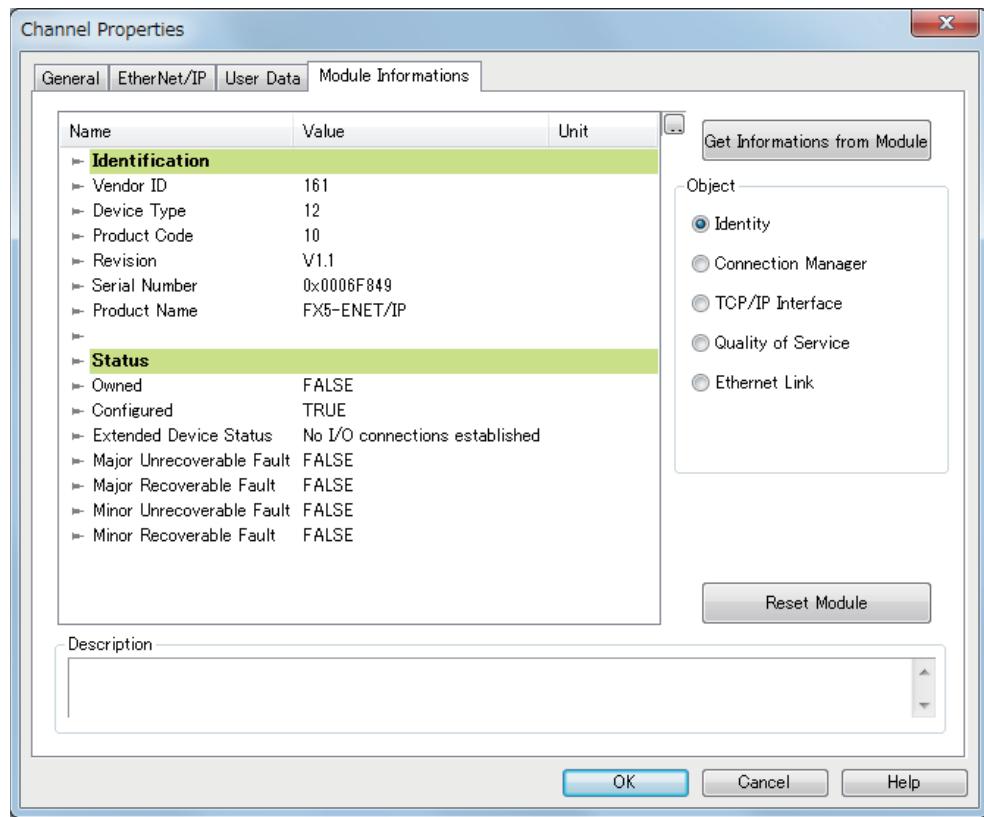

Item	Description
[Get Informations from Module] button	Updates the displayed parameters of the FX5-ENET/IP.
Object ^{*1}	Selects the parameter type of the FX5-ENET/IP. <ul style="list-style-type: none"> • Identity: General device information • Connection Manager: Information about connection • TCP/IP Interface: Information about TCP/IP network interface • Quality of Service: Information about communication quality • Ethernet Link: Information about link-specific counter and IEEE802.3 communication interface status
[Reset Module] button	Resets the displayed parameters of the FX5-ENET/IP.
Description	Displays the description of the selected item.

*1 This item is displayed when "Advanced Mode" is selected. (☞ Page 56 File)

- When "Identity" is selected for "Object"

Item	Description	
Identification	Vendor ID	Displays the vendor code of the FX5-ENET/IP. (Fixed to 161.)
	Device Type	Displays the module type of the FX5-ENET/IP. (Fixed to 12.)
	Product Code	Displays the product code of the FX5-ENET/IP. (Fixed to 10.)
	Revision	Displays the version of the FX5-ENET/IP.
	Serial Number	Displays the serial number of the FX5-ENET/IP.
	Product Name	Displays the product name of the FX5-ENET/IP. (Fixed to the FX5-ENET/IP.)
Status	Owned	<p>Displays the connection status between the FX5-ENET/IP and the EtherNet/IP device (adapter and scanner).*1</p> <ul style="list-style-type: none"> • TRUE: The adapter and scanner are connected. • FALSE: The adapter and scanner are not connected.
	Configured	<p>Displays whether the settings of the FX5-ENET/IP were configured with EtherNet/IP Configuration Tool for FX5-ENET/IP. (Excluding TCP/IP-related settings)</p> <ul style="list-style-type: none"> • TRUE: Settings have been configured. • FALSE: Settings have not been configured. (Operations are being performed with the default settings.)
	Extended Device Status	<p>Displays the operation mode of the FX5-ENET/IP.*1</p> <ul style="list-style-type: none"> • At least one faulted I/O connection: Error occurring on one or more connection • No I/O connections established: No connections established • Major Fault: Major Recoverable Fault or Major Unrecoverable Fault occurring • At least one I/O connection in run mode: One or more connection performing normal communication in RUN mode • At least one I/O connection established, all in idle mode: One or more connection all performing communication in IDLE mode
	Major Unrecoverable Fault	<p>Displays the main major error status of the FX5-ENET/IP. (Unrecoverable error)</p> <ul style="list-style-type: none"> • TRUE: Major error occurring • FALSE: Major error not occurring
	Major Recoverable Fault	<p>Displays the main moderate error and minor error status of the FX5-ENET/IP. (Recoverable error)</p> <ul style="list-style-type: none"> • TRUE: Moderate error or minor error occurring • FALSE: Moderate error or minor error not occurring
	Minor Unrecoverable Fault	<p>Displays the major error status of the FX5-ENET/IP. (Unrecoverable error)</p> <ul style="list-style-type: none"> • FALSE: Major error not occurring (fixed)
	Minor Recoverable Fault	<p>Displays the moderate error and minor error status of the FX5-ENET/IP. (Recoverable error)</p> <ul style="list-style-type: none"> • TRUE: Moderate error or minor error occurring • FALSE: Moderate error or minor error not occurring

*1 The word "connection" described below refers to the "Exclusive Owner" connection. (The bit is not changed by an Input Only or Listen Only connection.)

- When "Connection Manager" is selected for "Object"

Item	Description	
Open Counters	Open Requests	Displays the number of open requests received from the connected EtherNet/IP device.
	Format Rejects	Among the open requests received by the FX5-ENET/IP, displays the number of rejected open requests due to message format errors.
	Resource Rejects	Among the open requests received by the FX5-ENET/IP, displays the number of rejected open requests due to insufficient resources.
	Other Rejects	Among the open requests received by the FX5-ENET/IP, displays the number of rejected open requests due to reasons other than message format errors and insufficient resources.
Close Counters	Close Requests	Displays the number of close requests received from the connected EtherNet/IP device.
	Format Rejects	Among the close requests received by the FX5-ENET/IP, displays the number of rejected close requests due to message format errors.
	Other Rejects	Among the close requests received by the FX5-ENET/IP, displays the number of rejected close requests due to reasons other than message format errors.
Others Counters	Connection Timeouts	Displays the number of timeouts that occurred in connections with EtherNet/IP devices.
	Number of Connection	Not supported in the FX5-ENET/IP.

- When "TCP/IP Interface" is selected for "Object"

Item	Description
Status	Displays the presence of settings related to TCP/IP. <ul style="list-style-type: none"> 0: No settings present. 2: Settings present.
Configuration Capability	Displays the settings related to services. <ul style="list-style-type: none"> Configuration Settable (fixed)
Startup Configuration	Displays the reference for settings related to TCP/IP on startup.
DNS Enable	Displays whether a DNS server is used. <ul style="list-style-type: none"> NO (fixed)
Path to physical Link Object	Displays the path to the physical layer link object.
IP Address	Displays the IP address of the FX5-ENET/IP.
Network Mask	Displays the subnet mask of the FX5-ENET/IP.
Gateway Address	Displays the default gateway of the FX5-ENET/IP.
Primary Name Server Address	Displays the primary DNS server of the FX5-ENET/IP.
Domain Name	Not supported in the FX5-ENET/IP.
Host Name	Not supported in the FX5-ENET/IP.
Safety Network Number	Displays the safety network number.
TTL Value	Displays the TTL (Time-to-Live) value.
Multicast Address Allocation Control	Displays the multicast address allocation method. <ul style="list-style-type: none"> 0: Multicast address is allocated with the default algorithm. 1: Allocation is calculated according to "Number of IP Multicast Addresses Allocated" and "Starting Multicast IP Address".
Number of IP Multicast Addresses Allocated	Displays the number of multicast address to be allocated.
Starting Multicast IP Address	Displays the start address for the multicast addresses to be allocated.

- When "Quality of Service" is selected for "Object"

Item	Description
802.1Q frame Enable	Not supported in the FX5-ENET/IP.
DSCP PTP Event	
DSCP PTP General	
DSCP Urgent	
DSCP Scheduled	
DSCP High	
DSCP Low	
DSCP Explicit	

- When "Ethernet Link" is selected for "Object"

Item	Description	
General	Interface Speed	Displays the communication speed of EtherNet/IP communications.
	Link Status	Displays the link status of EtherNet/IP communications.
	Duplex Mode	Displays the communication method (full-duplex/half-duplex) of EtherNet/IP communications.
	Negotiation Status	<p>Displays the auto-negotiation status.</p> <ul style="list-style-type: none"> 0: Auto-negotiation being executed. 1: Auto-negotiation failed and operation in progress with the default communication speed and method. 2: Communication method detection failed, but communication speed detection succeeded. Operation in progress with the default communication method. 3: Auto-negotiation completed successfully. 4: Auto-negotiation unexecuted.
	Manual Setting Requires Reset	<p>Displays the reflection method when communication settings are changed.</p> <ul style="list-style-type: none"> 0: Immediate reflection after the change 1: Reflection after the reset of the FX5-ENET/IP
	Local Hardware Fault	Displays the hardware failure status.
	Physical Address	Displays the MAC address of the FX5-ENET/IP.
	802.3 Link Auto-negotiate	Displays whether auto-negotiation is enabled or disabled.
	Forced Duplex Mode	Displays the default communication method set when auto-negotiation is disabled.
	Forced Interface Speed	Displays the default communication speed set when auto-negotiation is disabled.
	Interface Type	Displays the communication interface type.
	Interface State	Displays the communication interface status.
	Admin State	Displays the administration status.
	Interface Label	Displays the communication interface name. (label)
Input	Octets	Displays the length of the received data. (Unit: Octets)
	Ucast Packets	Displays the number of unicast packets received.
	NUcast Packets	Displays the number of non-unicast packets (multicast or broadcast) received.
	Discards	Among the received packets, displays the number of discarded packets.
	Errors	Among the received packets, displays the number of packets that include error information. (Excluding the number of discarded packets)
	In Unknown Protocols	Among the received packets, displays the number of packets with unrecognizable protocols.
Output	Octets	Displays the length of the sent data. (Unit: Octets)
	Ucast Packets	Displays the number of unicast packets sent.
	NUcast Packets	Displays the number of non-unicast packets (multicast or broadcast) sent.
	Discards	Among the sent packets, displays the number of discarded packets.
	Errors	Among the sent packets, displays the number of packets that include error information. (Excluding the number of discarded packets)
Error Counters	Alignment Errors	Displays the number of frames received of which data length is not an octet integral multiple.
	FCS Errors	Displays the number of frames received for which FCS check errors occurred.
	Single Collisions	Displays the number of frames received for which single collisions occurred.
	Multiple Collisions	Displays the number of frames received for which multiple collisions occurred.
	SQE Test Errors	Displays the error count of the SQE test.
	Deferred Transmissions	Displays the number of times that a sending delay occurred.
	Late Collisions	Displays the probability of collisions occurring.
	Excessive Collisions	Displays the number of times that excessive collisions occurred.
	MAC Transmit Errors	Displays the number of MAC frame transmission errors.
	Carrier Sense Errors	Displays the number of errors that occurred during carrier detection.
	Frame Too Long	Displays the receive count of frames that exceeded the maximum size.
	MAC Receive Errors	Displays the number of MAC frame reception errors.

IP address management window


Information such as the IP address of the FX5-ENET/IP is displayed.

Set the address of the FX5-ENET/IP with the module parameters of the GX Works3. (☞ Page 50 Basic Setting)

☞ Select the EtherNet/IP module display in the network configuration settings*1 ⇒ [Device] ⇒ [Properties]

*1 For names of each display, refer to the following.

☞ Page 73 Display content

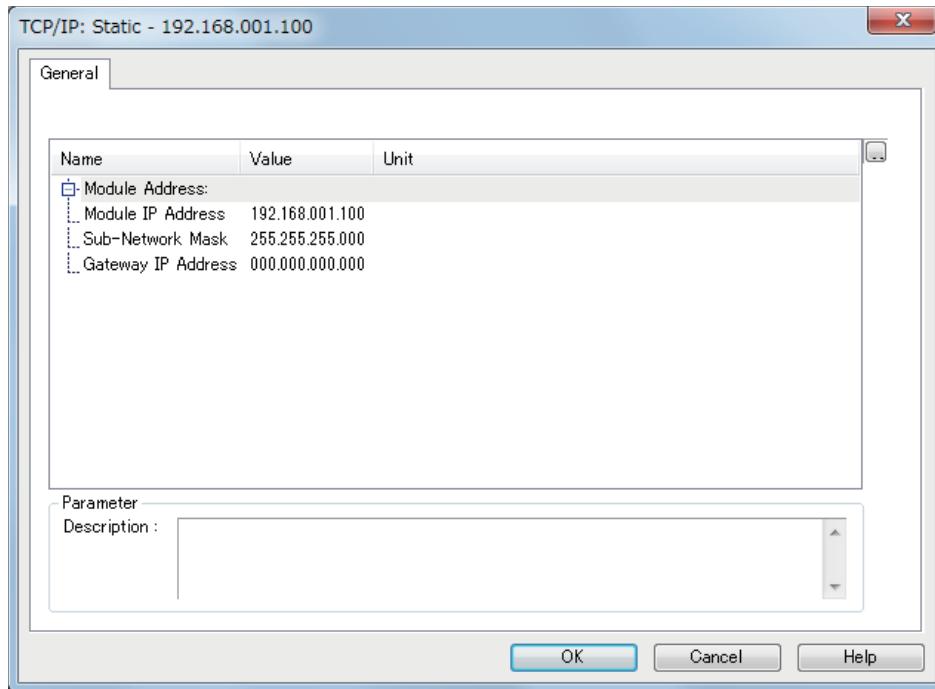

8

Item	Description	
Module Address	Module IP Address	Displays the IP address of the FX5-ENET/IP.
	Sub-Network Mask	Displays the subnet mask of the FX5-ENET/IP.
	Gateway IP Address	Displays the gateway IP address of the FX5-ENET/IP.
Parameter	Description	Displays the description of the selected item.

EtherNet/IP device setting window (Class1 instance communications)

Set the parameters of the EtherNet/IP device used in Class1 instance communications.

 Select the EtherNet/IP display in the network configuration settings.^{*1} \Rightarrow [Device] \Rightarrow [Properties]

*1 For names of each display, refer to the following.


 Page 73 Display content

Point

Depending on the connected EtherNet/IP device, some tabs may not be displayed in the EtherNet/IP device setting window.

■[General] tab

Set items such as the name and device number of the EtherNet/IP device.

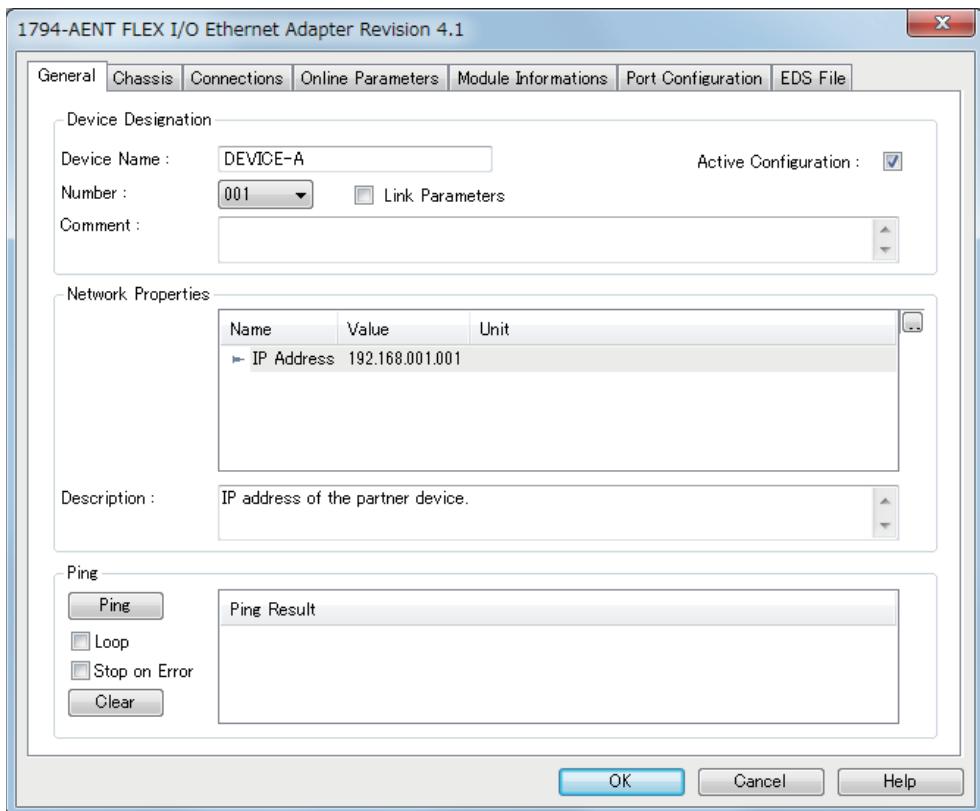

Item	Description	Setting range	
Device Designation	Device Name	Sets the name to use in management with EtherNet/IP Configuration Tool for FX5-ENET/IP. By default, names of EtherNet/IP devices not registered in the network configuration setting are displayed in the form such as "DEVICE-A" and "DEVICE-B".	Up to 50 characters ^{*1} (Default: Refer to the left.)
	Number	Sets the control number of the EtherNet/IP device. The control number that has not been set for EtherNet/IP devices can be selected from the list.	0 to 32 (Default: Minimum value of the control numbers of EtherNet/IP devices that have not been set.)
	Link Parameters	Enables or disables the link between the IP address and the device number of the EtherNet/IP device. • Selected: Enabled • Not selected: Disabled Enable this item to link the device number of the EtherNet/IP device to the fourth octet of the IP address.	• Selected • Not selected (Default: Not selected)
	Active Configuration	Enables or disables the parameters set for the EtherNet/IP device on the FX5-ENET/IP. • Selected: Enabled • Not selected: Disabled Disable this item when the parameters of the EtherNet/IP device need to be deleted from the FX5-ENET/IP with the settings in EtherNet/IP Configuration Tool for FX5-ENET/IP held.	• Selected • Not selected (Default: Selected)
	Comment	Displays the comment input field. Information about the EtherNet/IP device is described with the default setting.	Up to 255 single-byte characters (Default: Varies depending on the EtherNet/IP device)
Network Properties	IP Address	Specifies the IP address of the EtherNet/IP device.	1.0.0.1 to 223.255.255.254 ^{*2} (Default: Current IP address of the EtherNet/IP device)
	Description	Displays the description of the selected item.	—
Ping ^{*3}	[Ping] button	Pings the specified EtherNet/IP device.	—
	Loop	Select this check box to repeatedly ping the device once every 100 ms.	• Selected • Not selected (Default: Not selected)
	Stop on Error	Sets whether to interrupt pinging if an error occurs when the "Loop" check box is selected. • Selected: Pinging will be interrupted if an error occurs. • Not selected: Pinging will continue even if an error occurs.	• Selected • Not selected (Default: Not selected)
	[Clear] button	Deletes the content of "Ping Result".	—
	Ping Result	Displays the result of pinging.	—

*1 Characters from A to Z, numbers from 0 to 9, "." (dot), "-" (hyphen), and "_" (underscore) can be used. For the first character of a name, only characters from A to Z can be used.

*2 Cannot be set to a value from 127.0.0.0 to 127.255.255.255.

*3 Can be selected when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state. (☞ Page 56 File)




When an EtherNet/IP device has been added by "Network Detection", its IP address is registered automatically. When an EtherNet/IP device has been added from "Device Library", manually enter its IP address.

For the operations on "Network Detection" and "Device Library", refer to the following.

- ☞ Page 67 Network Detection
- ☞ Page 65 Device Library

■[Chassis] tab


Set the modules to be mounted in each slot for EtherNet/IP devices to which modules can be mounted.

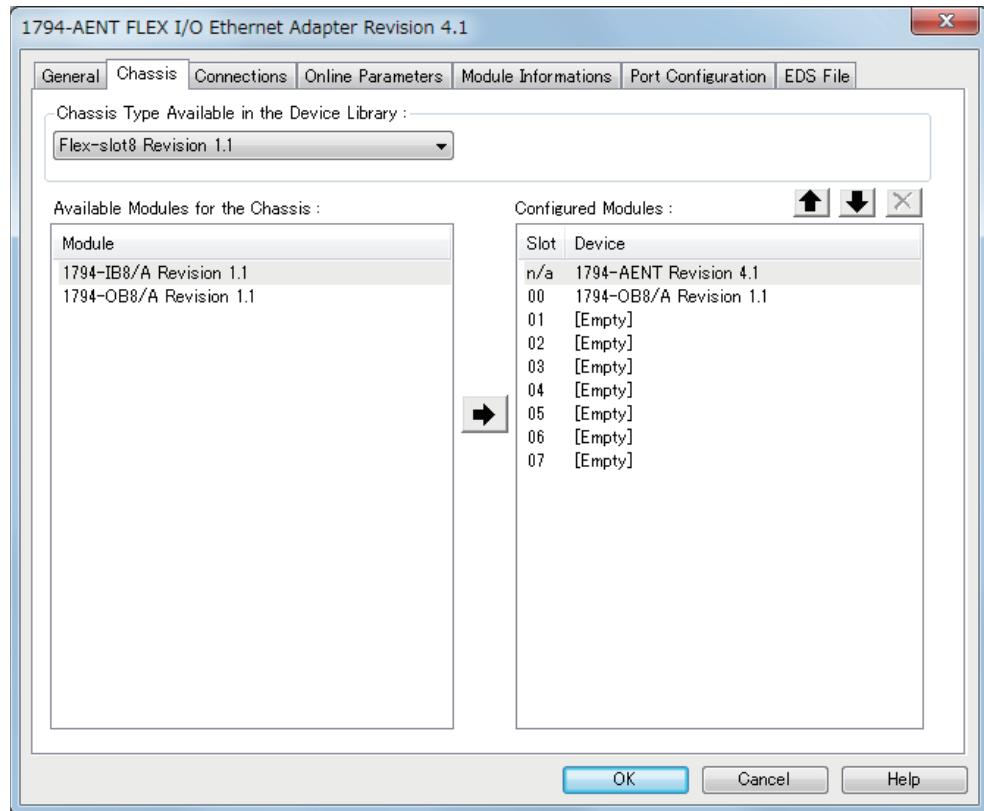


Item	Description
Chassis Type Available in the Device Library	[Set Chassis Size in the Module] button
	[Get Chassis Size in the Module] button
Available Modules for the Chassis	Displays a list of the modules that can be mounted to the EtherNet/IP device. This content varies depending on the EtherNet/IP device. Select a module and click the [→] button to add the module to the list of "Configured Modules". (When the module is added to the list by a drag-and-drop operation, it can be added to a desired slot.)
Configured Modules	Sets the modules of the EtherNet/IP device for each "Slot" number. Select a module and edit it with the following buttons. <ul style="list-style-type: none"> • [↑] button: Moves the selected module to the upper slot. • [↓] button: Moves the selected module to the lower slot. • [×] button: Deletes the selected module.

■[Connections] tab

Set items such as the communication content when the connection with the EtherNet/IP device is established.

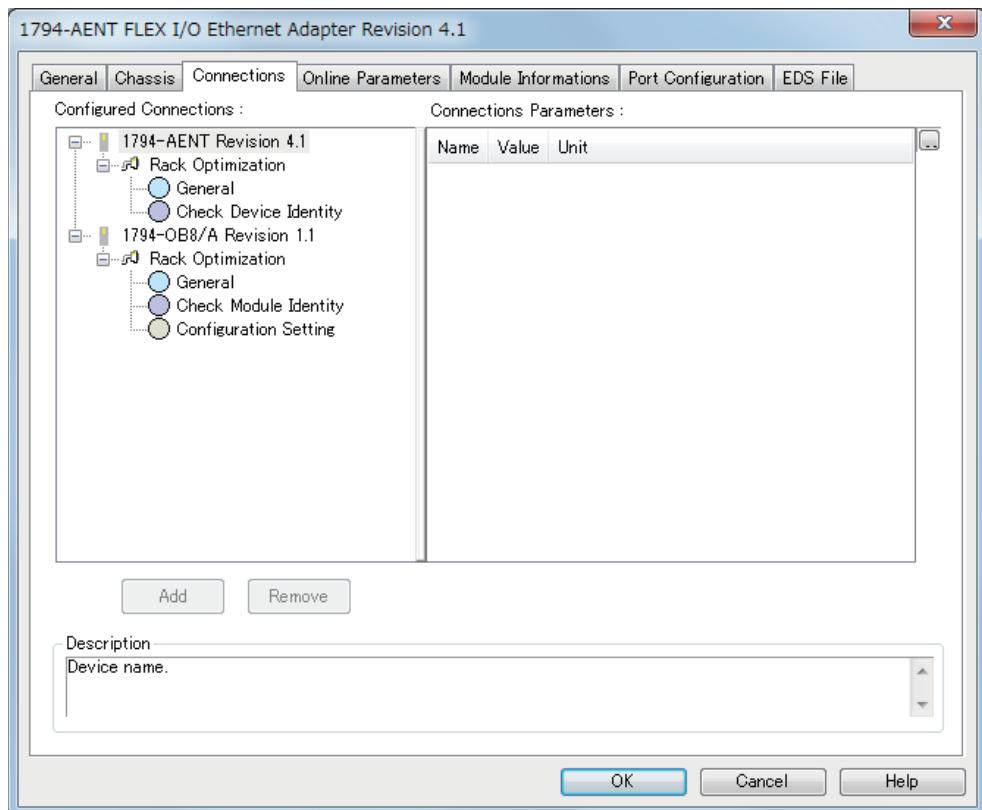

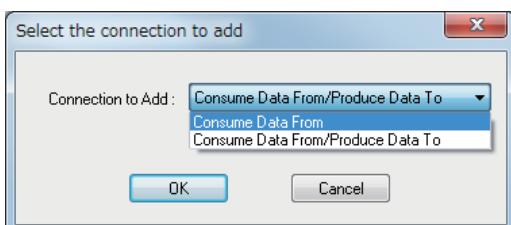Item	Description
Configured Connections	Displays the connection status of the devices or modules of the EtherNet/IP device.
Connection Parameters	Displays the parameters of the EtherNet/IP device selected under "Configured Connections". <ul style="list-style-type: none"> General: The parameters are set the connection to the EtherNet/IP device. Check Device Identity: The parameters are verified the settings against the actual EtherNet/IP device to check whether they match. Configuration Setting: The parameters are displayed the settings defined in the EDS file for each EtherNet/IP device. For details, refer to the manuals of the EtherNet/IP device.
[Add] button	Displays the following window when clicked with a device or module of an EtherNet/IP device selected.  Use "Connection to Add" to select the type to which the FX5-ENET/IP connected. The types to be connected vary depending on the used EtherNet/IP device.
[Remove] button	Deletes the selected device or module of the EtherNet/IP device when clicked.
Description	Displays the description of the selected item.

- "General" window

Name	Value	Unit
Connection No.	1	
Time-out Multiplier	x4	
Input - T->O		
Input Size	0	bytes
Input Mode	Point to Point	
Input Type	Fixed	
Priority	Scheduled	
Trigger Type	Cyclic	
Request Packet Interval (RPI)	30	ms
Output - O->T		
Output Size	8	bytes
Output Mode	Point to Point	
Output Type	Fixed	
Priority	Scheduled	
Request Packet Interval (RPI)	100	ms

Item	Description	Setting range
Connection Bit Health Offset	Displays the connection number of the EtherNet/IP device. Connection numbers of EtherNet/IP devices are assigned from 1 in the order in which they were added.	—
Time-out Multiplier	Specifies the monitoring time of the send/receive timeout as an RPI multiple. (Monitoring time of send/receive timeout = "Request Packet Interval (RPI)" × "Time-out Multiplier") Set the monitoring time of send/receive timeout to 4294967ms or below. <ul style="list-style-type: none">When "Time-out Multiplier" is set to "x4", set "Request Packet Interval (RPI)" to "60000" or below.When "Time-out Multiplier" is set to "x512", set "Request Packet Interval (RPI)" to "8388" or below.	<ul style="list-style-type: none">× 4× 8× 16× 32× 64× 128× 256× 512 <p>(Default: Varies depending on the EtherNet/IP device)</p>
Input -T->O	Input Size	Specifies the size of the input data. (Unit: Bytes) ^{*1}
	Input Mode	Specifies the target to read the input data from. <ul style="list-style-type: none">Point to Point: Unicast (one to one) communications are performed.Multicast: Multicast (one to many) communications are performed.Null: Communications are not performed.
	Input Type	Specifies the input type (variable or fixed) according to the size of the input data. <ul style="list-style-type: none">Variable: Communications are performed with a variable size.^{*2}Fixed: Communications are performed with a fixed size.
	Priority	Specifies the priority of the communication packet for the currently set connection. <ul style="list-style-type: none">High: Processing is performed with high priority.Low: Priority is given to the processing of connections set to "High".Scheduled: Packets are processed in the receiving order regardless of priority.
	Trigger Type	Specifies the trigger type (reading timing) of the input data. <ul style="list-style-type: none">Cyclic: Triggers are executed periodically according to the "RPI" setting value.Application: Triggers are executed with arbitrary timing according.Change of State: Triggers are executed at a given timing according.
	Inhibit Time Mode	Specifies the method to manage the inhibit time when "Trigger Type" is set to "Change of State". <ul style="list-style-type: none">Default: A quarter of RPI is specified as the inhibit time.Un-Activated: No inhibit time is specified.Custom: Time specified in "Inhibit time" is specified as the inhibit time.
	Inhibit time	Specifies the inhibit time when "Inhibit Time Mode" is set to "Custom". (Unit: ms)
	Request Packet Interval(RPI)	Specifies the communication cycle. (Unit: ms)

Item	Description	Setting range
Output-O->T	Output Size	Specifies the size of the output data. (Unit: Bytes) ^{*1} 0 to 1444 (Default: Varies depending on the EtherNet/IP device)
	Output Mode	Specifies the target to which the output data is written. • Point to Point: Unicast (one to one) communications are performed. • Multicast: Multicast (one to many) communications are performed. • Null: Communications are not performed. • Point to Point • Multicast • Null (Default: Varies depending on the EtherNet/IP device)
	Output Type	Specifies the output type (variable or fixed) according to the size of the output data. ^{*3} • Variable: Communications are performed with a variable size. ^{*2} • Fixed: Communications are performed with a fixed size. • Variable • Fixed (Default: Varies depending on the EtherNet/IP device)
	Priority	Specifies the priority of the communication packet for the currently set connection. • High: Processing is performed with high priority. • Low: Priority is given to the processing of connections set to "High". • Scheduled: Packets are processed in the receiving order regardless of priority. • High • Low • Schedule (Default: Varies depending on the EtherNet/IP device)
	Request Packet Interval(RPI)	Specifies the communication cycle. (Unit: ms) 2 to 60000 (Default: Varies depending on the EtherNet/IP device)

^{*1} Large Forward Open must be available for the EtherNet/IP device when this item is specified to 505 bytes or more.

For details, refer to the manuals of the EtherNet/IP device.

^{*2} Variable connections must be available for the EtherNet/IP device when this item is specified to "Variable".

For details, refer to the manuals of the EtherNet/IP device.

^{*3} Regardless of this setting, the FX5-ENET/IP sends data with the size specified with "Output Size".

- "Check Device Identity" window


Name	Value	Unit
Check Identity	Custom	
Compatible Mode	True	
Minor Version	Compatible	
Major Version	Compatible	
Product Code	Compatible	
Product Type	Compatible	
Product Vendor	Compatible	

Item	Description	Setting range
Check Identity	Specifies the policy of the consistency check. The connection is disconnected if the check results in a mismatch. <ul style="list-style-type: none"> • Disable: The check is not performed. • Must Match Exactly: Checks whether all items match exactly. • Must be Compatible: Checks all items and judges there to be no problem if the items are compatible. • Custom: The check items are set with "Compatible Mode" and the subsequent items. • None: The check is not performed. (For EtherNet/IP devices on which check processing is not available) 	<ul style="list-style-type: none"> • Disable • Must Match Exactly • Must be Compatible • Custom • None (Default: Disable)
Compatible Mode ^{*1}	Specifies the compatibility check. <ul style="list-style-type: none"> • True: "Minor Version" and subsequent items must be compatible. • False: "Minor Version" and subsequent items must match exactly. 	<ul style="list-style-type: none"> • True • False (Default: True)
Minor Version ^{*1}	Specifies the minor version check. <ul style="list-style-type: none"> • Compatible: The check is performed. • Not Checked: The check is not performed. 	<ul style="list-style-type: none"> • Compatible • Not Checked (Default: Compatible)
Major Version ^{*1}	Specifies the major version check. <ul style="list-style-type: none"> • Compatible: The check is performed. • Not Checked: The check is not performed. 	<ul style="list-style-type: none"> • Compatible • Not Checked (Default: Compatible)
Product Code ^{*1}	Specifies the product code check. <ul style="list-style-type: none"> • Compatible: The check is performed. • Not Checked: The check is not performed. 	<ul style="list-style-type: none"> • Compatible • Not Checked (Default: Compatible)
Product Type ^{*1}	Specifies the product type check. <ul style="list-style-type: none"> • Compatible: The check is performed. • Not Checked: The check is not performed. 	<ul style="list-style-type: none"> • Compatible • Not Checked (Default: Compatible)
Product Vendor ^{*1}	Specifies the vendor code check. <ul style="list-style-type: none"> • Compatible: The check is performed. • Not Checked: The check is not performed. 	<ul style="list-style-type: none"> • Compatible • Not Checked (Default: Compatible)

*1 This item is displayed when "Custom" is specified for "Check Identity".

■[Online Parameters] tab

Read and write information such as the error information in EDS files.

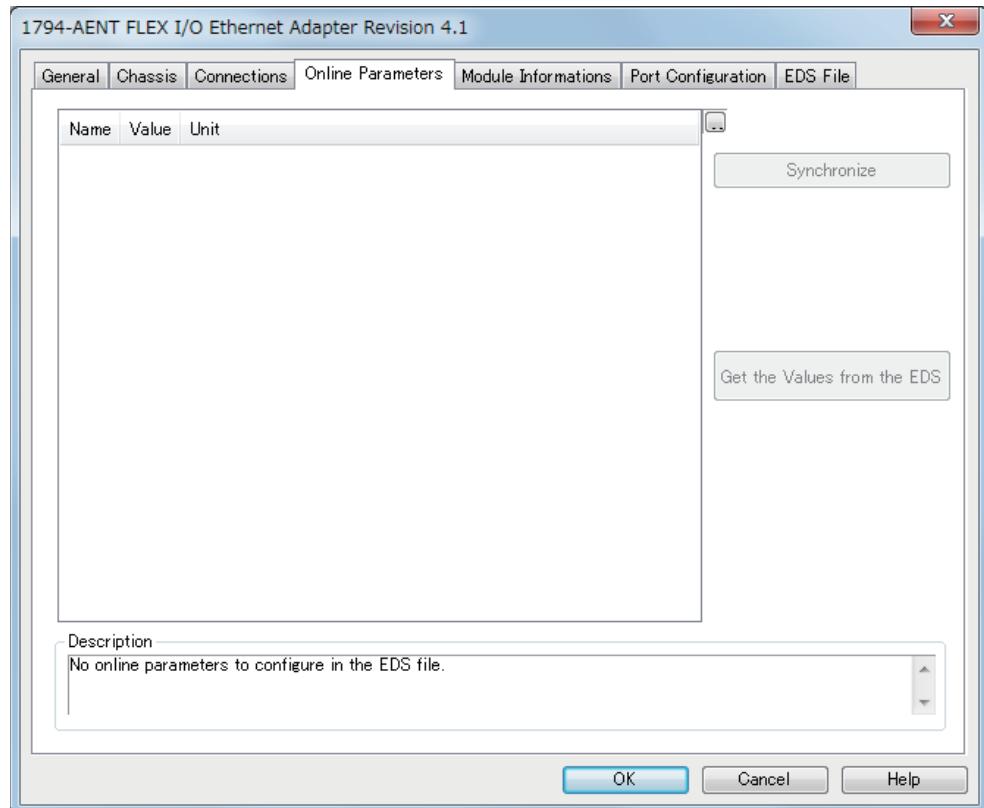


Item	Description
[Synchronize] button	Displays the following window for reading and writing values displayed on the [Online Parameters] tab for the EtherNet/IP device.
[Get the Values from the EDS] button	Initializes the values displayed on the [Online Parameters] tab (sets the values to the default values in the EDS file).
Description	Displays the description of the selected item.

■[Module Informations] tab

The parameters of the EtherNet/IP device are displayed.

Items in this window can be used when EtherNet/IP Configuration Tool for FX5-ENET/IP is switched to the online state.

(☞ Page 56 File)

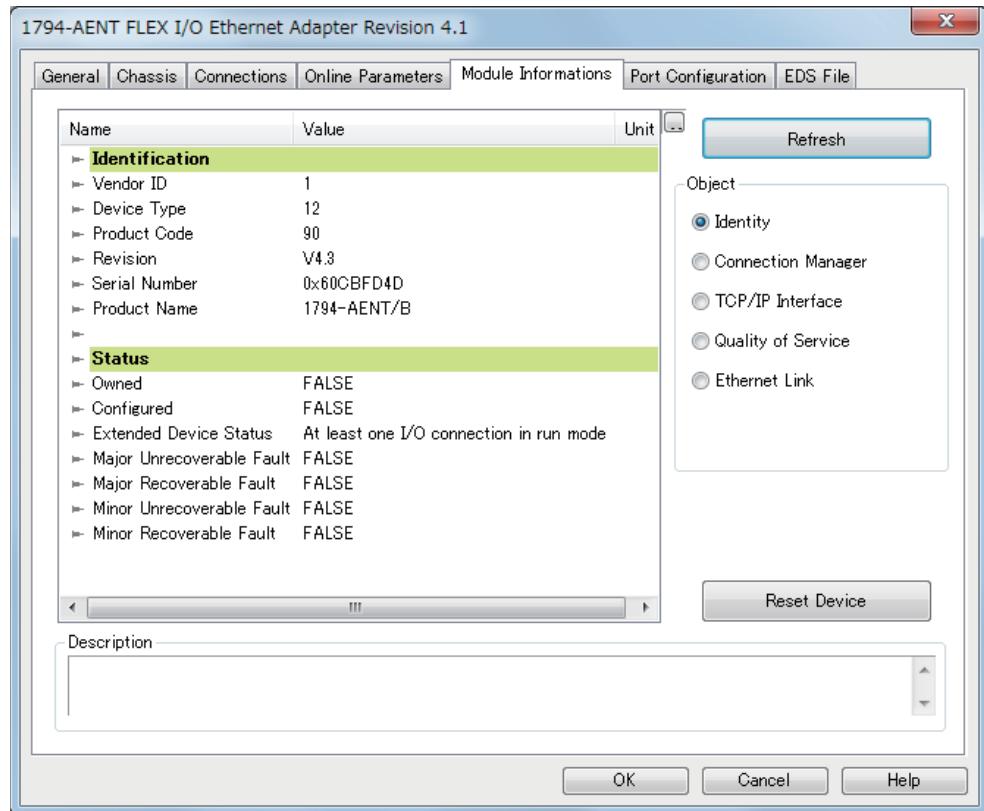


Item	Description
[Refresh] button	Updates the displayed parameters of the EtherNet/IP device. All the initial values are displayed as "####". Clicking the [Refresh] button acquires the information of the item selected in "Object".
Object ^{*1}	Selects the type of values to read from the EtherNet/IP device. <ul style="list-style-type: none"> • Identity: General device information • Connection Manager: Information about connection • TCP/IP Interface: Information about TCP/IP network interface • Quality of Service: Information about communication quality • Ethernet Link: Information about link-specific counter and IEEE802.3 communication interface status
[Reset Device] button	Resets the displayed parameters of the EtherNet/IP device.
Description	Displays the description of the selected item.

*1 This item is displayed when "Advanced Mode" is selected. (☞ Page 56 File)

■[Port Configuration] tab

Read and write the connection status of the EtherNet/IP device.

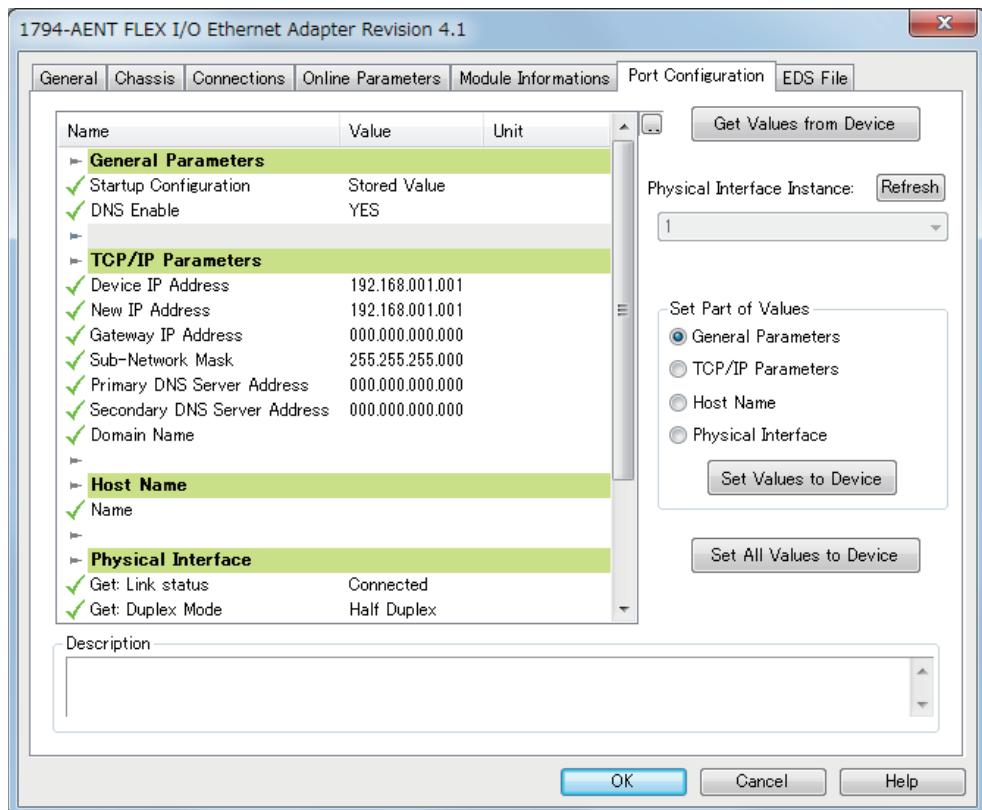

Item	Description
[Get Values from Device] button	Reads and displays the connection status of the EtherNet/IP device.
Physical Interface Instance	Specifies the port number from the list when the EtherNet/IP device is configured with multiple ports.
[Refresh] button	Updates the port number of the "Physical Interface Instance".
Set Part of Values	Selects the items of the values to write to the EtherNet/IP device from the following. <ul style="list-style-type: none"> General Parameters: Basic parameter settings TCP/IP Parameters: TCP/IP parameter settings Host Name: Host name settings Physical Interface: Physical interface settings
[Set Values to Device] button	Writes the values of the items selected with "Set Part of Values" to the EtherNet/IP device.
[Set All Values to Device] button	Writes all the values of the displayed connection status to the EtherNet/IP device.
Description	Displays the description of the selected item.


■[Diagnostic] tab

The connection status of the EtherNet/IP device is displayed.

This tab can be used when diagnostic mode is enabled. ( Page 116 Network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP)

Point

To display this content, 'EtherNet/IP communication start request' (Un\G37.b0) must be turned off and on and 'EtherNet/IP communication in process' (Un\G35.b0) must be in the ON state.

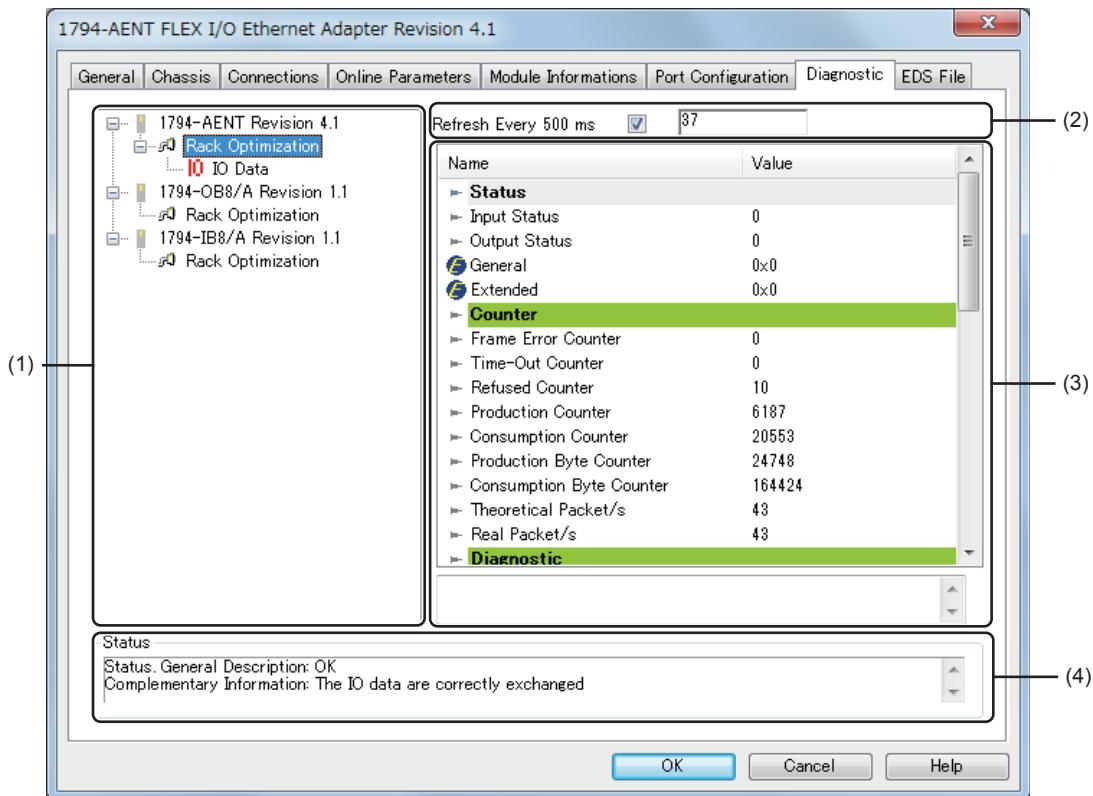

No.	Item	Description	Setting range
(1)	Connection list	Displays the names of the connections set on the [Connections] tab. Diagnostic information is displayed in the connection information when "Monitor Data And External Input" is selected. I/O data is displayed in the connection information when "IO Data" is selected.	—
(2)	Refresh Every	Connection information content is updated at 500 ms intervals when this check box is selected. The update count is incremented each time the information is updated.	<ul style="list-style-type: none"> • Selected • Not selected (Default: Selected)
(3)	Connection information	Displays the diagnostic information and I/O data.	—
(4)	Status	Displays the connection status.	—

- Diagnostic information window

Name	Value
» Status	
» Input Status	0
» Output Status	0
» General	0x0
» Extended	0x0
» Counter	
» Frame Error Counter	0
» Time-Out Counter	0
» Refused Counter	10
» Production Counter	6187
» Consumption Counter	20553
» Production Byte Counter	24748
» Consumption Byte Counter	164424
» Theoretical Packet/s	43
» Real Packet/s	43
» Diagnostic	

Item	Description
Status	Input Status
	Output Status
	General ^{*2}
	Extended ^{*2}
Counter	Frame Error Counter
	Time-Out Counter
	Refused Counter
	Production Counter
	Consumption Counter
	Production Byte Counter
	Consumption Byte Counter
	Theoretical Packet/s
	Real Packet/s
Diagnostic	Production Connection ID
	Consumption Connection ID
	O->T API (μs)
	T->O API (μs)
	O->T RPI (μs)
	T->O RPI (μs)
	O->T Net Parameters
	T->O Net Parameters
	Originator Connection Serial Number
	Originator Vendor Id
Send Socket Diagnostic ^{*2}	Originator Serial Number
	Socket ID
	Remote IP Address
	Remote Port
	Local IP Address
Receive Socket Diagnostic ^{*2}	• Multicast: Displays the multicast address. • Unicast: Displays 0.0.0.0.
	Local IP Port
	Socket ID
	Remote IP Address
	Remote Port
Local IP Address	Fixed to 0
	Displays the IP address of the FX5-ENET/IP.
Local IP Port	Fixed to 0
	Displays the port number of the FX5-ENET/IP.

*1 For details on the displayed content, refer to the EtherNet/IP specifications issued by ODVA (www.odva.org).

*2 This item is displayed when "Advanced Mode" is selected. ( Page 56 File)

- I/O data window

Input

02 00 00 00 00 00 00 00	Length (bytes) : 8
	Status : 0

Output

00 00 00 00	Length (bytes) : 4
	Status : 0

Item	Description	
Input	[..] button	Changes the display format of the input data.
	Length(bytes)	Displays the size of the input data. (Unit: Bytes)
	Status	Displays the Status value of the input connection.
Output	[..] button	Changes the display format of the output data.
	Length(bytes)	Displays the size of the output data. (Unit: Bytes)
	Status	Displays the Status value of the output connection.



I/O data of connections that exceed 1400 bytes is not displayed in the I/O data window.

To check I/O data of connections that exceed 1400 bytes, refer to the following.

- 'Class1 communications input data area' (Un\G12000 to Un\G35999)
- 'Class1 communications output data area' (Un\G60000 to Un\G83999)

- Status value


The following table lists the values of the "Input Status", "Output Status", and "Status" displayed in the diagnostic information window and I/O data window.

When the FX5-ENET/IP is scanner	
Status value	Description
0	EtherNet/IP communications are being performed normally.
33	A timeout has occurred.
53	An Idle notification has been received from the EtherNet/IP device.
54	EtherNet/IP communication connection has been established and no communications are performed.
58	An EtherNet/IP communication error (TCP error) has occurred.
65	An EtherNet/IP communication error (CIP error) has occurred.
68	EtherNet/IP communication connection processing is in progress.
70	An EtherNet/IP communication error (CIP error) has occurred.
77	EtherNet/IP communication is stopping.

When the FX5-ENET/IP is adapter	
Status value	Description
0	EtherNet/IP communications are being performed normally.
33	An EtherNet/IP communication error is occurring.
53	An Idle notification has been received from the EtherNet/IP device.
54	EtherNet/IP communication connection has been established and no communications are performed.

■[EDS File] tab


The EDS file information is displayed.

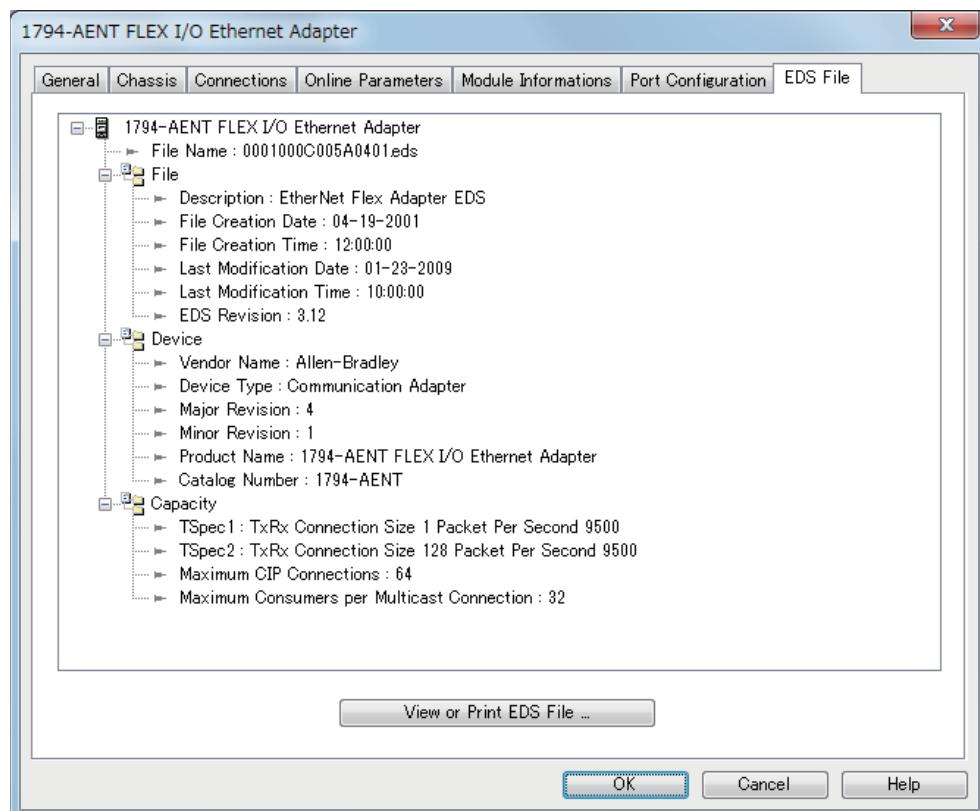

Item	Description
[View or Print EDS File] button	Displays EDS file information in the text format. This button is the same as the [View or Print EDS File] button for the EDS file information of an EtherNet/IP device in "Device Library". (☞ Page 66 EDS file information)

Setting Target Instance

If the FX5-ENET/IP is set as the target of the EtherNet/IP communication, select "Target (Class1 Instance)", and drag and drop it to the Network configuration setting.

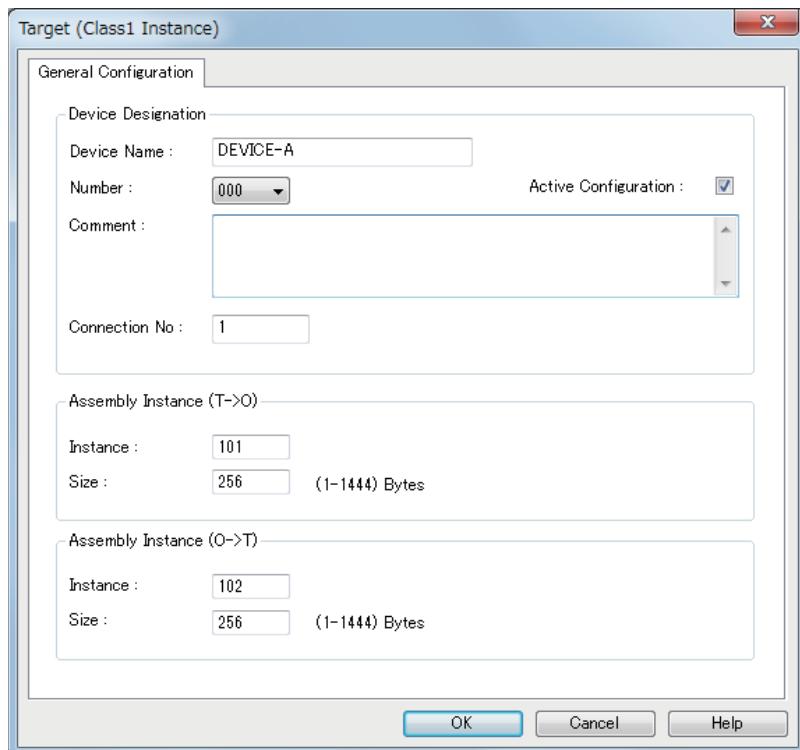

Item	Description		Setting range
Device Designation	Device Name	Sets the name to use in management with EtherNet/IP Configuration Tool for FX5-ENET/IP. By default, names of EtherNet/IP devices not registered in the network configuration setting are displayed in the form such as "DEVICE-A" and "DEVICE-B".	Up to 50 characters*1 (Default: Refer to the left.)
	Number	Sets the control number of the EtherNet/IP device. The control number that has not been set for EtherNet/IP devices can be selected from the list.	000 to 255 (Default: Minimum value of the control numbers of EtherNet/IP devices that have not been set.)
	Active Configuration	Enables or disables the parameters set for the EtherNet/IP device on the FX5-ENET/IP. <ul style="list-style-type: none"> • Selected: Enabled • Not selected: Disabled Disable this item when the parameters of the EtherNet/IP device need to be deleted from the FX5-ENET/IP with the settings in EtherNet/IP Configuration Tool for FX5-ENET/IP held.	<ul style="list-style-type: none"> • Selected • Not selected (Default: Selected)
	Comment	Displays the comment input field.	Up to 255 single-byte characters (Default: Blank)
	Connection No	Displays the connection number of the EtherNet/IP device. Connection numbers of EtherNet/IP devices are assigned from 1 in the order in which they were added.	—
Assembly Instance(T->O)	Instance	Specifies the instance number used in Class1 instance communications (T->O).	100 to 199 (Default: 101)
	Size	Specifies the data size of used in Class1 instance communications (Unit: byte).	1 to 1444 (Default: 256)
Assembly Instance(O->T)	Instance	Specifies the instance number used in Class1 instance communications (O->T).	100 to 199 (Default: 102)
	Size	Specifies the data size of used in Class1 instance communications (Unit: byte).	1 to 1444 (Default: 256)

*1 Characters from A to Z, numbers from 0 to 9, "." (dot), "-" (hyphen), and "_" (underscore) can be used. For the first character of a name, only characters from A to Z can be used.

Operation information list

This list displays information such as the operations performed in EtherNet/IP Configuration Tool for FX5-ENET/IP and error messages.


Date / Time	Level	Event
10/18/18 17:59:58	Information	File 0001000700350101.eds. 1794 - 8 Point 24V DC Output, Source Revision 1.1. Connection Redundant Owner: transport type not authorized or not filled.
10/18/18 18:00:04	Information	Configuration offline.

Output Message View

"Output Message View Configuration" window

Set the information to be displayed in the operation information list.

☞ [File] ⇒ [Message View] ⇒ [Configuration]

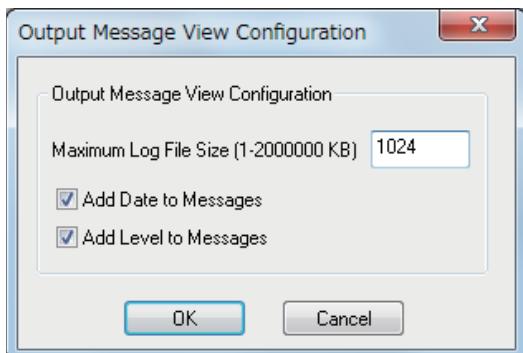

Item	Description	Setting range
Maximum Log File Size	Sets the maximum size of a log file. (Unit: KB)	1 to 2000000 (Default: 1024)
Add Date to Messages	Displays the date as a column item in the operation information list.	<ul style="list-style-type: none"> Not selected Selected (Default: Selected)
Add Level to Messages	Displays the classification as a column item in the operation information list.	<ul style="list-style-type: none"> Not selected Selected (Default: Selected)

8.2 Procedure for Registering EtherNet/IP Devices

This section describes the procedure for registering EtherNet/IP devices to the EtherNet/IP communication settings. The following two methods can be used to register EtherNet/IP devices.

- Configuring settings online (☞ Page 101 Configuring settings online)
- Configuring settings offline (☞ Page 101 Configuring settings offline)


Adding the EDS file

Follow the EDS Management wizard to add EtherNet/IP devices to "Device Library".


1. Open the "EDS Management" window.

☞ [Library]⇒[Add]

2. Click the [Next] button in the "EDS Management" window.

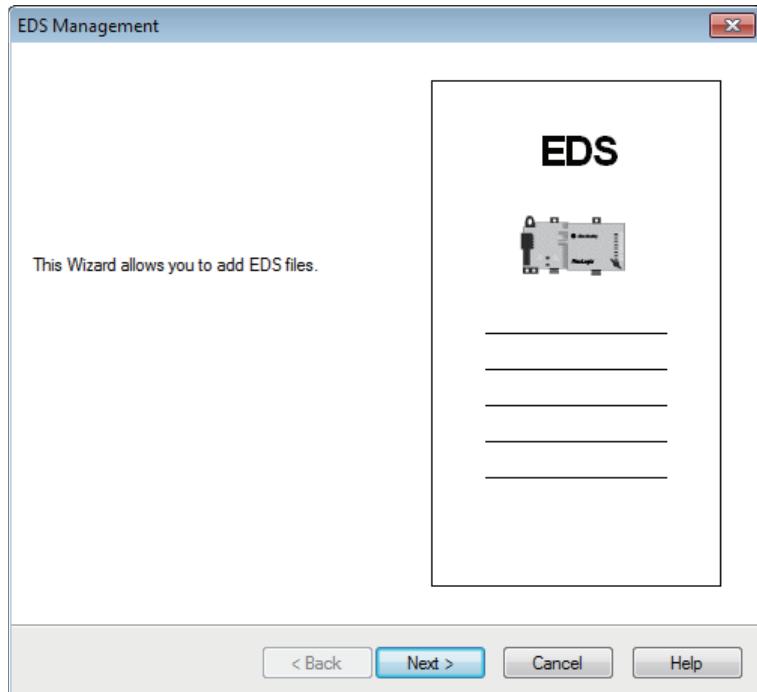

3. Select EDS files to add and click the [Next] button.

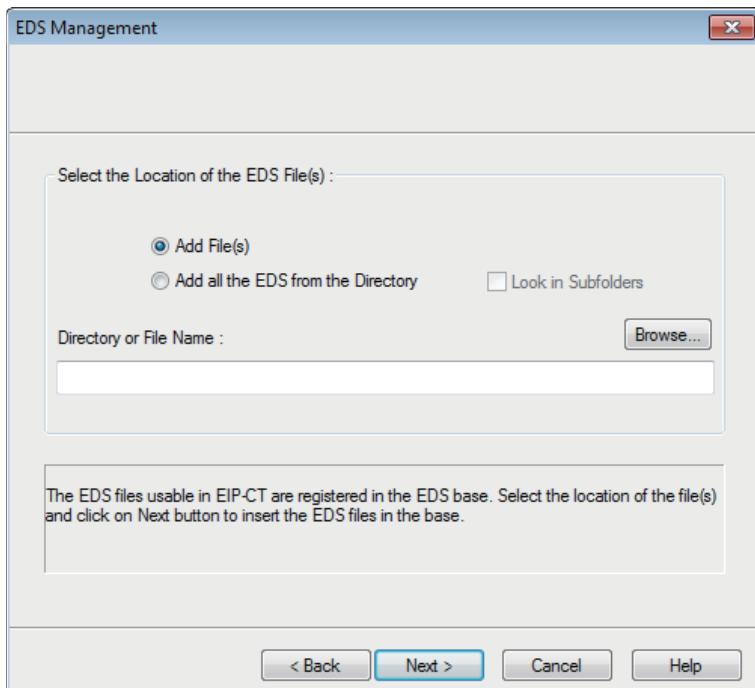


Item	Description	Setting range
Add File(s)	Select this item to add the selected EDS files. (Multiple EDS files can be added at a time.) Click the [Browse] button and select EDS files.	• Selected • Not selected (Default: Selected)
Add all the EDS from the Directory	Select this item to add all EDS files in the selected folder. Click the [Browse] button to select a folder.	• Selected • Not selected (Default: Not selected)
Look in Subfolders	Select this item to select subfolders in the selected folder when "Add all the EDS from the Directory" has been selected.	• Selected • Not selected (Default: Not selected)
Directory or File Name	Displays the path of the selected EDS file or selected folder. The storage location of the EDS file or folder can be directly specified.	—
[Browse] button	Displays the EDS file or the folder where EDS files have been stored.	—


4. The "EDS Management" window displays the additional result of the EDS files added to "Device Library".

Check that the files have been properly added and click the [Next] button. (When the files have been properly added, OK is displayed in the "Status" field.)

Selecting an added EDS file and clicking the [View Selected File] button displays information of the EDS file in a text file.

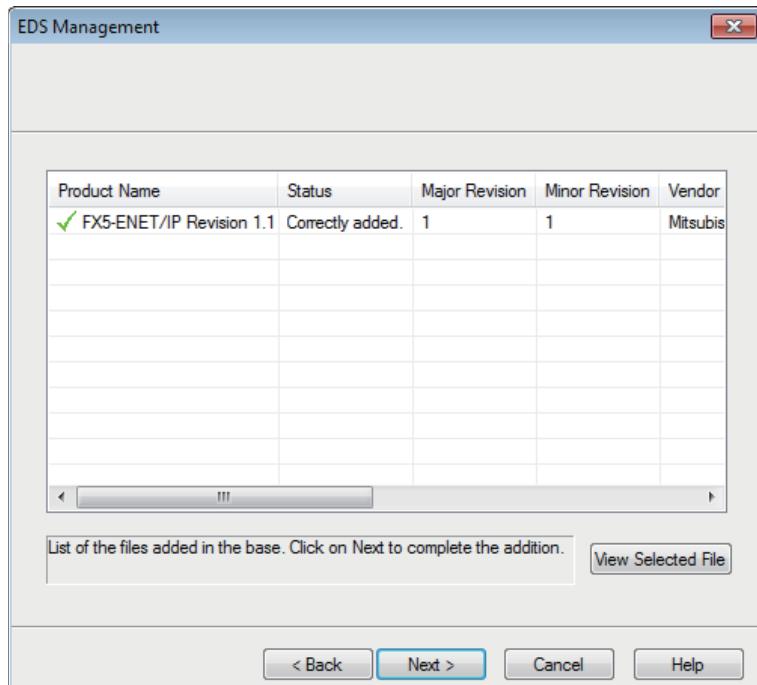

5. Click the [Finish] button to exit the EDS Management wizard.

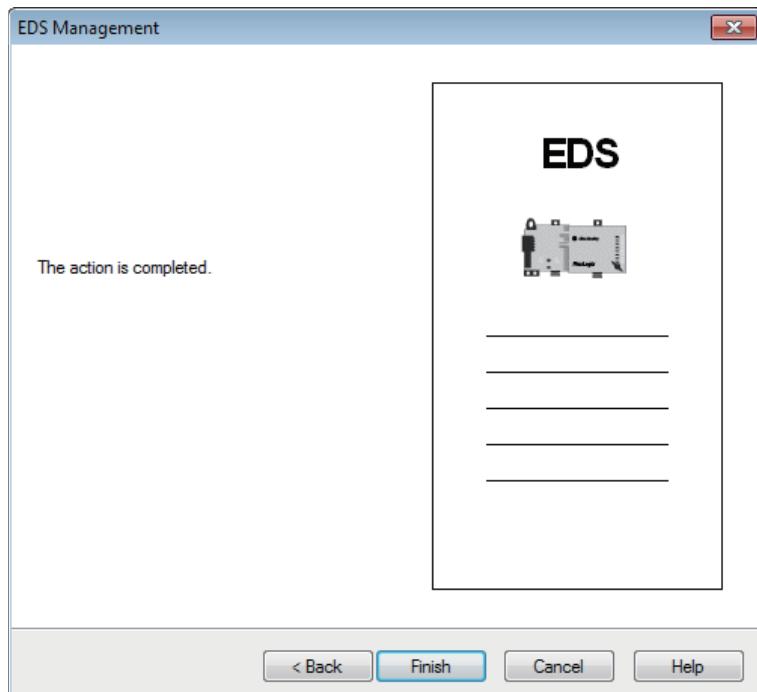

Configuring settings online

When setting EtherNet/IP devices online, the following conditions must be met.

- The FX5-ENET/IP and EtherNet/IP device are connected to the network.
- A name has been set to the EtherNet/IP device, and the name does not duplicate the name of other EtherNet/IP devices.
- An IP address has been set to the EtherNet/IP device, and the IP address does not duplicate the IP addresses of other EtherNet/IP devices.

Setting procedure

1. Add the EtherNet/IP devices to be used to "Device Library". (☞ Page 98 Adding the EDS file)

2. Detect the EtherNet/IP devices on the network. (☞ Page 67 Network Detection)

☞ Select the [Network Detection] tab ⇒ [Network] ⇒ [Read Network Configuration]

3. Add the detected EtherNet/IP devices to the network configuration settings.

[When EtherNet/IP devices are added one by one]

☞ Select the EtherNet/IP device in "Network Detection" ⇒ [Network] ⇒ [Insert in Configuration]

[When EtherNet/IP devices are added as a batch]

☞ Select the [Network Detection] tab ⇒ [Network] ⇒ [Insert and Replace All]

Configuring settings offline

When settings are configured offline, the EtherNet/IP communication settings can be configured without the FX5-ENET/IP and EtherNet/IP devices.

However, check the names of the EtherNet/IP devices used and the network configuration in advance.

Setting procedure

1. Add the EtherNet/IP devices to be used to "Device Library". (☞ Page 98 Adding the EDS file)


2. Add the EtherNet/IP devices to the network configuration settings.

☞ Select the EtherNet/IP device in "Device Library". ⇒ [Library] ⇒ [Insert in Configuration]

8.3 Checking the Software Version

Check the software version of EtherNet/IP Configuration Tool for FX5-ENET/IP in the following window.

 [Help] ⇔ [About]

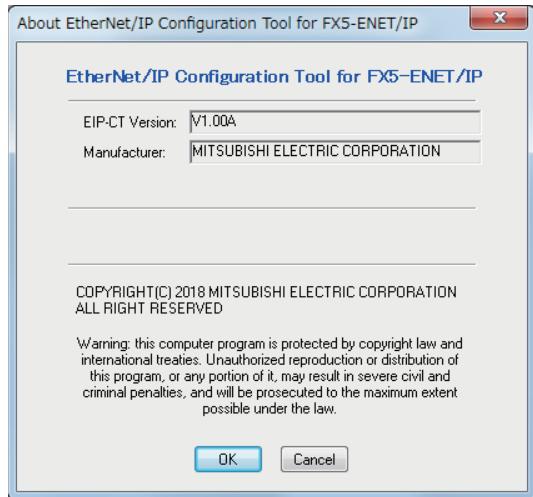

9 PROGRAMMING

This chapter describes program examples of Class 1 instance communications and UCMM message communications. For program examples of general-purpose Ethernet communication, refer to  MELSEC iQ-F FX5 User's Manual (Ethernet Communication).

9.1 Program Example of Class 1 Instance Communications

This section describes examples of Class 1 instance communications.

Program example

By turning on the request command while Class1 communications are being executed, the connection information is read and written.

Program of the FX5-ENET/IP (reads the connection information)

■Devices used in the program

Device	Description
M901	Execution command
M902	Execution status
M903	Normal completion
M904	Error completion
D901	Error code
D902	Error code of connection communication error
D903	Input data storage device (head number of the device)

■Program example




Program of the FX5-ENET/IP (writes the connection information)

■Devices used in the program

Device	Description
M1001	Execution command
M1002	Execution status
M1003	Normal completion
D1001	Error code
D1002	Error code of connection communication error
D1003	Output data storage device (head number of the device)

■Program example

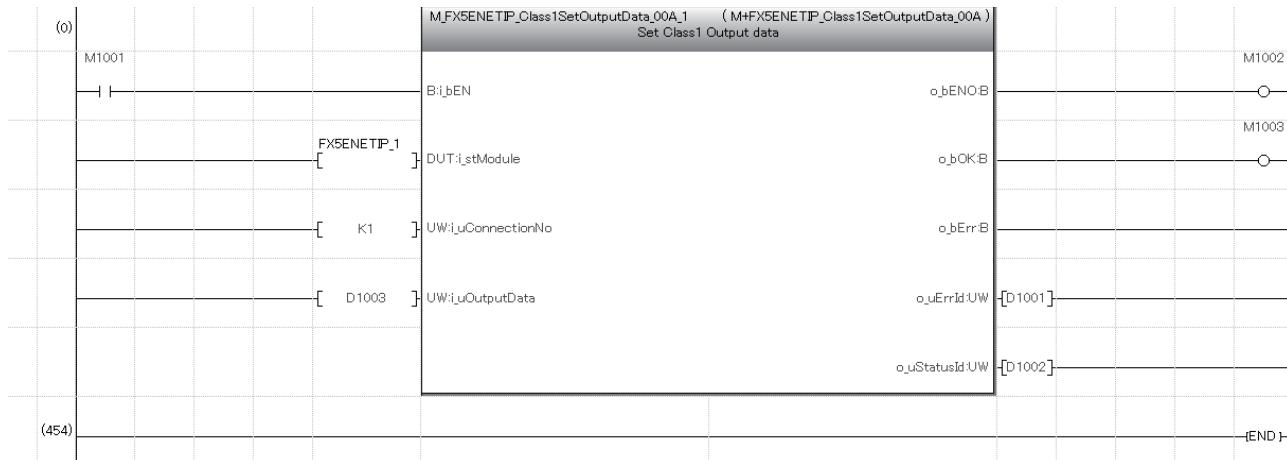

9.2 Program Example of UCMM Message Communications

This section provides a program example using the client function of UCMM message communications.

Program example

The following example shows a program to execute UCMM message communications by turning on the UCMM command send request (M100) in the program.

Labels used in the program

Classification	Label name	Description	Device																				
Module label	FX5ENETIP_1bSts_ModuleReady_D	Module ready	U1\G34.b0																				
	FX5ENETIP_1bSet_CommunicationStartupRequest_D	EtherNet/IP communication start request	U1\G37.b0																				
	FX5ENETIP_1bnSts_Class3UCMMAplicationTriggerRequest_Connection_D[1]	ApplicationTrigger request (UCMM)	U1\G5274.b0																				
	FX5ENETIP_1.bnSts_Class3UCMMAplicationTriggerAcceptance_Connection_D[1]	ApplicationTrigger acceptance (UCMM)	U1\G5278.b0																				
	FX5ENETIP_1bnSts_Class3UCMMAplicationTriggerCompletion_Connection_D[1]	ApplicationTrigger completion (UCMM)	U1\G5282.b0																				
	FX5ENETIP_1.unArea_Class3UCMMInputDataArea_D[32]	UCMM communications input data area (Receive data)	U1\G36032 to U1\G36738																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[0]	UCMM communications output data area (Explicit message request type)	U1\G84000																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[1]	UCMM communications output data area (Target IP Address (lower))	U1\G84001																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[2]	UCMM communications output data area (Target IP Address (upper))	U1\G84002																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[3]	UCMM communications output data area (Service (service code))	U1\G84003																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[6]	UCMM communications output data area (Class (class ID))	U1\G84006																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[7]	UCMM communications output data area (Instance (instance ID))	U1\G84007																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[8]	UCMM communications output data area (Attribute (attribute ID))	U1\G84008																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[9]	UCMM communications output data area (Data length (data size))	U1\G84009																				
	FX5ENETIP_1.unArea_Class3UCMMOutputDataArea_D[32]	UCMM communications output data area (Request data)	U1\G84032 to U1\G84738																				
Label to be defined	Define global labels as shown below.																						
	<table border="1"> <thead> <tr> <th></th> <th>Label Name</th> <th>Data Type</th> <th>Class</th> <th>Assign (Device/Label)</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>bCommunicationStopRequest</td> <td>Bit</td> <td>... VAR.GLOBAL</td> <td>▼ M1 0</td> </tr> <tr> <td>2</td> <td>bUCMMCommandSendRequest</td> <td>Bit</td> <td>... VAR.GLOBAL</td> <td>▼ M1 00</td> </tr> <tr> <td>3</td> <td>unGetUCMMResponseData</td> <td>Word [Unsigned]/Bit String [16-bit](0..706)</td> <td>... VAR.GLOBAL</td> <td>▼ D1 000</td> </tr> </tbody> </table>				Label Name	Data Type	Class	Assign (Device/Label)	1	bCommunicationStopRequest	Bit	... VAR.GLOBAL	▼ M1 0	2	bUCMMCommandSendRequest	Bit	... VAR.GLOBAL	▼ M1 00	3	unGetUCMMResponseData	Word [Unsigned]/Bit String [16-bit](0..706)	... VAR.GLOBAL	▼ D1 000
	Label Name	Data Type	Class	Assign (Device/Label)																			
1	bCommunicationStopRequest	Bit	... VAR.GLOBAL	▼ M1 0																			
2	bUCMMCommandSendRequest	Bit	... VAR.GLOBAL	▼ M1 00																			
3	unGetUCMMResponseData	Word [Unsigned]/Bit String [16-bit](0..706)	... VAR.GLOBAL	▼ D1 000																			

Program example

(0)	FX5ENETIP_1.bnSts_ModuleReady_D U1#G34.0	bCommunicationStopRequest M10 ↓↓					FX5ENETIP_1.bnSet_CommunicationStart upRequest_D U1#G37.0 ○
(8)	bUCMMCommandSendRequest M100 ↓↓		MOV	H2000	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[0] U1#G84000		
			MOV	H302	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[1] U1#G84001		
			MOV	H0C0A8	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[2] U1#G84002		
			MOV	H1	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[3] U1#G84003		
			MOV	H1	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[6] U1#G84006		
			MOV	H1	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[7] U1#G84007		
			MOV	H0	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[8] U1#G84008		
			MOV	H0	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[9] U1#G84009		
			FMOV	H0	FX5ENETIP_1.bnArea_Class3UCMMOutput utDataArea_D[32] U1#G84032	K707	
			SET		FX5ENETIP_1.bnSet_Class3UCMMApplicationTriggerRequest_Connection_D[1] U1#G6274.0		
			RST		bUCMMCommandSendRequest M100		
(80)	FX5ENETIP_1.bnSts_Class3UCMMApplicationTriggerAcceptance_Connection_D[1] U1#G5278.0	FX5ENETIP_1.bnSts_Class3UCMMApplicationTriggerCompletion_Connection_D[1] U1#G5282.0	EMOV	FX5ENETIP_1.bnArea_Class3UCMMInputDataArea_D[32] U1#G96032	unGetUCMMResponseData[0]	K707	
					D1000		
						RST	FX5ENETIP_1.bnSet_Class3UCMMApplicationTriggerRequest_Connection_D[1] U1#G6274.0
(98)							iEND

(0) Communication start processing

(8) Send processing of command setting and command request of UCMM message communications

(80) Acquire processing of command response of UCMM message communications

10 TROUBLESHOOTING

This section contains an explanation of errors that may occur during communication between FX5-ENET/IP and other devices, and troubleshooting for such errors.

10

10.1 Checking with LEDs

This section describes troubleshooting using the LEDs.

The error status can be determined by the status of the RUN LED, ERROR LED, and MS LED.

RUN LED	ERROR LED	MS LED	Error status ^{*1}	Description
Off	On, flashing	On in red	Major error	An error such as hardware failure or memory failure. The module stops operating.
On	Flashing	On in red	Moderate error	An error caused by an abnormal parameter affecting the module operation. The module stops operating.
On	On	Flashing in red	Minor error	An error caused by improper or inconsistent configuration. The module continues operating.

*1 When multiple errors occur, the error status is displayed in the order of major, moderate, and minor.

When the RUN LED turns off

When the RUN LED turns off after the FX5-ENET/IP is powered on, check the following.

Check item	Action
Is the FX5-ENET/IP mounted correctly?	Securely mount the FX5-ENET/IP on the CPU module.

If the above actions do not solve the problem, perform the hardware test to check for FX5-ENET/IP failure. (☞ Page 119 Hardware Test)

When the ERROR LED turns on or is flashing

When the ERROR LED turns on or is flashing, check the following.

Check item	Action
Does any error occur in the module diagnostics?	Take the actions displayed in the module diagnostics. (☞ Page 109 Module diagnostics)

When the MS LED is flashing in green

When the MS LED is flashing in green, check the following.

Check item	Action
Have the parameters been set by EtherNet/IP Configuration Tool for FX5-ENET/IP?	Set the parameters with EtherNet/IP Configuration Tool for FX5-ENET/IP if they have not been set..
Have the parameters been written normally by EtherNet/IP Configuration Tool for FX5-ENET/IP?	<ul style="list-style-type: none">After writing the parameters, check the message displayed in the "Message window area".Re-write the parameters.

When the MS LED turns on in red or is flashing in red

When the MS LED turns on in red or is flashing in red, check the following.

Check item	Action
Does any error occur in the module diagnostics?	Take the actions displayed in the module diagnostics. (☞ Page 109 Module diagnostics)

When the NS LED is flashing in green

When the NS LED is flashing in green, check the following.

Check item	Action
Have the following buffer memory values been checked? <ul style="list-style-type: none">Class1 communication status 'Data link status' (Un\G6030 to Un\G6031)Connection behavior error status 'Class1 connection 1 to 32 error code' (Un\G6262 to Un\G6293)	<ul style="list-style-type: none">Check whether the buffer memory values are normal.Take the action corresponding to the value of 'Class1 connection 1 to 32 error code' (Un\G6262 to Un\G6325). (☞ Page 149 Connection behavior error status (Un\G6262 to Un\G6293))
Has communication start processing been performed correctly with 'EtherNet/IP communication start request' (Un\G37.b0)?	<ul style="list-style-type: none">Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on.If 'EtherNet/IP data link continuation specification' (Un\G5004) is set to "16: continue EtherNet/IP communication", turn 'EtherNet/IP communication start request' (Un\G37.b0) on again.

When the NS LED is flashing in red

When the NS LED is flashing in red, check the following.

Check item	Action
Is the EtherNet/IP device connected correctly?	<ul style="list-style-type: none">Check whether the operating status of the EtherNet/IP device is normal. (☞ Page 121 EtherNet/IP communications cannot be performed)Check for errors in the line status.The line may be busy, so retry at a later time.

When the SD/RD LED does not turn on during data communication

When the SD/RD LED does not turn on during data communication, check the following.

Check item	Action
Is the ERROR LED on or flashing?	Take the actions displayed in the module diagnostics. (☞ Page 109 Module diagnostics)
Is the Ethernet cable connected correctly?	<ul style="list-style-type: none">Connect the Ethernet cable again.Perform a PING test to check the line status. (☞ Page 118 PING test)
Are the parameter settings correct?	Revise the following items with EtherNet/IP Configuration Tool for FX5-ENET/IP. <ul style="list-style-type: none">Model and name of the connected EtherNet/IP deviceIP address of the connected EtherNet/IP deviceVersion of the registered EDS file
Are there any errors in the program?	<ul style="list-style-type: none">'Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on.Check and correct the data communication program.

If the above actions do not solve the problem, perform the hardware test to check for FX5-ENET/IP failure. (☞ Page 119 Hardware Test)

10.2 Checking the Module Status

The status of FX5-ENET/IP module can be checked by the following methods.

- Module diagnostics
- Ethernet diagnostics
- Checking the buffer memory
- Event history function


Module diagnostics

The following functions can be used in the "Module Diagnostics" window for the FX5-ENET/IP.

Function	Application
Error Information	Displays the details of the errors currently occurring. Click the [Event History] button to check the history of errors that have occurred on the FX5-ENET/IP, errors detected for each module.
Module Information List	Displays various status information of the FX5-ENET/IP.

Error Information


Check the details of the error currently occurring and action to eliminate the error.

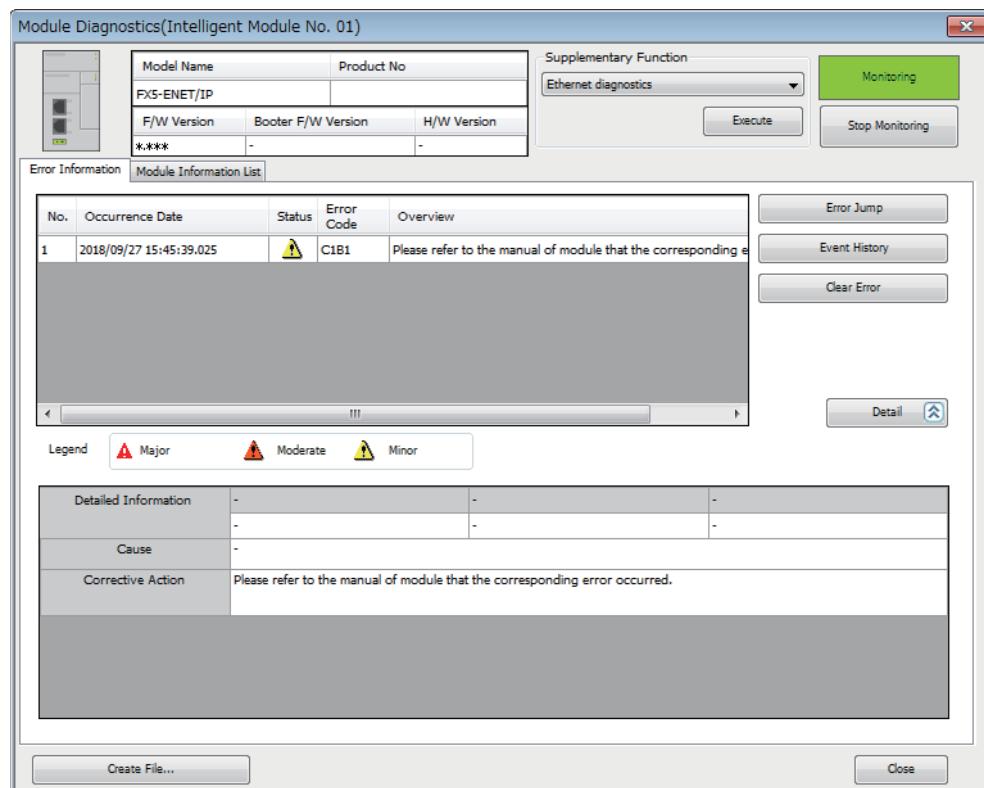

Item	Description
Status	Major: An error such as hardware failure or memory failure. The module stops operating.
	Moderate: An error, such as parameter error, which affects module operation. The module stops operating.
	Minor: An error such as communication failure. The module continues operating.
Detailed Information	Displays detailed information about each error (maximum of three pieces).
Cause	Displays the detailed error causes.
Corrective Action	Action Displays the actions to eliminate the error causes.

Module Information List

Switch to the [Module Information List] tab to check various status information of the FX5-ENET/IP.

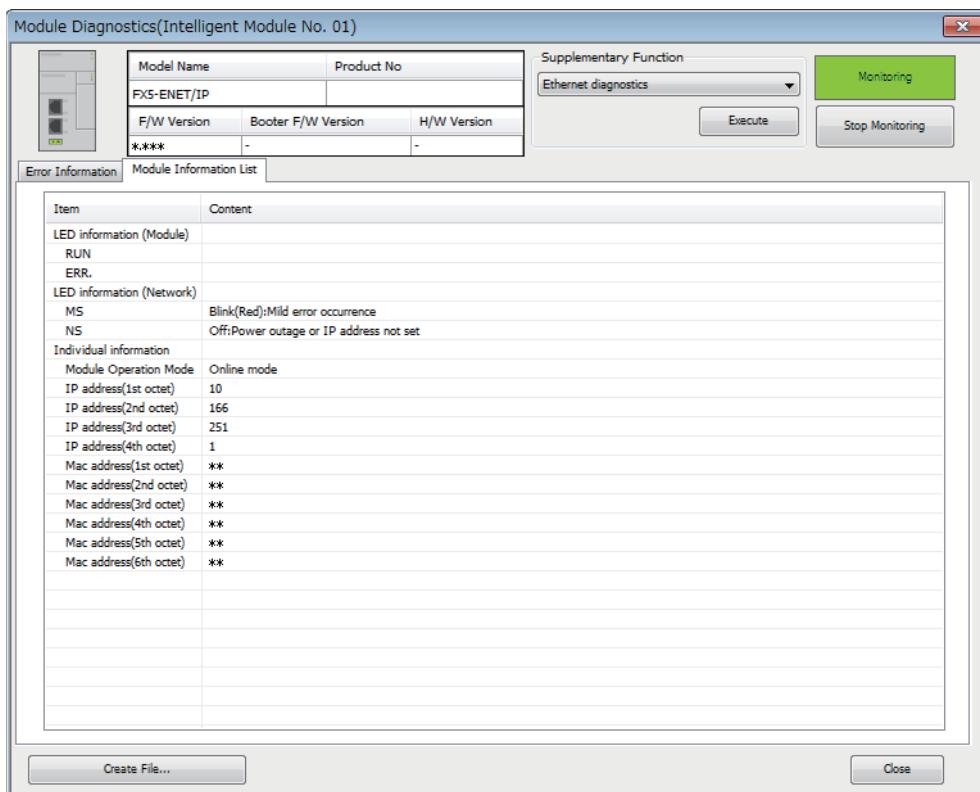


Item	Description	
LED information (Module)	Displays the status of the RUN LED and ERROR LED of the FX5-ENET/IP.	
LED information (Communication) ¹	Displays the status of the MS LED and NS LED of the FX5-ENET/IP.	
Setting information ¹	IP Address (1st Octet)	Displays the IP address of the FX5-ENET/IP.
	IP Address (2nd Octet)	
	IP Address (3rd Octet)	
	IP Address (4th Octet)	
	MAC Address (1st Octet)	Displays the MAC address of the FX5-ENET/IP.
	MAC Address (2nd Octet)	
	MAC Address (3rd Octet)	
	MAC Address (4th Octet)	
	MAC Address (5th Octet)	
	MAC Address (6th Octet)	

¹ An undefined value is stored during hardware test.

Ethernet diagnostics

To check the status of general-purpose Ethernet, parameter setting and communication status, perform the "Ethernet Diagnostics" of GX Works3.

→ [Diagnostics] ⇒ [Ethernet Diagnostics] ⇒ Select the "Module" in the [Target Module Specification].

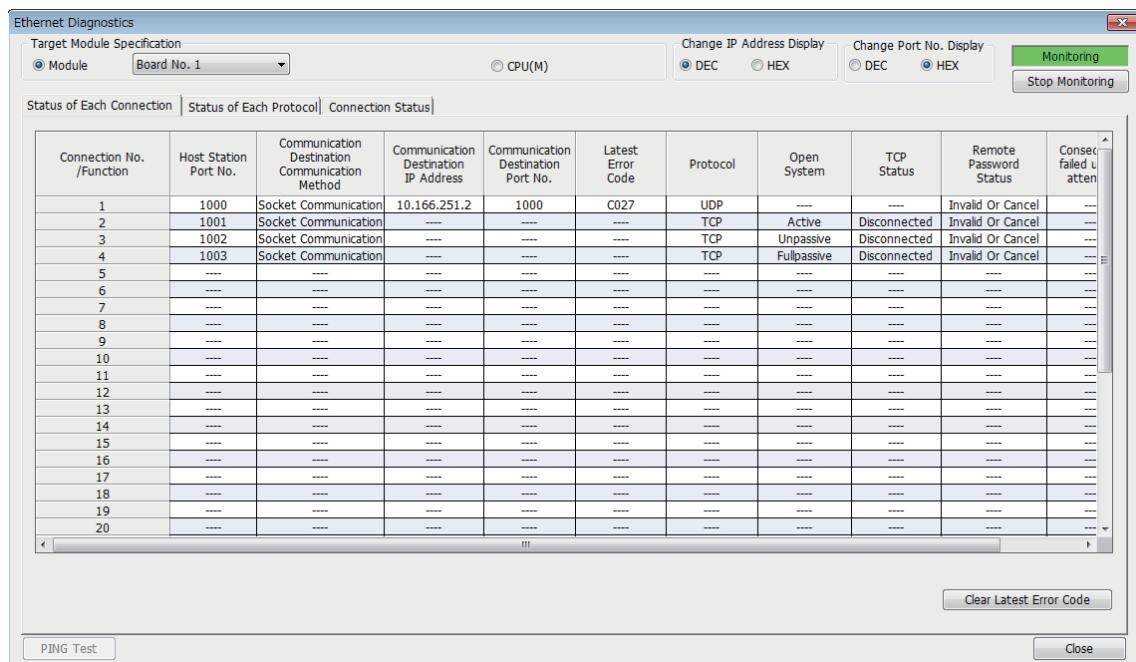


The following functions can be used in the "Ethernet Diagnostics" window for the FX5-ENET/IP.

Function	Application
Status of Each Connection	Displays information concerning status of each connection.
Status of Each Protocol	The total of the send/receive of the packet etc. for each protocol is displayed.
Connection Status	Monitors connection status.

Status of Each Connection

The status of each connection of the FX5-ENET/IP selected.

☞ [Diagnostics] ⇒ [Ethernet Diagnostics] ⇒ Select the "Module" in the [Target Module Specification]. ⇒ Select the [Status of Each Connection] tab.

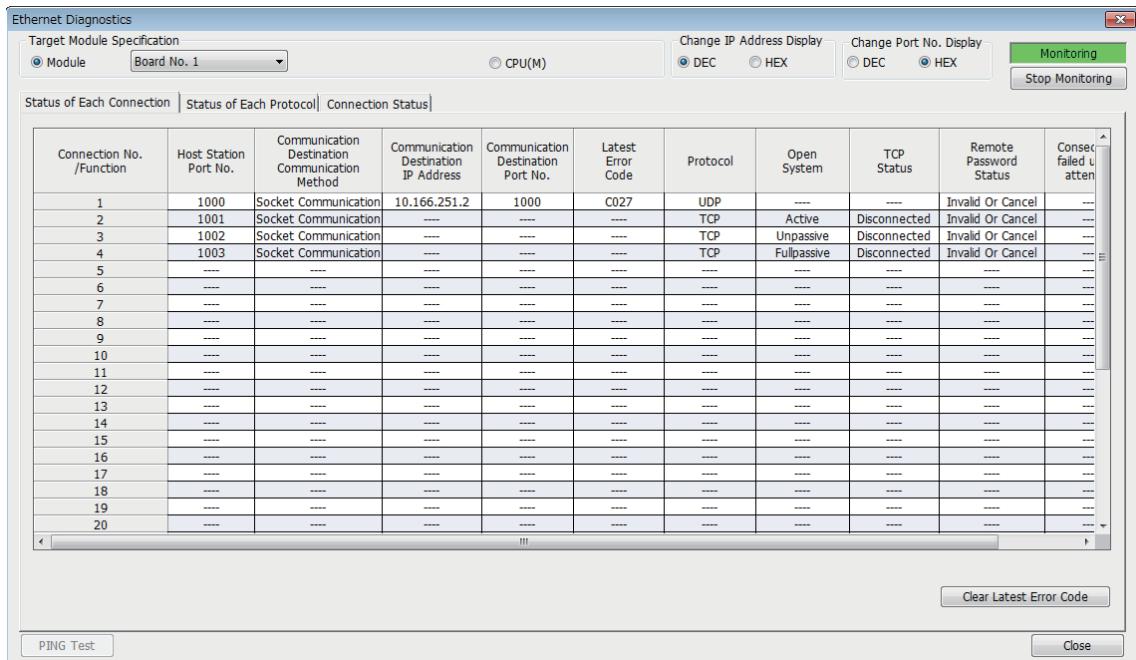


Item	Description
Connection No./Function	Displays the connection number and functions.
Host Station Port No.	Displays the own station port number used.
Communication Destination Communication Method	Displays the communication method.
Communication Destination IP Address	Displays the IP address of the sensor/device to be connected, which is set in the parameter settings.
Communication Destination Port No.	Displays the port number of the sensor/device to be connected, which is set in the parameter settings.
Latest Error Code	Displays the error code that indicates the definition of latest error occurred.
Protocol	Displays the protocol (TCP/IP or UDP/IP).
Open System	Displays the open method (Active, Unpassive, or Fullpassive) when the protocol of the connection is TCP/IP.
TCP Status	Displays the status (open status) of connection with the sensor/device when the protocol of the connection status is TCP/IP.
Remote Password Status	Not supported.
Continuous Unlock Lost Counts	Not supported.

Click the [Clear Latest Error Code] button to clear all the errors displayed in "Latest Error Code" of each connection.

Status of Each Protocol

The total number of packets sent/received by each protocol of the selected FX5-ENET/IP can be checked.

→ [Diagnostics] → [Ethernet Diagnostics] → Select the "Module" in the [Target Module Specification]. → Select the [Status of Each Protocol] tab.

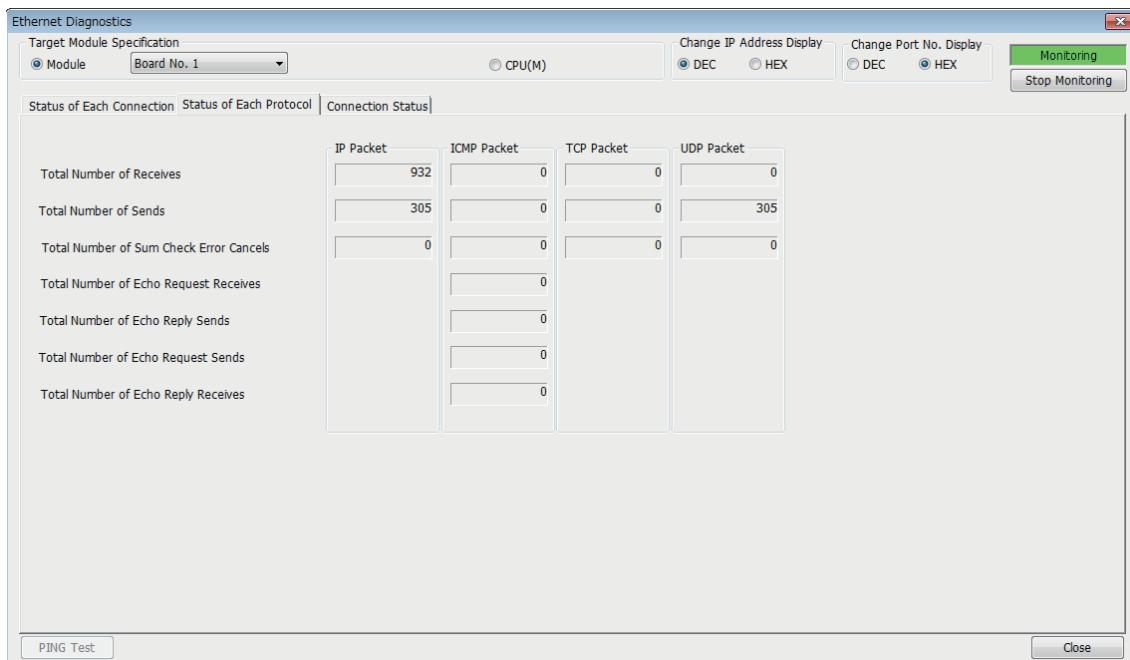


Item	Description	Display range
Total Number of Receives	Displays the total number of received packets.	0 to 4294967295
Total Number of Sends	Displays the total number of sent packets.	0 to 4294967295
Total Number of Sum Check Error Cancels	Not supported.	—
Total Number of Echo Request Receives	Displays the total number of received ICMP echo request packets.	0 to 4294967295
Total Number of Echo Reply Sends	Displays the total number of sent ICMP echo reply packets.	0 to 4294967295
Total Number of Echo Request Sends	Displays the total number of sent ICMP echo request packets.	0 to 4294967295
Total Number of Echo Reply Receives	Displays the total number of received ICMP echo reply packets.	0 to 4294967295

Connection Status

The communication status of the FX5-ENET/IP.

☞ [Diagnostics] ⇒ [Ethernet Diagnostics] ⇒ Select the "Module" in the [Target Module Specification]. ⇒ Select the [Connection Status] tab.

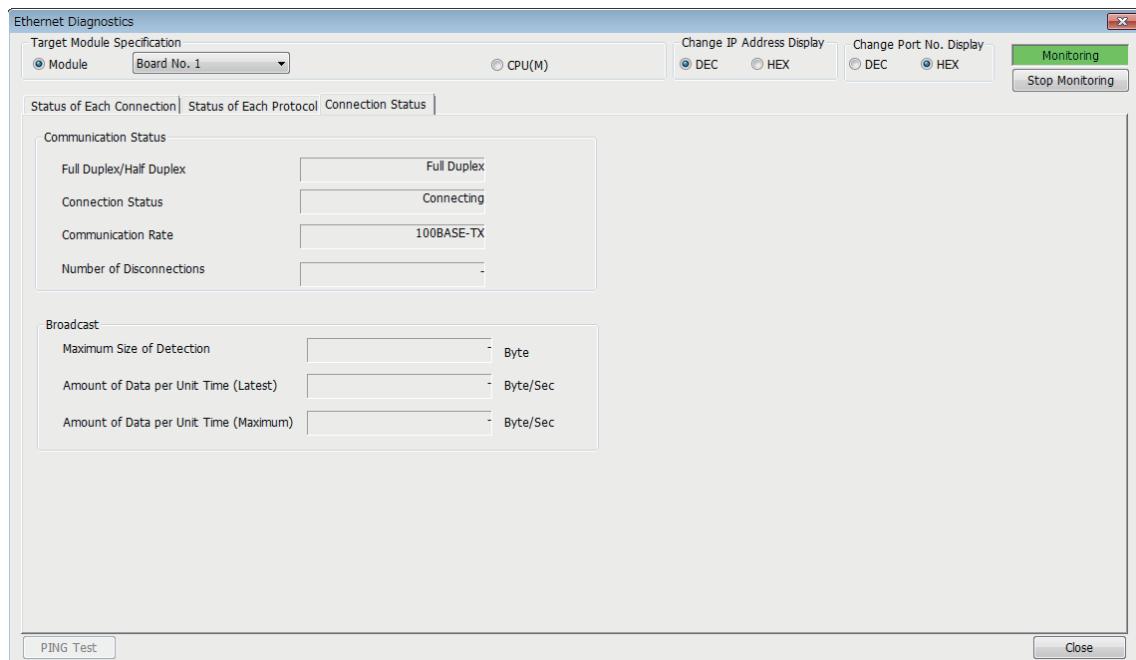

Item	Description	Display range
Communication Status	Full Duplex/Half Duplex	Displays whether the line is full-duplex or half-duplex.
	Connection Status	Displays the cable connection status.
	Communication Rate	Displays the communication speed.
	Number of Disconnections	Not supported.
Broadcast	Maximum Size of Detection	Not supported.
	Amount of Data per Unit Time (Latest)	Not supported.
	Amount of Data per Unit Time (Maximum)	Not supported.

Checking the buffer memory

The buffer memories can be used to check for errors that have occurred in FX5-ENET/IP.

EtherNet/IP communication error

If an error occurs during EtherNet/IP communication, check the following buffer memories.

Buffer memory address	Buffer memory name	Description
Un\G6034 to Un\G6035	Class1 communications status abnormal condition	The bit corresponding to the connection where the EtherNet/IP communication error has occurred will be turned on.
Un\G6262 to Un\G6293	Connection behavior error status	The error code will be saved in the buffer memory corresponding to the connection where the EtherNet/IP communication error has occurred.

For the stored error code, refer to  Page 122 EtherNet/IP communication error.

Module error

If an error occurs in FX5-ENET/IP, check the following buffer memories.

Buffer memory address	Buffer memory name	Description
Un\G29	Latest error code	Stores the latest error code.
Un\G158	Initial status	It is possible to confirm whether the initialization is normally completed.
Un\G159	Initial abnormal code	An error code will be stored when the initialization is abnormally completed.

For the stored error code, refer to  Page 126 Module error.

Ethernet communication error

If an error occurs during general-purpose Ethernet communication, the error code will be stored in the following buffer memory.

Buffer memory address	Buffer memory name	Description
Un\G108 to Un\G139	Error code	Error code of each connection (1 to 32) is stored.

For the stored error code, refer to  Page 129 Ethernet communication error.

Event history function

This function collects errors from FX5-ENET/IP, and keeps them in the SD memory card, and data memory or battery backed built-in RAM of the CPU module.

The event information collected by the CPU module can be displayed on GX Works3 to check the occurrence history in chronological order.

Event type	Classification	Description
System	Error	An error detected by the self diagnostics in FX5-ENET/IP.

For event code, refer to  Page 130 List of Event Code.

Setting procedure

The event history function can be set from the event history setting window of GX Works3. For the setting procedure, refer to the following.

MELSEC iQ-F FX5 User's Manual (Application)

Displaying event history

Access the menu of GX Works3. For details on the operating procedure and how to view the contents, refer to the following.

GX Works3 Operating Manual

10.3 Checking the Network Status

Use the following methods to check the EtherNet/IP network status.

- Network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP
- Checking with the buffer memory
- PING test

Network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP

The network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP can be used to check the connection information of EtherNet/IP devices.

For details on EtherNet/IP Configuration Tool for FX5-ENET/IP, refer to the following.

☞ Page 55 EtherNet/IP Configuration Tool for FX5-ENET/IP

Displaying the connection status of EtherNet/IP device

Enabling diagnostic mode in EtherNet/IP Configuration Tool for FX5-ENET/IP displays the connection status of the EtherNet/IP device.

Operating procedure

1. Connect a personal computer on which EtherNet/IP Configuration Tool for FX5-ENET/IP is installed to the same network as the FX5-ENET/IP.
2. Start EtherNet/IP Configuration Tool for FX5-ENET/IP.
3. Add the EtherNet/IP device to the network configuration settings. (☞ Page 98 Procedure for Registering EtherNet/IP Devices)
4. Switch EtherNet/IP Configuration Tool for FX5-ENET/IP to the online state.

☞ [File] ⇒ [Go Online]


5. Write the set parameters to the FX5-ENET/IP.

☞ [File] ⇒ [Download]

6. Enable diagnostic mode.

☞ [Device] ⇒ [Diagnostic]

 7. When the diagnostic mode is enabled, the connection status of EtherNet/IP devices is displayed in the network configuration setting.

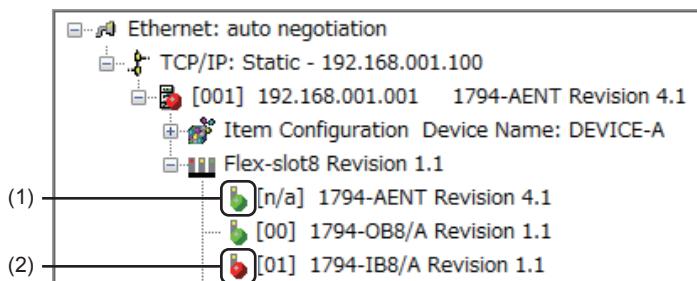

(1) An EtherNet/IP device is connected, and EtherNet/IP communications are in progress.

(2) An EtherNet/IP device is connected, but EtherNet/IP communications are not in progress.

To check the connection status of EtherNet/IP devices, the actual network configuration needs to be written to the FX5-ENET/IP with EtherNet/IP Configuration Tool for FX5-ENET/IP. When the diagnostic mode is enabled, the network configuration setting cannot be changed.



To start EtherNet/IP communications and network diagnostics of EtherNet/IP Configuration Tool for FX5-ENET/IP, 'EtherNet/IP communication start request' (Un\G37.b0) must be turned off and on and 'EtherNet/IP communication in process' (Un\G35.b0) must be in the ON state.

Checking the connection information of EtherNet/IP devices

This section describes how to check the connection information of EtherNet/IP devices.

Setting data


1. Display the EtherNet/IP device setting window.

☞ Select the EtherNet/IP display in the network configuration settings. ⇒ [Device] ⇒ [Properties]

2. Select the [Diagnostic] tab.

3. Select an EtherNet/IP device to display its connection information. For details on the window, refer to the following.

☞ Page 92 [Diagnostic] tab

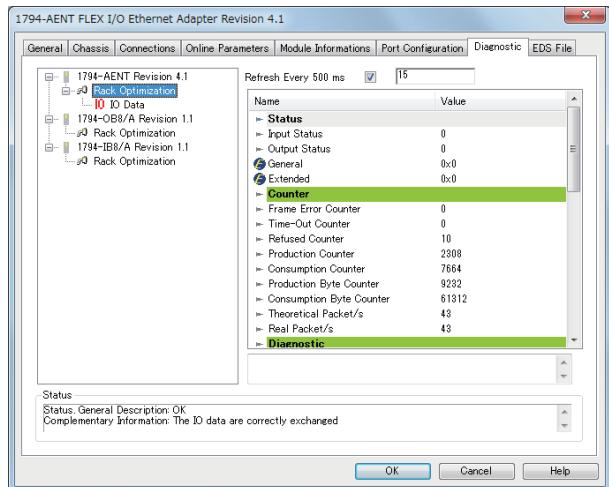

10

Checking the I/O data of EtherNet/IP devices

This section describes how to check the I/O data of EtherNet/IP devices.

Operating procedure


1. Display the EtherNet/IP device setting window.

☞ Select the EtherNet/IP display in the network configuration settings. ⇒ [Device] ⇒ [Properties]

2. Select the [Diagnostic] tab.

3. I/O data information is displayed when "IO Data" is selected. For details on the window, refer to the following.

☞ Page 92 [Diagnostic] tab

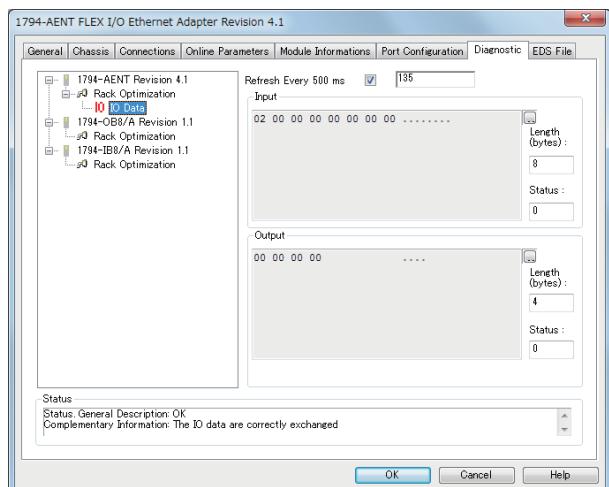

Checking with the buffer memory

The status of the Class1 communication connections and the error details can be checked with the following buffer memory areas.

- Class1 communication status 'Data link status' (Un\G6030 to Un\G6031)
- Class1 communication status 'Error status' (Un\G6034 to Un\G6035)
- Connection behavior error status 'Class1 connection 1 to 32 error code' (Un\G6262 to Un\G6293)

Status of each connection

The connection status can be checked by checking the bit corresponding to each connection in 'Data link status' (Un\G6030 to Un\G6031), and 'Error status' (Un\G6034 to Un\G6035).

'Data link status' (Un\G6030 to Un\G6031)	'Error status' (Un\G6034 to Un\G6035)	Status of each connection
Off	Off	Not connected or data link not in operation.
On	Off	Data link in operation. No error has occurred.
Off	On	Error has occurred with data link not in operation.
On	On	Error has occurred with data link in operation.

No error is generated for combinations other than those listed above. For details on the Class1 communication status, refer to the following.

☞ Page 149 Class1 communication status

Error details of each connection

The error code of each connection can be checked with 'Class1 connection 1 to 32 error code' (Un\G6262 to Un\G6293).

For details on the buffer memory, refer to the following.

☞ Page 149 Connection behavior error status


For error code descriptions, refer to the following.

☞ Page 122 List of Error Codes

PING test

A PING test is used to check that an EtherNet/IP device exists on the same EtherNet/IP network.

The FX5-ENET/IP sends a packet to the EtherNet/IP device to check its existence (an echo request). Then, the FX5-ENET/IP checks whether communication is possible by seeing whether a response (an echo response) is returned.

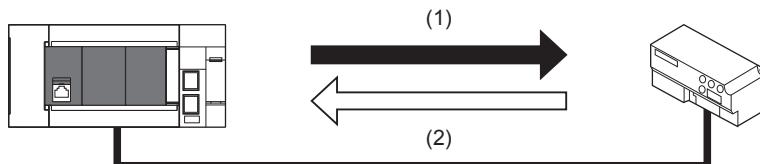

(1) Echo request

(2) Echo response

Check method

The following methods are available for checking the PING test.

■Checking from EtherNet/IP Configuration Tool for FX5-ENET/IP

Use EtherNet/IP Configuration Tool for FX5-ENET/IP to execute a PING test.

For details, refer to the following.

☞ Page 72 [Ping] tab

☞ Page 82 [General] tab

10.4 Hardware Test

This section describes how to perform a test related to hardware, such as a ROM/RAM of the FX5-ENET/IP.

Restriction

- During the hardware test, values in the buffer memory cannot be referred from the GX Works3 or the program.
- Do not change the operating status of the CPU module during the hardware test. If the operating status of the CPU module is changed, the module major error occurs in the CPU module.

Operating procedure

1. Set the FX5-ENET/IP to the hardware test mode using the GX Works3.

 [Navigation window] \Rightarrow [Parameter] \Rightarrow [Module Information] \Rightarrow [FX5-ENET/IP] \Rightarrow [Indispensable Setting] \Rightarrow [Mode Settings] \Rightarrow Select "Hardware Test"

2. When a cable is connected to the Ethernet port of FX5-ENET/IP, disconnect it.

3. Set the CPU module (FX5-ENET/IP) to the STOP state and write parameters.

4. Power off and on the system or reset the CPU module (FX5-ENET/IP).

5. The hardware test is automatically executed.

The following table shows the LED indications of the FX5-ENET/IP for the hardware test.

Status	RUN LED	ERROR LED
During hardware test execution	Flashing	Off
Hardware test completed successfully	On	Off
Hardware test completed with an error	On	On

6. When the test completed successfully, set the FX5-ENET/IP to online mode using the GX Works3.

 [Navigation window] \Rightarrow [Parameter] \Rightarrow [Module Information] \Rightarrow [FX5-ENET/IP] \Rightarrow [Indispensable Setting] \Rightarrow [Mode Settings] \Rightarrow Select "Online"

Write parameters and power off and on the system or reset the CPU module (FX5-ENET/IP).

7. When the test completed with an error, check that adequate measures to reduce noise are taken for the programmable controller system and retry the hardware test. If the test still completes with an error, a hardware failure may have occurred on the FX5-ENET/IP. Please consult your local Mitsubishi representative.

10.5 Troubleshooting by Symptom

The troubleshooting measures for each symptom during EtherNet/IP communication are shown below. If an error has occurred in the FX5-ENET/IP, identify the error cause using the GX Works3. (☞ Page 109 Checking the Module Status)

Communications with EtherNet/IP devices cannot be performed

The following table lists the actions to be taken if communications with EtherNet/IP devices cannot be performed.

Check item	Action
Is the RUN LED of the FX5-ENET/IP off?	If the RUN LED is off, reset the CPU module. If resetting does not cause the RUN LED to turn on, a hardware failure may have occurred. Replace the FX5-ENET/IP and restart the connected EtherNet/IP device.
Is the Ethernet cable connected correctly?	<ul style="list-style-type: none">• Connect the Ethernet cable again.• Perform a PING test to check the connection with the EtherNet/IP device.
Is the EtherNet/IP device compatible with the FX5-ENET/IP communication functions (Class1 communications, Class3 communications, and UCMM communications)?	Check the specifications of the EtherNet/IP device.
Is the power supply of the EtherNet/IP device on?	Turn on the power supply of the EtherNet/IP device.
Has an error occurred on the EtherNet/IP device, switching hub, or a similar device?	If an error has occurred on the EtherNet/IP device, switching hub, or a similar device, check the manual of each device.
Is the IP address setting of the EtherNet/IP device correct?	Perform a PING test to check the connection with the EtherNet/IP device. (☞ Page 118 PING test)
Is the mode setting of the FX5-ENET/IP a value other than "Online"?	Set the mode setting of the FX5-ENET/IP to "Online" using the GX Works3.
Has the initial processing completed successfully?	Check whether communication is starting after 'Module ready' (Un\G34.b0) turns on.
Has communication start processing been performed correctly with 'EtherNet/IP communication start request' (Un\G37.b0)?	<ul style="list-style-type: none">• 'Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on.• If 'EtherNet/IP data link continuation specification' (Un\G5004) is set to "16: continue EtherNet/IP communication", turn 'EtherNet/IP communication start request' (Un\G37.b0) on again.
Is the EtherNet/IP device connected ahead of the router?	Communication through the router cannot be established. Reexamine the connection of the EtherNet/IP device.
Has a timeout error occurred on the connection that performs communications normally?	Depending on the EtherNet/IP device used, the connection that performs communications normally may be disconnected and a timeout error may occur after the time specified by Encapsulation Inactivity Timeout has elapsed. Therefore, set Encapsulation Inactivity Timeout to 0 (invalid). (☞ Page 158 TCP/IP Interface)

If the above actions do not solve the problem, perform the hardware test to check for hardware failure. (☞ Page 119 Hardware Test)

FX5-ENET/IP cannot connect to EtherNet/IP Configuration Tool for FX5-ENET/IP

The following table lists the actions to be taken if the FX5-ENET/IP cannot connect to EtherNet/IP Configuration Tool for FX5-ENET/IP (personal computer).

Check item	Action
Are the IP address settings for the FX5-ENET/IP and the personal computer to connect correct?	Set the IP addresses so that they have the same class and subnet address.
Is the RUN LED of the FX5-ENET/IP off?	If the RUN LED is off, reset the CPU module. If resetting does not cause the RUN LED to turn on, a hardware failure may have occurred. Replace the FX5-ENET/IP and restart the connected EtherNet/IP device.
Can network diagnostics be performed? (☞ Page 116 Checking the Network Status)	Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on.

If the above actions do not solve the problem, perform the hardware test to check for hardware failure. (☞ Page 119 Hardware Test)

EtherNet/IP communications cannot be performed

The following table lists the actions to be taken if EtherNet/IP communications (Class1 instance communications, Class3 message communications, UCMM message communications) cannot be performed.

■Class1 instance communications

Check item	Action
Has the EtherNet/IP device to connect been registered in EtherNet/IP Configuration Tool for FX5-ENET/IP?	If the EtherNet/IP device to connect is not displayed in the network configuration setting of EtherNet/IP Configuration Tool for FX5-ENET/IP, add the device. (☞ Page 98 Procedure for Registering EtherNet/IP Devices)
Has communication start processing been performed correctly with 'EtherNet/IP communication start request' (Un\G37.b0)?	<ul style="list-style-type: none"> 'Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on. 'If 'EtherNet/IP data link continuation specification' (Un\G5004) is set to "16: continue EtherNet/IP communication", turn 'EtherNet/IP communication start request' (Un\G37.b0) on again.
Is the instance ID specified correctly?	<p>Referring to the manual of the EtherNet/IP device connected, check the parameters of the originator to confirm if the specified instance ID is available for receiving request.</p> <p>When the specified instance ID is not available for receiving request, change the instance ID and write the parameter again.</p>
Is input data stored in 'Class1 communications input data area' (Un\G12000 to Un\G35999)?	Check that the unit FB (Class1 communication input data acquisition) is used.
Is output data set in 'Class1 communications output data area' (Un\G60000 to Un\G83999)?	Check that the unit FB (Class1 communication output data setting) is used.

■Class3 message communications

Check item	Action
Are the commands received from the EtherNet/IP device supported by the FX5-ENET/IP?	<p>Check that the commands supported by the FX5-ENET/IP are transmitted.</p> <p>☞ Page 153 Details of Message Communication Support Command</p>
Has communication start processing been performed correctly with 'EtherNet/IP communication start request' (Un\G37.b0)?	<ul style="list-style-type: none"> 'Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on. 'If 'EtherNet/IP data link continuation specification' (Un\G5004) is set to "16: continue EtherNet/IP communication", turn 'EtherNet/IP communication start request' (Un\G37.b0) on again.

■UCMM message communications

Check item	Action
Are the settings of the commands to request correct?	Check the value set in 'UCMM communications output data area' (Un\G84000 to Un\G107999).
Has communication start processing been performed correctly with 'EtherNet/IP communication start request' (Un\G37.b0)?	<ul style="list-style-type: none"> 'Check that 'EtherNet/IP communication start request' (Un\G37.b0) is on. 'If 'EtherNet/IP data link continuation specification' (Un\G5004) is set to "16: continue EtherNet/IP communication", turn 'EtherNet/IP communication start request' (Un\G37.b0) on again.

10.6 List of Error Codes

This section lists the error codes, error details and causes, and actions for the errors that occur in the processing for data communications between the FX5-ENET/IP and external devices or that are caused by processing requests from the CPU module on the own station.

The FX5-ENET/IP has the following error codes.

Type	Error code	Reference
EtherNet/IP communication error	102H to 2FFH	Page 122
Module error	1080H to 3FA1H	Page 126
Ethernet communication error	C027H to C035H	Page 129

EtherNet/IP communication error

The EtherNet/IP communication error codes are stored in 'Class1 connection 1 to 32 error code' (Un\G6262 to Un\G6293).

The Class1 communication status 'Error status' (Un\G6034 to Un\G6035) bit corresponding to the connection where the error has occurred is turned on.

Error code	Error name	Error details and causes	Action
102H	Access not possible	An error was detected in the memory.	<ul style="list-style-type: none">Take measures to reduce noise.Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module. Please consult your local Mitsubishi representative.
103H	Parameter error	A parameter error was detected.	<ul style="list-style-type: none">Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again.When performing UCMM communications, check whether the setting details of the UCMM request area are correct.
104H to 105H	Connection timeout	A timeout occurred in the connection with the external device.	<ul style="list-style-type: none">Check whether the operating status of the external device is normal.Check for errors in the line status.The line may be busy, so retry at a later time.The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
106H	Target device invalid	The target device does not exist.	<ul style="list-style-type: none">Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again.If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
107H	Memory error	An error was detected in the memory.	<ul style="list-style-type: none">Take measures to reduce noise.Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
10AH	Connection start error	Production processing failed to start.	<ul style="list-style-type: none">Take measures to reduce noise.Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
10BH	Connection start error	Consumption processing failed to start.	<ul style="list-style-type: none">Take measures to reduce noise.Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
10CH	Insufficient memory	There is insufficient memory available for connection processing.	<ul style="list-style-type: none">Retry at a later time.Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.

Error code	Error name	Error details and causes	Action
10EH to 10FH	TCP error	An error has occurred in TCP communications.	<ul style="list-style-type: none"> • Retry at a later time. • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
110H	TCP error	Socket generation has failed.	<ul style="list-style-type: none"> • Retry at a later time. • Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
112H	TCP error	Incorrect send data has been specified.	<ul style="list-style-type: none"> • Take measures to reduce noise. • Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
113H	TCP error	There is insufficient cache memory available.	<ul style="list-style-type: none"> • Retry at a later time. • Restart the FX5-ENET/IP.
114H	TCP error	Failed to set the socket option (non-blocking).	<ul style="list-style-type: none"> • Take measures to reduce noise. • Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module. Please consult your local Mitsubishi representative.
115H	TCP error	The frame size has exceeded the maximum size.	<ul style="list-style-type: none"> • Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again. • When performing UCMM communications, check whether the setting details of the UCMM request area are correct.
119H	CIP error	A timeout occurred in the connection with the external device.	<ul style="list-style-type: none"> • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
11AH	CIP error	An incorrect Forward Open service request has been received from the external device.	<ul style="list-style-type: none"> • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
11BH	CIP error	Incorrect network parameters (originator to target) have been received from the external device.	<ul style="list-style-type: none"> • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
11CH	CIP error	Incorrect network parameters (target to originator) have been received from the external device.	<ul style="list-style-type: none"> • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
11DH	CIP error	An incorrect UDP port specification has been received from the external device.	<ul style="list-style-type: none"> • Check whether the external device is set to use UDP port number 2222 for EtherNet/IP communications. • Check whether the operating status of the external device is normal. • Check for errors in the line status. • The line may be busy, so retry at a later time. • The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
11EH	CIP error	Participation in a multicast group has failed.	<ul style="list-style-type: none"> • Take measures to reduce noise. • Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.

Error code	Error name	Error details and causes	Action
11FH	Memory error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
120H	CIP error	The available resources are insufficient.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
121H	Connection error	The connection has stopped.	<ul style="list-style-type: none"> The line may be busy, so retry at a later time. The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
124H	Connection error	The connection has been set to disabled.	Check the parameter set with EtherNet/IP Configuration Tool for FX5-ENET/IP, and rewrite the parameter to the module.
126H	EPIC error	An incorrect RegisterSession command has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
128H	EPIC error	An incorrect request frame has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
129H	EPIC error	An incorrect session handle has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
12AH	EPIC error	Request data with an incorrect size has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
12BH	EPIC error	Request data including an unsupported protocol version has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
12DH	EPIC error	Request data with an incorrect size has been received.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
12EH	Disconnected error	Communications have been disconnected.	Check whether 'EtherNet/IP communication start request' (Un\G37.b0) is on.
12FH	System error	The connections have been disconnected.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
130H to 131H	Connection error	Forward Close has been received from the external device.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
132H	Memory error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
133H	Disconnected error	Communications have been disconnected.	Check whether 'EtherNet/IP communication start request' (Un\G37.b0) is on.
134H	Connection error	A timeout occurred in the connection with the external device.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.
135H	CIP error	A timeout occurred in the connection with the external device.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time. The external device may not be able to send data at the specified RPI due to a high communication load, so specify a larger RPI and connect again.
136H	Connection error	A timeout occurred in the connection with the external device.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time.

Error code	Error name	Error details and causes	Action
137H to 138H	Memory error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
17FH	System error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module. Please consult your local Mitsubishi representative.
180H to 182H	CIP Extended error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.
183H	CIP Extended error	The external device cannot find the connection to close.	<p>Check the following items, and then restart the EtherNet/IP communications.</p> <ul style="list-style-type: none"> Is the operating status of the external device normal? Is the line status normal?
184H to 1A9H	CIP Extended error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.
1AAH	CIP Extended error	An error notification has been received from the external device.	<ul style="list-style-type: none"> Check whether the operating status of the external device is normal. Check for errors in the line status. The line may be busy, so retry at a later time. Investigate the conditions under which the external device makes a notification for this error, and then take the appropriate measures.
1ABH to 1B3H	CIP Extended error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.
1B4H	CIP Extended error	An error notification has been received from the external device.	<ul style="list-style-type: none"> Check whether the EtherNet/IP device set with EtherNet/IP Configuration Tool for FX5-ENET/IP matches the external device. Check whether the EDS file being used matches the external device.
1B5H to 1C7H	CIP Extended error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.
1FFH	CIP Extended error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.
200H to 2FFH	CIP General error	An error notification has been received from the external device.	Refer to documentation such as the manuals of the external device to check the conditions under which a notification is made for this error and the action to take.

Module error

Error codes when a module error occurs are classified into major error, moderate error, and minor error, and can be checked in the [Error Information] tab of the "Module Diagnostics" window of the FX5-ENET/IP. ([Page 109 Module diagnostics](#))
The error codes are stored in 'Latest error code' (Un\G29).

Error code	Error name	Error details and causes	Action
1080H	ROM write count error	The number of writes to ROM exceeded 100000. (Number of writes > 100000)	Replace the module.
1810H	IP address change fails	IP address change fails.	Execute the IP address change function again.
1811H to 1812H	Parameter write fails	An error has occurred during writing of parameters.	Rewrite the EtherNet/IP parameters with EtherNet/IP Configuration Tool for FX5-ENET/IP.
1900H	Hardware error	An memory check error has occurred.	<ul style="list-style-type: none"> Execute the IP address change function again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1901H to 1902H	Hardware error	An memory check error has occurred.	<ul style="list-style-type: none"> Execute the hardware test. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1903H	Hardware error	An memory check error has occurred.	<ul style="list-style-type: none"> Execute Set Attribute for the CIP object^{*1} with Online Action of EtherNet/IP Configuration Tool for FX5-ENET/IP. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1904H	Hardware error	An memory check error has occurred.	<ul style="list-style-type: none"> Rewrite the EtherNet/IP parameters (EipConfData.BIN), or configuration information (configuration.apa) with EtherNet/IP Configuration Tool for FX5-ENET/IP. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1920H ^{*2}	IP address change fails	IP address setting or other (Un\G50 to Un\G55) value exceeds the setting range.	Correct the IP address setting or other (Un\G50 to Un\G55) value.
1921H ^{*3}	IP address change fails	Write request and clear request (Un\G56 and Un\G58) turned from OFF to ON simultaneously.	Check if write request and clear request (Un\G56 and Un\G58) turned from OFF to ON simultaneously.
1D80H	Error during execution of dedicated instruction	An instruction other than executable dedicated instruction numbers has been specified.	Check that the dedicated instruction is executable. If it is not executable, correct.
1D83H	Error during execution of dedicated instruction	The dedicated instruction request data from the CPU module was discarded because the data size was abnormal.	<ul style="list-style-type: none"> Execute the write to program again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1D84H	Error during execution of dedicated instruction	The dedicated instruction request data from the CPU module cannot be normally input.	<ul style="list-style-type: none"> Execute the write to program again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1D85H	Error during execution of dedicated instruction	A timeout error occurred in the dedicated instruction response data, and the data was discarded.	<ul style="list-style-type: none"> Reset the CPU module, and execute again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1DC4H	IP address change fails	IP address change fails.	<ul style="list-style-type: none"> Execute the IP address change function again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1E10H	EtherNet/IP communication error	An error was detected in the parameters set with EtherNet/IP Configuration Tool for FX5-ENET/IP.	<ul style="list-style-type: none"> Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.

Error code	Error name	Error details and causes	Action
1E11H	EtherNet/IP communication error	An error was detected in the parameters set with EtherNet/IP Configuration Tool for FX5-ENET/IP.	<ul style="list-style-type: none"> • Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again. • If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1E12H	EtherNet/IP communication error	An error was detected in the parameters set with EtherNet/IP Configuration Tool for FX5-ENET/IP.	<ul style="list-style-type: none"> • Use EtherNet/IP Configuration Tool for FX5-ENET/IP to write the parameters to the module again. • If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1E13H	EtherNet/IP communication error	It was not possible to stop EtherNet/IP communications.	<ul style="list-style-type: none"> • Check the settings of the connection with the external device. • If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
1E14H	EtherNet/IP communication error	It was not possible to stop EtherNet/IP communications.	<ul style="list-style-type: none"> • Check the settings of the connection with the external device. • If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
2160H	IP address duplication detection	Overlapping IP addresses were detected.	Correct the IP address.
2C80H to 2C82H	Parameter error	A parameter error in external device configuration was detected.	<ul style="list-style-type: none"> • Check the setting of External device configuration in the FX5-ENET/IP module parameters. • If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the module on which the error occurred. Please consult your local Mitsubishi representative.
2CF0H	CPU module error	A error of CPU module was detected.	Check the details of the error of the CPU module with the module diagnostics of GX Works3, and take measures.
2DA0H to 2DA1H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the number of connected units in external device configuration in the FX5-ENET/IP module parameters.
2DA2H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the communication method in external device configuration in the FX5-ENET/IP module parameters.
2DA3H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the protocol in external device configuration in the FX5-ENET/IP module parameters.
2DA4H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the model name in external device configuration in the FX5-ENET/IP module parameters.
2DA5H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the fixed buffer transmission in external device configuration in the FX5-ENET/IP module parameters.
2DA6H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the IP address in external device configuration in the FX5-ENET/IP module parameters.
2DA7H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the IP address (IPv6) in external device configuration in the FX5-ENET/IP module parameters.
2DA8H	Parameter error	A parameter error in external device configuration was detected.	Reexamine and correct the setting of the existence confirmation in external device configuration in the FX5-ENET/IP module parameters.
2DA9H to 2DAAH	Parameter error	A parameter error in external device configuration was detected.	Check the setting of External device configuration in the FX5-ENET/IP module parameters.
2DB0H	Request data error	Request and setting data error	Check the content of the specified request data.
3030H	Hardware error	Hardware error	Please consult your local Mitsubishi representative.
3050H	Socket communication fails	Socket communication send message has failed.	<ul style="list-style-type: none"> • Check the operation of the external device. • Check if the connection cable is disconnected.
3052H	Link-down	A link-down has occurred due to disconnection of the network cable connected to an external device.	<ul style="list-style-type: none"> • Check the operation of the external device. • Check if the connection cable is disconnected.
3053H	Timeout	A time-out has occurred in keep-alive mode.	<ul style="list-style-type: none"> • Check the operation of the external device. • Check if the connection cable is disconnected.
3055H	Socket communication receive fails	Socket communication send message has failed.	<ul style="list-style-type: none"> • Check the operation of the external device or switching hub. • Since there may be congestion of packets on the line, send data after a certain period of time. • Check if the connection cable is disconnected. • Check that there is no connection failure with the switching hub.

Error code	Error name	Error details and causes	Action
3056H	Socket communication buffer full	The socket communication buffer for receiving has no space.	Read out the received data using the dedicated instruction.
3095H	Parameter error	The number of target IP address setting is outside the range.	Please consult your local Mitsubishi representative.
3096H	Parameter error	The start target IP address setting is outside the range.	Please consult your local Mitsubishi representative.
3097H	Parameter error	The complete target IP address setting is outside the range.	Please consult your local Mitsubishi representative.
3098H	Parameter error	The start target IP address setting is outside the range > the complete target IP address setting is outside the range	Please consult your local Mitsubishi representative.
3099H	Parameter error	The number of excluded IP address setting is outside the range.	Please consult your local Mitsubishi representative.
309AH	Parameter error	The target IP address setting number is outside the range.	Please consult your local Mitsubishi representative.
309BH	Parameter error	The excluded IP address number is outside the range.	Please consult your local Mitsubishi representative.
309CH	Parameter error	The excluded IP address is outside the range.	Please consult your local Mitsubishi representative.
309DH to 309EH	Parameter error	Target module support error	Please consult your local Mitsubishi representative.
3CF1H	Hardware error	An error of hardware was detected.	Please consult your local Mitsubishi representative.
3E30H to 3E42H	Hardware error	An error of hardware was detected.	Please consult your local Mitsubishi representative.
3E50H to 3E56H	Hardware error	An error of hardware was detected.	Please consult your local Mitsubishi representative.
3E60H to 3E63H	Hardware error	An error of hardware was detected.	Please consult your local Mitsubishi representative.
3F92H	Memory error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the CPU module. Please consult your local Mitsubishi representative.
3FA1H	Memory error	An error was detected in the memory.	<ul style="list-style-type: none"> Take measures to reduce noise. Reset the CPU module, and then switch it to RUN mode. If the error occurs again even after the above action is taken, the possible cause is a hardware failure of the CPU module. Please consult your local Mitsubishi representative.

*1 Class: 0x00F5

Instanc: 1

Attribute: 13

Name: Encapsulation Inactivity Timeout

*2 Cannot be checked in the "Module Diagnostics" window and 'Latest error code' (Un\G29). The error codes are stored only in 'IP address storage area write error code' (Un\G61).

*3 Cannot be checked in the "Module Diagnostics" window and 'Latest error code' (Un\G29). The error codes are stored only in 'IP address storage area clear error code' (Un\G62).

Ethernet communication error

The Ethernet communication error codes can be checked in "Status of Each Connection" on the "Ethernet Diagnostics" screen of FX5-ENET/IP. (☞ Page 112 Status of Each Connection) The error codes will be stored in 'Error code' (Un)\G108 to Un\G139).

Error code	Error name	Error details and causes	Action
C012H	Error during execution of dedicated instruction	The port number already used in the open completion connection of TCP/IP is set.	Check and correct the port number of the Ethernet module and the target device.
C013H	Error during execution of dedicated instruction	The port number used in the open completion connection is set during the open processing of UDP/IP.	Check and correct the port number of the Ethernet module.
C017H	Error during execution of dedicated instruction	The connection was not established by the open processing of the TCP connection.	<ul style="list-style-type: none"> Check the operation of the target device. Check the open processing of the target device. Correct the open setting of the communication parameter. Check the port number of the Ethernet module, the IP address/port number of the target device, and the open method. Check if the connection cable is disconnected.
C020H	Error during execution of dedicated instruction	The data length exceeds an allowable range.	<ul style="list-style-type: none"> Correct the data length. If the amount of data to send exceeds the prescribed amount, divide and send the data.
C027H	Error during execution of dedicated instruction	Socket communication send message has failed.	<ul style="list-style-type: none"> Check the operation of the external device or switching hub. Since there may be congestion of packets on the line, send data after a certain period of time. Check if the connection cable is disconnected. Check that there is no connection failure with the switching hub. Execute the communication status test, and if the test was completed with an error, take the corrective action. Execute the module communication test, and check that there is no failure in the module. Check the IP address specified as the target.
C029H	Error during execution of dedicated instruction	Description of control data is not correct.	Correct the descriptions of the control data.
C035H	Ethernet communication error	The existence of the external device could not be confirmed within the response monitor timer value.	<ul style="list-style-type: none"> Check the operation of the external device. Reexamine and change the set values for existence confirmation. Check if the connection cable is disconnected.
C04CH	Ethernet communication error	The data cannot be sent since the internal buffer such as IP header buffer has no space.	Send the same data again, and check the receiving of the response.
C1A6H	Ethernet communication error	The specification of the connection No. is not correct.	Specify 1 to 32 for the connection No.

10.7 List of Event Code

The following table lists events that occur in the FX5-ENET/IP.

Event code	Event type	Event category	Event status	Detected event	Detailed information		
					Detailed information 1	Detailed information 2	Detailed information 3
1080	System	Error	Major	ROM write count error	Number of times information ^{*1}	—	—
1810	System	Error	Minor	IP address change fails	—	—	—
1811	System	Error	Minor	Flash memory write error (EtherNet/IP parameter)	—	—	—
1812	System	Error	Minor	FTP response send timeout (EtherNet/IP parameter transfer)	—	—	—
1900	System	Error	Minor	Flash memory check error (IP address change function sector)	—	—	—
1901	System	Error	Minor	Flash memory check error (Total number sector of writes to memory Flash ROM)	—	—	—
1902	System	Error	Minor	Flash memory check error (Flash memory test sector)	—	—	—
1903	System	Error	Minor	Flash memory check error (TCP Inactivity Timeout sector)	—	—	—
1904	System	Error	Minor	Flash memory check error (EtherNet/IP parameter sector)	—	—	—
1E10	System	Error	Minor	EtherNet/IP communication error	—	—	Failure information
1E11	System	Error	Minor	EtherNet/IP communication error	—	—	—
1E12	System	Error	Minor	EtherNet/IP communication error	—	—	—
1E13	System	Error	Minor	EtherNet/IP communication error	—	—	—
1E14	System	Error	Minor	EtherNet/IP communication error	—	—	—
2160	System	Error	Moderate	IP address duplication detection	—	—	Failure information
2C80	System	Error	Moderate	Receive parameter sum value error	—	—	Failure information
2C81	System	Error	Moderate	Receive parameter data error	—	—	Failure information
2C82	System	Error	Moderate	Divided parameter receive error	—	—	Failure information
2CF0	System	Error	Moderate	FX5-ENET/IP WDT error occurs	—	—	Failure information
2DA0	System	Error	Moderate	Connection setting parameter (Error in the number of connection setting)	Parameter information ^{*2}	—	Failure information
2DA1	System	Error	Moderate	Connection setting parameter (Connection number error)	Parameter information ^{*2}	—	Failure information
2DA2	System	Error	Moderate	Connection setting parameter (Communication destination communication method error)	Parameter information ^{*2}	—	Failure information
2DA3	System	Error	Moderate	Connection setting parameter (Protocol system error)	Parameter information ^{*2}	—	Failure information
2DA4	System	Error	Moderate	Connection setting parameter (Open system error)	Parameter information ^{*2}	—	Failure information
2DA5	System	Error	Moderate	Connection setting parameter (Fixed buffer transmitting method error)	Parameter information ^{*2}	—	Failure information
2DA6	System	Error	Moderate	Connection setting parameter (IP address (IPv4) error)	Parameter information ^{*2}	—	Failure information
2DA7	System	Error	Moderate	Connection setting parameter (IP address (IPv6) error)	Parameter information ^{*2}	—	Failure information
2DA8	System	Error	Moderate	Connection setting parameter (Existence confirmation specification error)	Parameter information ^{*2}	—	Failure information

Event code	Event type	Event category	Event status	Detected event	Detailed information		
					Detailed information 1	Detailed information 2	Detailed information 3
2DA9	System	Error	Moderate	Connection setting parameter (Communication data code error)	Parameter information*2	—	Failure information
2DAA	System	Error	Moderate	Connection setting parameter (Error in specification of writing during running)	Parameter information*2	—	Failure information
2DB0	System	Error	Moderate	Request data error	—	—	Failure information
3030	System	Error	Moderate	Specific code error	—	—	—
3040	System	Error	Moderate	Firmware update file version error	—	—	—
3041	System	Error	Moderate	Failure in verification of firmware update file integrity	—	—	—
3042	System	Error	Moderate	Failure in acquisition of firmware update file	—	—	—
3050	System	Error	Moderate	Socket communication fails	—	—	Failure information
3052	System	Error	Moderate	Link-down	—	—	Failure information
3053	System	Error	Moderate	Timeout	—	—	Failure information
3055	System	Error	Moderate	Receive error	—	—	Failure information
3056	System	Error	Moderate	Socket communication buffer full	—	—	Failure information
3095	System	Error	Moderate	The number of target IP address setting is outside the range (IP filter settings)	Parameter information*2	—	—
3096	System	Error	Moderate	IP address 1 is outside the range (IP filter settings)	Parameter information*2	—	—
3097	System	Error	Moderate	IP address 2 is outside the range (IP filter settings)	Parameter information*2	—	—
3098	System	Error	Moderate	IP address 1 ≥ IP address 2 error (IP filter settings)	Parameter information*2	—	—
3099	System	Error	Moderate	The number of excluded IP address setting is outside the range (IP filter settings)	Parameter information*2	—	—
309A	System	Error	Moderate	The target IP address setting number is outside the range (IP filter settings)	Parameter information*2	—	—
309B	System	Error	Moderate	The excluded IP address number is outside the range (IP filter settings)	Parameter information*2	—	—
309C	System	Error	Moderate	The excluded IP address is outside the range (IP filter settings)	Parameter information*2	—	—
309D	System	Error	Moderate	Target module support error (IP address settings parameter)	Parameter information*2	—	—
309E	System	Error	Moderate	Target module support error (Gateway address setting parameter)	Parameter information*2	—	—
309F	System	Error	Moderate	The gateway address (IPv6) is outside the range (Gateway address setting parameter)	Parameter information*2	—	—
3CF1	System	Error	Major	BINT disconnection detection timeout error	—	—	Failure information
3E30	System	Error	Major	The fixed memory block acquisition/release ID number is invalid	—	—	Failure information
3E31	System	Error	Major	Fixed memory block acquisition/release context error	—	—	Failure information
3E32	System	Error	Major	Error in forced cancellation of waiting for variable memory block acquisition/release	—	—	Failure information
3E33	System	Error	Major	Error in forced cancellation of waiting due to reset of fixed memory block acquisition/release object	—	—	Failure information

Event code	Event type	Event category	Event status	Detected event	Detailed information		
					Detailed information 1	Detailed information 2	Detailed information 3
3E34	System	Error	Major	Fixed memory block acquisition/release parameter error	—	—	Failure information
3E35	System	Error	Major	The variable memory block acquisition/release ID number is invalid	—	—	Failure information
3E36	System	Error	Major	Variable memory block acquisition/release context error	—	—	Failure information
3E37	System	Error	Major	Error in forced cancellation of waiting for variable memory block acquisition/release	—	—	Failure information
3E38	System	Error	Major	Error in forced cancellation of waiting due to reset of variable memory block acquisition/release object	—	—	Failure information
3E39	System	Error	Major	Variable memory block acquisition/release parameter error	—	—	Failure information
3E3A	System	Error	Major	E-mail box transmitting/receiving parameter error	—	—	Failure information
3E3B	System	Error	Major	The e-mail box transmitting/receiving ID number is invalid	—	—	Failure information
3E3C	System	Error	Major	E-mail box transmitting/receiving context error	—	—	Failure information
3E3D	System	Error	Major	Error in forced cancellation of waiting for e-mail box transmitting/receiving	—	—	Failure information
3E3E	System	Error	Major	Semaphore acquisition/release parameter error	—	—	Failure information
3E3F	System	Error	Major	Invalid semaphore acquisition/release ID number	—	—	Failure information
3E40	System	Error	Major	Semaphore acquisition/release context error	—	—	Failure information
3E41	System	Error	Major	Semaphore acquisition/release queueing overflow	—	—	Failure information
3E42	System	Error	Major	Error in forced cancellation of waiting for semaphore acquisition/release	—	—	Failure information
3E50	System	Error	Major	RAM check error	—	—	—
3E51	System	Error	Major	Sum check code error	—	—	—
3E52	System	Error	Major	Flash memory test access error	—	—	—
3E53	System	Error	Major	Flash memory test verification error	—	—	—
3E54	System	Error	Major	Buffer memory access error	—	—	—
3E55	System	Error	Major	BusAsic register read error	—	—	—
3E56	System	Error	Major	Factory test mode error	—	—	—
3E60 to 3E63	System	Error	Major	MPU error	—	—	Failure information
3F92	System	Error	Major	Memory error	—	—	Failure information
3FA1	System	Error	Major	Memory error	—	—	Failure information

*1 <Number of times information>

- Number of times (set value)


*2 <Parameter information>

- Parameter storage location
- Parameter type
- (I/O number)
- (Parameter number)
- Parameter item number

APPENDICES

Appendix 1 External Dimensions

This chapter describes the external dimensions of the FX5-ENET/IP.

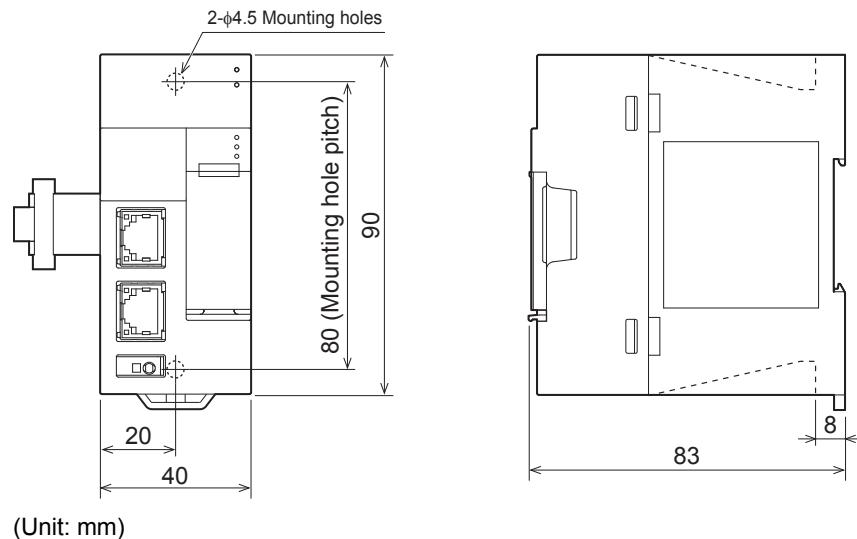

A

Appendix 2 Standards

Certification of UL, cUL standards

The FX5-ENET/IP supports UL (UL, cUL) standards.

For models that support UL standards, refer to the following.

UL, cUL file number: E95239

Compliance with EC directive (CE Marking)

This note does not guarantee that an entire machine produced in accordance with the contents of this note will comply with the following standards.

Compliance to EMC directive and LVD directive of the entire mechanical module should be checked by the user/ manufacturer. For more details please contact to the local Mitsubishi Electric sales site.

Requirement for compliance with EMC directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Electromagnetic Compatibility (2014/30/EU) when used as directed by the appropriate documentation.

Attention

This product is designed for use in industrial applications.

Product compatibility

Type: Programmable controller (open type equipment)

Models: FX5 manufactured

from October 1st, 2018

FX5-ENET/IP

Electromagnetic compatibility (EMC) directive	Remarks
EN61131-2:2007 Programmable controllers - Equipment requirements and tests	Compliance with all relevant aspects of the standard. EMI • Radiated emission • Conducted emission EMS • Radiated electromagnetic field • Fast transient burst • Electrostatic discharge • High-energy surge • Voltage drops and interruptions • Conducted RF • Power frequency magnetic field

Caution for compliance with EC Directive

Caution for when the FX5-ENET/IP is used

When the FX5-ENET/IP is used, attach a ferrite core and make 3 turns within approximately 200 mm from the power cable connectors. (Ferrite core used in tests by Mitsubishi: ZCAT3035-1330 manufactured by TDK Co.)

Appendix 3 Module Label

The buffer memory of the FX5-ENET/IP can be set using module label.

Structure of the module label

The module label name is defined with the following structure.

- "instance name"_"data format""label name"_D
- "instance name"_"data format""data type"_"label name"_D

■Instance name

The following is the instance name of the FX5-ENET/IP.

Model	Instance name
FX5-ENET/IP	FX5ENETIP

Ex.

FX5ENETIP_unStatus_LatestError_D

■Data format

The data format indicates the size of a buffer memory area. The following shows the classification.

Data format	Description
b	Bit
bn	Bit of multiple buffer memories
u	Word [Unsigned]/Bit String [16-bit]
ud	Double word [Unsigned]/Bit String [32-bit]
un	Word of multiple buffer memories [Unsigned]/Bit String [16-bit]

■Data type

The data type indicates the type of a buffer memory area. The following shows the classification.

Data type	Description
Val	Display the value of module.
Set	Set the module control instruction.
Sts	Display the module status.

■Label name

A label name unique to the module.

■_D

This symbol indicates that the module label is for direct access. Value update timing is shown below.

Type	Description	Access timing
Direct access	The values read/written from/to the module labels are reflected to the module immediately.	At writing to or reading from the module label

A

Appendix 4 Buffer Memory

The buffer memory is used to exchange data between the FX5-ENET/IP and the CPU module or EtherNet/IP devices. Buffer memory values are set to their defaults (initial values) when the system is powered off or the CPU module is reset.

List of buffer memory addresses

Buffer memory address		Name	Initial value	Read, write	
Decimal	Hexadecimal				
29	1DH	Latest error code	0	Read	
30	1EH	Module information	69C1H	Read	
31	1FH	Firmware version	*1	Read	
34 to 35	22H to 23H	Input signals	0	Read, write	
36 to 37	24H to 25H	Output signals	0	Read, write	
50 to 51	32H to 33H	IP address setting	0.0.0.0	Read, write	
52 to 53	34H to 35H	Subnet mask pattern setting	0.0.0.0	Read, write	
54 to 55	36H to 37H	Default router IP address setting	0.0.0.0	Read, write	
56	38H	IP address storage area write request	0	Read, write	
57	39H	IP address storage area write status	0	Read	
58	3AH	IP address storage area clear request	0	Read, write	
59	3BH	IP address storage area clear status	0	Read	
60	3CH	IP address change function enable flag	0	Read	
61	3DH	IP address storage area write error code	0	Read	
62	3EH	IP address storage area clear error code	0	Read	
64 to 65	40H to 41H	IP address	192.168.3.251	Read	
74 to 75	4AH to 4BH	Subnet mask pattern	255.255.255.0	Read	
76 to 77	4CH to 4DH	Default gateway IP address	0.0.0.0	Read	
102 to 104	66H to 68H	Ethernet address (MAC address)	*2	Read	
108 to 139	6CH to 8BH	Error code	0	Read	
152 to 153	98H to 99H	Open completion signal	0	Read	
154 to 155	9AH to 9BH	Open request signal	0	Read	
156 to 157	9CH to 9DH	Socket communications receive status signal	0	Read	
158	9EH	Initial status	0	Read	
159	9FH	Initial error code	0	Read	
201	C9H	Same IP address state storage area	0.0.0.0	Read	
202 to 204	CAH to CCH	MAC address of the already connected station	0.0.0.0	Read	
205 to 207	CDH to CFH	MAC address of the station connected later	0.0.0.0	Read	
5000	1388H	Block assurance specification per connection	0	Read, write	
5001	1389H	Block assurance state per connection	0	Read	
5004	138CH	EtherNet/IP data link continuation specification	EtherNet/IP data link continuation specification	0	Read, write
5005	138DH		EtherNet/IP data link continuation specification state	0	Read
5006 to 5037	138EH to 13ADH	Class1 I/O data size	Class1 Input data length	0	Read
5070 to 5101	13CEH to 13EDH		Class1 Output data length	0	Read
5134 to 5165	140EH to 142DH	Class1 I/O data start offset address	Class1 Start offset address to the input data	65535	Read
5198 to 5229	144EH to 146DH		Class1 Start offset address to the output data	65535	Read
5274 to 5275	149AH to 149BH	Application Trigger	Application Trigger request (UCMM)	0	Read, write
5278 to 5279	149EH to 149FH		Application Trigger acceptance (UCMM)	0	Read
5282 to 5283	14A2H to 14A3H		Application Trigger completion (UCMM)	0	Read
6030 to 6031	178EH to 178FH	Class1 communication status	Data link status	0	Read
6034 to 6035	1792H to 1793H		Error status	0	Read
6262 to 6293	1876H to 1895H	Connection behavior error status	Class1 connection 1 to 32 error code	0	Read

Buffer memory address		Name	Initial value	Read, write	
Decimal	Hexadecimal				
11434 to 11465	2CAAH to 2CC9H	Block assurance specification per connection	Connection 1 to 32 input data update state	0	Read, write
11498 to 11529	2CEAH to 2D09H		Connection 1 to 32 output data update state	0	Read, write
12000 to 35999	2EE0H to 8C9FH	Class1 communications input data area		0	Read
36000 to 59999	8CA0H to EA5FH	UCMM communications input data area		0	Read
60000 to 83999	EA60H to 1481FH	Class1 communications output data area		0	Read, write
84000 to 107999	14820H to 1A5DFH	UCMM communications output data area		0	Read, write

*1 The firmware version of the FX5-ENET/IP is stored. For Ver. 1.000, 1000 is stored.

*2 MAC address written before shipment

Details of buffer memory addresses

The following describes the buffer memory addresses of the FX5-ENET/IP.

Latest error code

■Latest error code (Un\G29)

The latest error code that has occurred in FX5-ENET/IP is stored. (0 is stored when communications are normal.)

For details on error code, refer to  Page 126 Module error.

Module information

■Module information (Un\G30)

This area stores the module information (69C1H) of FX5-ENET/IP.

Firmware version

■Firmware version (Un\G31)

This area stores the firmware version of FX5-ENET/IP.

Ex.

When firmware version of the FX5-ENET/IP is Ver. 1.000: K1000

A

Input signals

■Input signals (Un\G34 to Un\G35)

These signals are used to check the status of FX5-ENET/IP.

Address	bit	Signal name	Description
Un\G34	b0	Module ready	A signal for checking the status of completion of preparation for operation of FX5-ENET/IP. • On: The module is operable • Off: The module is not operable (in preparation)
	b15	Module error status	A signal for checking the occurrence of error (minor/moderate/major) of FX5-ENET/IP • On: An error has occurred (minor/moderate/major) • Off: No error When the signal is turned on (an error occurs), remove the cause of the error, and turn on 'Module error clear request' (Un\G36.b15). Then, the signal will be turned off.
Un\G35	b0	EtherNet/IP communication in process	A signal for checking whether the EtherNet/IP communication has started. • On: Starting • Off: Stopped

Output signals


■Output signals (Un\G36 to Un\G37)

These signals are used for controlling the FX5-ENET/IP.

Address	bit	Signal name	Description
Un\G36	b15	Module error clear request	<p>Requests to clear the error that has occurred in FX5-ENET/IP. To request to clear the module error, turn off, on and off the signal.</p> <p>Issuing the request after the cause of the error is removed will clear the followings.</p> <ul style="list-style-type: none"> • 'Module error status' (Un\G34.b15) is turned on and off. • The ERROR LED is turned off. • The following buffer memory - 'Latest error code' (Un\G29) - 'IP address storage area write error code' (Un\G61) - 'IP address storage area clear error code' (Un\G62) - 'Error code' (Un\G108 to Un\G139) - 'Same IP address state storage area' (Un\G201) - 'MAC address of the already connected station' (Un\G202 to Un\G204) - 'MAC address of the station connected later' (Un\G205 to Un\G207)
Un\G37	b0	EtherNet/IP communication start request	<p>Requests to start or stop the EtherNet/IP communication.</p> <ul style="list-style-type: none"> • Start request: Off to on • Stop request: On to off <p>For the operation timing of EtherNet/IP communications, refer to Page 139 Operation timing of EtherNet/IP communications.</p>

Point

- Turn on and off the 'module error clear request' (Un\G36.b15) at the following timing using the 'Module error clear request' (Un\G36.b15) as an interlock condition. (In the case of Class1 communication)

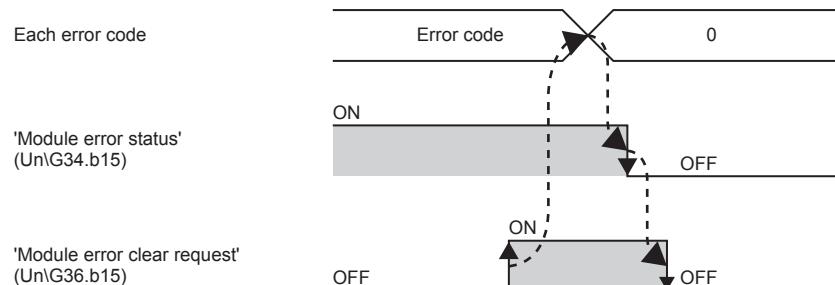


- To start the UCMM communication, an application trigger is required. ([Page 148 Application Trigger](#))

■Operation timing of EtherNet/IP communications

The operation timing of the EtherNet/IP communication by turning on 'Operation is in progress with the setting for continuing EtherNet/IP communications' (Un\G37.b0) is shown below.


When 'EtherNet/IP data link continuation specification state' (Un\G5005) is "1: Operation is in progress with the setting for continuing EtherNet/IP communications," the EtherNet/IP communication will be continued even if 'EtherNet/IP communication start request' (Un\G37.b0) is turned on and off. (☞ Page 42 Communication Status Setting Function When a CPU Stop Error Occurs)

- EtherNet/IP communication has started (normal)

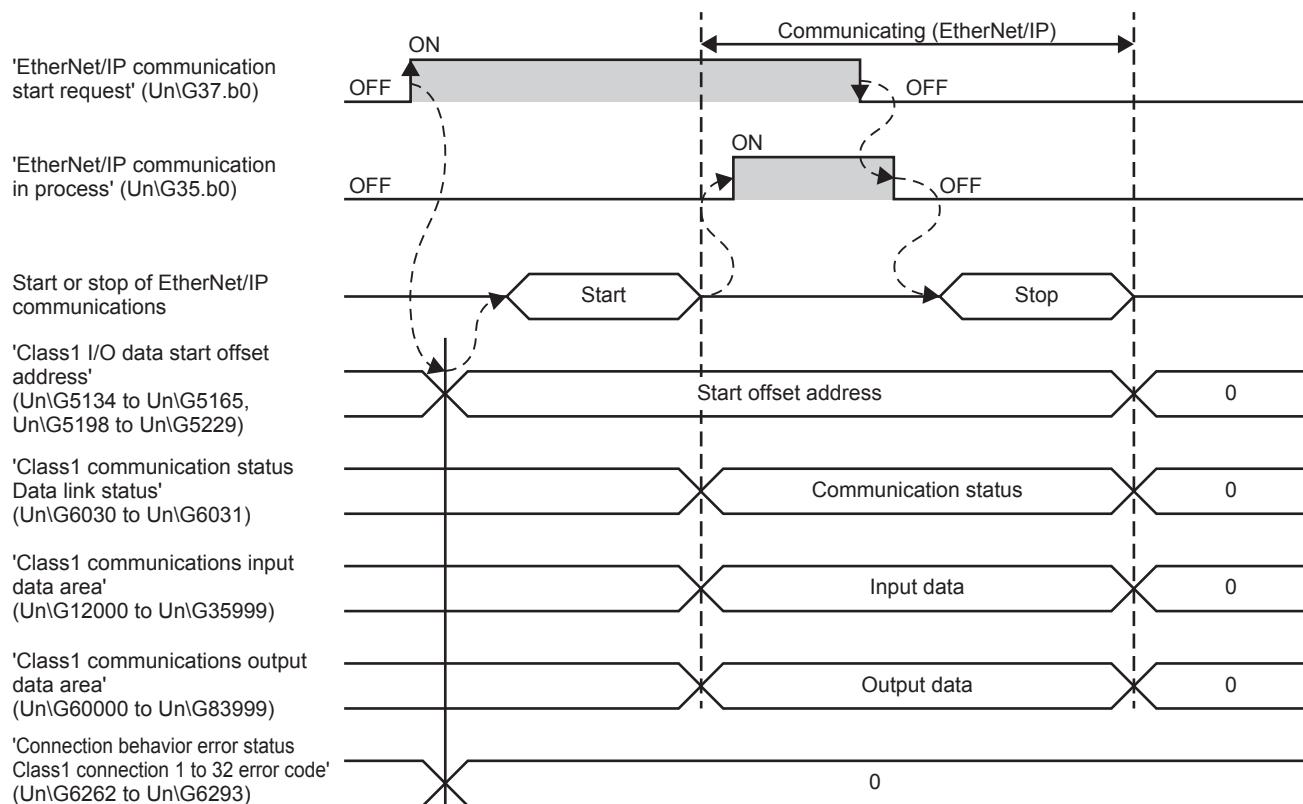


A

- EtherNet/IP communication does not start (error)

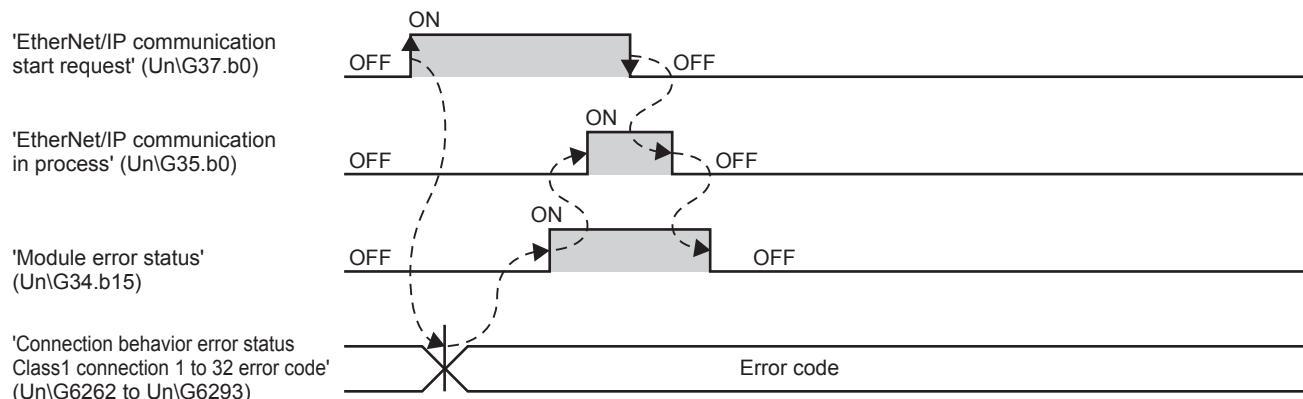

- 'EtherNet/IP data link continuation specification' (Un\G5004) is set

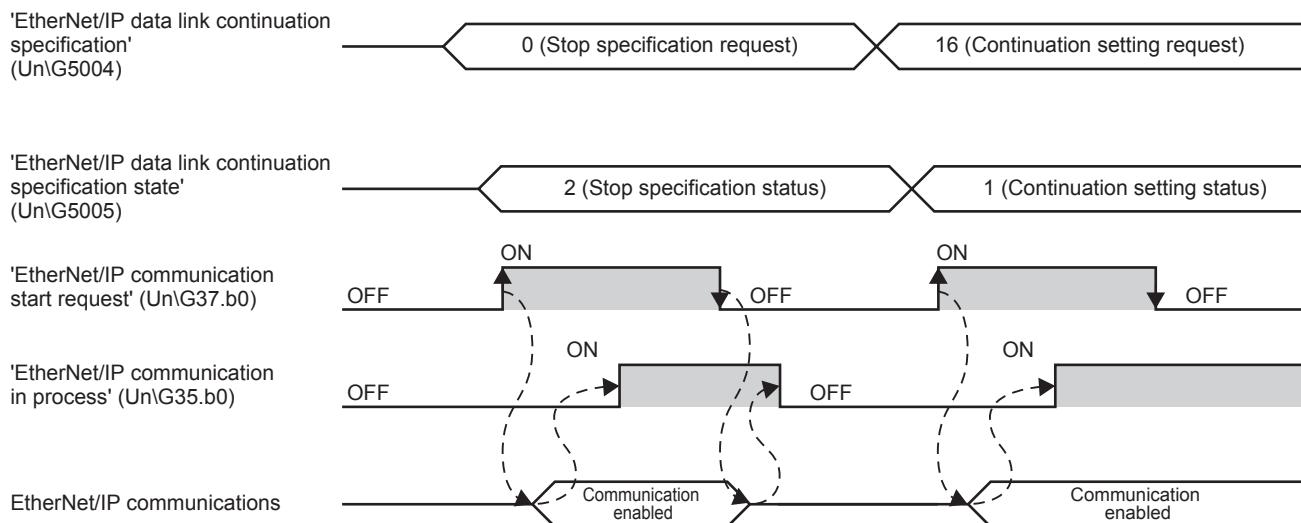

IP address setting

■IP address setting (Un\G50 to Un\G51)

Stores IP address to be set when using IP address change function.

Stores 0 when writing to IP address storage area is completed normally.

Address	Description
Un\G50	3rd octet, 4th octet
Un\G51	1st octet, 2nd octet

Ex.

When IP address is 192.168.3.250: Un\G50 = K003250, Un\G51 = K192168

Subnet mask pattern setting

■Subnet mask pattern setting (Un\G52 to Un\G53)

Stores subnet mask pattern to be set when using IP address change function.

Stores 0 when writing to IP address storage area is completed normally.

Address	Description
Un\G52	3rd octet, 4th octet
Un\G53	1st octet, 2nd octet

Ex.

When subnet mask pattern is 255.255.255.0: Un\G52 = K255000, Un\G53 = K255255

Default router IP address setting

■Default router IP address setting (Un\G54 to Un\G55)

Stores default router IP address to be set when using IP address change function.

Stores 0 when writing to IP address storage area is completed normally.

Address	Description
Un\G54	3rd octet, 4th octet
Un\G55	1st octet, 2nd octet

Ex.

When default router IP address is 192.168.3.255: Un\G54 = K003255, Un\G55 = K192168

IP address storage area write request

■IP address storage area write request (Un\G56)

Specify whether to write the stored values of 'IP address setting' (Un\G50 to Un\G51), 'Subnet mask pattern setting' (Un\G52 to Un\G53) and 'Default router IP address setting' (Un\G54 to Un\G55) to the IP address storage area.

- 0: Not write
- 1: Write

IP address storage area write status

■IP address storage area write status (Un\G57)

You can confirm whether or not the values are written to the IP address storage area when executing the IP address change function.

Address	bit	Name	Description
Un\G57	b0	IP address storage area write completed	Turns ON when writing to IP address storage area completes or fails. Turns off when 'IP address storage area write request' (Un\G56) is changed from 1 to 0.
	b1	IP address storage area write error	Turns ON when writing to IP address storage area fails. Turns ON if there is a problem in contents of IP address storage area, when Ethernet module power supply is turned from OFF to ON. Turns off when 'IP address storage area write request' (Un\G56) is changed from 1 to 0.

IP address storage area clear request

■IP address storage area clear request (Un\G58)

Specify whether to clear the data in the IP address storage area.

- 0: Not clear
- 1: Clear

A

IP address storage area clear status

■IP address storage area clear status (Un\G59)

You can confirm whether or not the IP address storage area is cleared.

Address	bit	Name	Description
Un\G59	b0	IP address storage area clear completed	Turns ON when clearing of IP address storage area completes or fails. Turns off when 'IP address storage area clear request' (Un\G58) is changed from 1 to 0.
	b1	IP address storage area clear error	Turns ON when clearing of IP address storage area fails. Turns off when 'IP address storage area clear request' (Un\G58) is changed from 1 to 0.

IP address change function enable flag

■IP address change function enable flag (Un\G60)

You can confirm whether or not the IP address change function is enabled.

- 0: Invalid
- 1: Enable

IP address storage area write error code

■IP address storage area write error code (Un\G61)

Stores error codes if writing to IP address storage area fails.

- 0: Normal (no error)
- 1920H: Values of IP address setting, etc. (Un\G50 to Un\G55) are out of the setting ranges

IP address storage area clear error code

■IP address storage area clear error code (Un\G62)

Stores error codes if clearing of IP address storage area fails.

- 0: Normal (no error)
- 1921H: 'IP address storage area write request' (Un\G56) and 'IP address storage area clear request' (Un\G58) were simultaneously turned off and on.

IP address

■IP address (Un\G64 to Un\G65)

Stores IP address on the own station set with GX Works3. (☞ Page 50 Basic Setting) The stored values can be changed by the IP address change function.

Address	Description
Un\G64	3rd octet, 4th octet
Un\G65	1st octet, 2nd octet

Ex.

When IP address is 192.168.3.250: Un\G64 = K003250, Un\G65 = K192168



If the IP address is changed by the IP address change function, priority will be given to the IP address stored by the IP address change function. To enable the set value in GX Works3, clear the IP address storage area.

Subnet mask pattern

■Subnet mask pattern (Un\G74 to Un\G75)

Stores subnet mask pattern on the own station set with GX Works3. (☞ Page 50 Basic Setting) The stored values can be changed by the IP address change function.

Address	Description
Un\G74	3rd octet, 4th octet
Un\G75	1st octet, 2nd octet



If the subnet mask pattern is changed by the IP address change function, priority will be given to the subnet mask pattern stored by the IP address change function. To enable the set value in GX Works3, clear the IP address storage area.

Ex.

When subnet mask pattern is 255.255.255.0: Un\G74 = K255000, Un\G75 = K255255

Default gateway IP address

■Default gateway IP address (Un\G76 to Un\G77)

Stores default gateway IP address on the own station set with GX Works3. (☞ Page 50 Basic Setting) The stored values can be changed by the IP address change function.

Address	Description
Un\G76	3rd octet, 4th octet
Un\G77	1st octet, 2nd octet

Ex.

When default gateway IP address is 192.168.3.255: Un\G76 = K003255, Un\G77 = K192168



If the default gateway IP address is changed by the IP address change function, priority will be given to the default gateway IP address stored by the IP address change function. To enable the set value in GX Works3, clear the IP address storage area.

Ethernet address (MAC address)

■Ethernet address (MAC address) (Un\G102 to Un\G104)

Stores Ethernet address (MAC address) on the own station.

Address	Stored value
Un\G102	Serial ID
Un\G103	Lower one digit of vendor ID, model ID
Un\G104	Upper two digits of vendor ID

Ex.

When MAC address is 00-26-92-60-10-25: Un\G102 = H1025, Un\G103 = H9260, Un\G104 = H0026

A

Error code

■Error code (Un\G108 to Un\G139)

Stores error code (connection number 1 to 32) of general-purpose Ethernet. (0 is stored when communications are normal.)

For details on error code, refer to ☞ Page 126 Module error.

Address	Description
Un\G108	Stores error code of connection number 1.
Un\G109	Stores error code of connection number 2.
⋮	⋮
Un\G139	Stores error code of connection number 32.

Open completion signal

■Open completion signal (Un\G152 to Un\G153)

Open completion signal for each connection number.

Address	bit	Connection number	Description
Un\G152	b0	Connection number 1	• On: Open completed • Off: Closed or not open
	b1	Connection number 2	
	⋮	⋮	
	b15	Connection number 16	
Un\G153	b0 to b15	Connection number 17 to 32	

Open request signal

■Open request signal (Un\G154 to Un\G155)

Open request signal for each connection number of socket communication.

Address	bit	Connection number	Description
Un\G154	b0	Connection number 1	• On: Requesting open • Off: No open request
	b1	Connection number 2	
	:		
	b15	Connection number 16	
Un\G155	b0 to b15	Connection number 17 to 32	

Socket communications receive status signal

■Socket communications receive status signal (Un\G156 to Un\G157)

Socket communication receive state signal for each connection number.

Address	bit	Connection number	Description
Un\G156	b0	Connection number 1	• On: Data reception completed • Off: Data not received
	b1	Connection number 2	
	:		
	b15	Connection number 16	
Un\G157	b0 to b15	Connection number 17 to 32	

Initial status

■Initial status (Un\G158)

You can confirm whether or not FX5-ENET/IP has been initialized.

Address	bit	Name	Description
Un\G158	b0	Initial normal completion status	Turns on when the initialization is normally completed.
	b1	Initial abnormal completion status	Turns on when the initialization is abnormally completed.

Initial error code

■Initial error code (Un\G159)

The error codes that occur during initialization of FX5-ENET/IP are stored. (0 is stored when communications are normal.)

For details on error code, refer to  Page 126 Module error.

Same IP address state storage area

■Same IP address state storage area (Un\G201)

Same IP address state is stored.

Address	bit	Name	Description
Un\G201	b0	Same IP address detection flag	Turns ON if there is a same IP address.

MAC address of the already connected station

■MAC address of the already connected station (Un\G202 to Un\G204)

Stores the MAC address of the station, which was connected to the network earlier, in the station with duplicated IP address.

Address	Description
Un\G202	Serial ID
Un\G203	Lower one digit of vendor ID, model ID
Un\G204	Upper two digits of vendor ID

Ex.

When MAC address is 00-26-92-60-10-25: Un\G202 = H1025, Un\G203 = H9260, Un\G204 = H0026

"FFFFFFFFFFFFH" is stored in the station that has been already connected to the network.

MAC address of the station connected later

■MAC address of the station connected later (Un\G205 to Un\G207)

Stores the MAC address of the station with duplicated IP address in the station which was connected earlier to the network.

Address	Description
Un\G205	Serial ID
Un\G206	Lower one digit of vendor ID, model ID
Un\G207	Upper two digits of vendor ID

Ex.

When MAC address is 00-26-92-60-10-25: Un\G205 = H1025, Un\G206 = H9260, Un\G207 = H0026

"FFFFFFFFFFFFH" is stored in the station with duplicated IP address.

Block assurance specification per connection

■Block assurance specification per connection (Un\G5000)

This address is used to set whether to perform data assurance on the input data or output data used in Class1 communications. (☞ Page 33 Assurance of input/output data)

The setting is reflected when 'EtherNet/IP communication start request' (Un\G37.b0) is turned off and on.

- 0: Do not perform data assurance.
- 16: Perform data assurance.

A

Block assurance state per connection

■Block assurance state per connection (Un\G5001)

This address is used to store the data assurance status for the input data or output data of the Class1 communications being executed. (☞ Page 33 Assurance of input/output data)

The setting is reflected when 'EtherNet/IP communication start request' (Un\G37.b0) is turned off and on.

- 0: EtherNet/IP communication is stopped.
- 1: Data assurance is not being performed.
- 2: Data assurance is being performed.

EtherNet/IP data link continuation specification

■EtherNet/IP data link continuation specification (Un\G5004)

This address is used to set whether to continue EtherNet/IP communications when 'EtherNet/IP communication start request' (Un\G37.b0) is turned on and off. (☞ Page 42 Communication Status Setting Function When a CPU Stop Error Occurs) Set this address to continue EtherNet/IP communications in situations such as when the CPU module changes from the RUN state to the STOP state and when a stop error occurs on the CPU module.

The setting is reflected when 'EtherNet/IP communication start request' (Un\G37.b0) is turned off and on.

- 0: Stops EtherNet/IP communications.
- 16: Continues EtherNet/IP communications.

■EtherNet/IP data link continuation specification state (Un\G5005)

This address is used to store the setting status of 'EtherNet/IP data link continuation specification' (Un\G5004).

The setting is reflected when 'EtherNet/IP communication start request' (Un\G37.b0) is turned off and on.

- 0: The 'EtherNet/IP data link continuation specification' (Un\G5004) setting has not been reflected.
- 1: Operation is in progress with the setting for continuing EtherNet/IP communications.
- 2: Operation is in progress with the setting for stopping EtherNet/IP communications.

When 'EtherNet/IP communication start request' (Un\G37.b0) is turned on and off, or the CPU module switches to STOP state (including STOP by a stop error), the setting is initialized to 0.

Class1 I/O data size

■Class1 Input data length (Un\G5006 to Un\G5037)

This address is used to store the size of the data received by the FX5-ENET/IP from the EtherNet/IP device during Class1 communications. (Unit: words) (☞ Page 85 [Connections] tab)

Address	Description
Un\G5006	Stores the input data size of connection number 1.
Un\G5007	Stores the input data size of connection number 2.
:	
Un\G5037	Stores the input data size of connection number 32.

■Class1 Output data length (Un\G5070 to Un\G5101)

This address is used to store the size of the data to send to the EtherNet/IP device from the FX5-ENET/IP during Class1 communications. (Unit: words) (☞ Page 85 [Connections] tab)

Address	Description
Un\G5070	Stores the output data size of connection number 1.
Un\G5071	Stores the output data size of connection number 2.
:	
Un\G5101	Stores the output data size of connection number 32.

Class1 I/O data start offset address

■ Class1 Start offset address to the input data (Un\G5134 to Un\G5165)

In relation to the start address of 'Class1 communications input data area' (Un\G12000 to Un\G35999), stores the offset address of the input data for each connection.

- 0 to 32767: Offset address of each connection
- 65535: No offset address assignment

Address	Description
Un\G5134	Connection number 1 offset address
Un\G5135	Connection number 2 offset address
:	
Un\G5165	Connection number 32 offset address

Ex.

Indicates the offset address stored in 'Class1 Start offset address to the input data' (Un\G5134 to Un\G5165) for the input data stored in 'Class1 communications input data area' (Un\G12000 to Un\G35999).

Class1 communications input data area (Un\G12000 to Un\G35999)		Class1 Start offset address to the input data (Un\G5134 to Un\G5165)	
Address	Description	Address	Description
Un\G12000 to Un\G12749	Connection number 1 input data	Un\G5134	0
Un\G12750 to Un\G13499	Connection number 2 input data	Un\G5135	1
Un\G13500 to Un\G14249	Connection number 3 input data	Un\G5136	4
Un\G14250 to Un\G14999	Connection number 4 input data	Un\G5137	6

■ Class1 Start offset address to the output data (Un\G5198 to Un\G5229)

In relation to the start address of 'Class1 communications output data area' (Un\G60000 to Un\G83999), stores the offset address of the output data for each connection.

- 0 to 32767: Offset address of each connection
- 65535: No offset address assignment

Address	Description
Un\G5198	Connection number 1 offset address
Un\G5199	Connection number 2 offset address
:	
Un\G5229	Connection number 3 offset address

Ex.

Indicates the offset address stored in 'Class1 Start offset address to the output data' (Un\G5198 to Un\G5229) for the output data stored in 'Class1 communications output data area' (Un\G60000 to Un\G83999).

Class1 communications output data area (Un\G60000 to Un\G83999)		Class1 Start offset address to the output data (Un\G5198 to Un\G5229)	
Address	Description	Address	Description
Un\G60000 to Un\G60749	Connection number 1 output data	Un\G5198	0
Un\G60750 to Un\G61499	Connection number 2 output data	Un\G5199	1
Un\G61500 to Un\G62249	Connection number 3 output data	Un\G5200	4
Un\G62250 to Un\G62999	Connection number 4 output data	Un\G5201	6

Application Trigger


■Application Trigger (Un\G5274 to Un\G5275, Un\G5278 to Un\G5279, Un\G5282 to Un\G5283)

This area requests and checks Application Triggers via UCMM communications.

Address	Name	bit	Connection number	Description
Un\G5274	Application Trigger Request (UCMM)	b0	Connection number 1	Requests Application Trigger for each connection number. • On: Request present • Off: Request not present
		b1	Connection number 2	
		⋮		
		b15	Connection number 16	
		b0 to b15	Connection number 17 to 32	
Un\G5275				
Un\G5278	Application Trigger Acceptance (UCMM)	b0	Connection number 1	Stores the acceptance status of Application Trigger for each connection number. • On: Accepted • Off: Not accepted
		b1	Connection number 2	
		⋮		
		b15	Connection number 16	
		b0 to b15	Connection number 17 to 32	
Un\G5279				
Un\G5282	Application Trigger Completion (UCMM)	b0	Connection number 1	Stores the completion status of Application Trigger for each connection number. • On: Completed • Off: Not completed
		b1	Connection number 2	
		⋮		
		b15	Connection number 16	
		b0 to b15	Connection number 17 to 32	
Un\G5283				

The timing chart at the start of UCMM communication (client function) is shown below.

—→ Performed by the FX5-ENET/IP
—→ Performed by the program

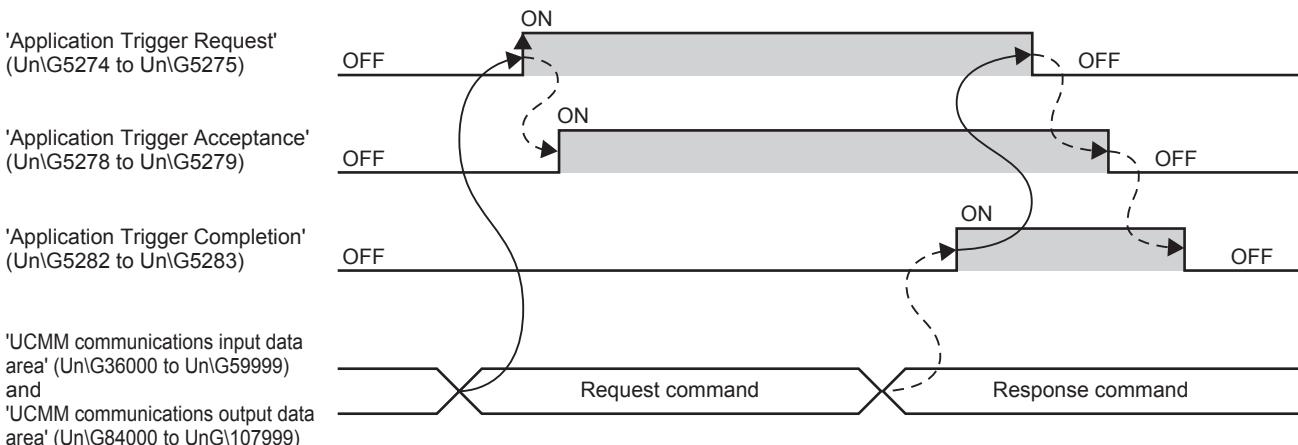

Precautions

- When the 'EtherNet/IP communication start request' (Un\G37.b0) is off, the Application Trigger does not operate.
- If the Application Trigger Request is turned off before the Application Trigger Completion and Application Trigger Receipt are turned on, the EtherNet/IP communication will not be executed.
- To execute the UCMM communication (turn on Application Trigger Request) again, make sure that Application Trigger Acceptance and Application Trigger Completion are off.

Class1 communication status

■Class1 communication status (Un\G6030 to Un\G6031, Un\G6034 to Un\G6035)

This area stores the communication status of Class1 communications for each connection number.

Address	Name	bit	Connection number	Description
Un\G6030	Data link status	b0	Connection number 1	Stores the data link status of connection numbers 1 to 32. It automatically turns on when communication recovers from an error. <ul style="list-style-type: none">• On: Data link in operation (The input data from the target device was received at least once.)• Off: Not set, data link not in operation, error
		b1	Connection number 2	
		⋮		
		b15	Connection number 16	
		b0 to b15	Connection number 17 to 32	
Un\G6031				
Un\G6034	Error status	b0	Connection number 1	Stores the error status of connection numbers 1 to 32. It automatically turns off when communication recovers from an error. <ul style="list-style-type: none">• On: Error• Off: Not set or data link in operation
		b1	Connection number 2	
		⋮		
		b15	Connection number 16	
		b0 to b15	Connection number 17 to 32	
Un\G6035				After turning on the 'EtherNet/IP communication start request' (Un\G37.b0), temporarily an error may occur until the connection is opened.

Connection behavior error status

■Connection behavior error status (Un\G6262 to Un\G6293)

This area stores the error code of the error that occurred during EtherNet/IP communications (Class1 communications) for each connection number. (0 is stored when communications are normal.) For details on the error codes, refer to the following.

☞ Page 122 List of Error Codes

After turning on the 'EtherNet/IP communication start request' (Un\G37.b0), temporarily an error code may be stored until the connection is opened.

Address	Description
Un\G6262	Class1 communications connection number 1 error code
Un\G6263	Class1 communications connection number 2 error code
⋮	
Un\G6293	Class1 communications connection number 32 error code

A

Block assurance specification per connection

■Connection 1 to 32 input data update state (Un\G11434 to Un\G11465)

This area stores the update status of the input data when 'Block assurance state per connection' (Un\G5001) is set to "2: Data assurance is being performed.".

- 0: No update available or data reading finished*1
- 1: Update available

*1 If a program is used to read the input data after the input data is updated, the buffer memory value changes from 1 to 0.

Address	Description
Un\G11434	Connection number 1 input data update state
Un\G11435	Connection number 2 input data update state
:	
Un\G11465	Connection number 32 input data update state

■Connection 1 to 32 output data update state (Un\G11498 to Un\G11529)

This area stores the update status of the output data when 'Block assurance state per connection' (Un\G5001) is set to "2: Data assurance is being performed.".

- 0: No update available or data reading finished
- 1: Update available*1

*1 If a program is used to write the output data, the buffer memory value changes from 0 to 1.

Address	Description
Un\G11498	Connection number 1 output data update state
Un\G11499	Connection number 2 output data update state
:	
Un\G11529	Connection number 32 output data update state

Class1 communications input data area

■Class1 communications input data area (Un\G12000 to Un\G35999)

This area stores the data received by the FX5-ENET/IP from the EtherNet/IP device during Class1 communications.

Set the data to be received by the FX5-ENET/IP from the EtherNet/IP device in the EtherNet/IP Configuration Tool for FX5-ENET/IP. (☞ Page 85 [Connections] tab)

Address	Description
Un\G12000 to Un\G12749	Connection number 1 input data area
Un\G12750 to Un\G13499	Connection number 2 input data area
:	
Un\G35250 to Un\G35999	Connection number 32 input data area

UCMM communications input data area

■UCMM communications input data area (Un\G36000 to Un\G59999)

This area stores the data received by the FX5-ENET/IP from the EtherNet/IP device during UCMM communications.

Address	Description
Un\G36000 to Un\G36749	Connection number 1 input data area
Un\G36750 to Un\G37499	Connection number 2 input data area
⋮	
Un\G59250 to Un\G59999	Connection number 32 input data area

In the UCMM communication mode, the communication response command is received. The details of the received communication response command (connection No.1) are shown below. For the items received from the EtherNet/IP device, see the manual for the EtherNet/IP device.

Address	Name	Description
Un\G36000	Result storage area	Stores the processing result of request command. • 0: Completed successfully • Other than 0: Completed with an error (error code) ^{*1}
Un\G36001 to Un\G36002	Target IP Address	Stores the IP address of the EtherNet/IP device from which the response command was sent. • Un\G36001: 3rd octet, 4th octet • Un\G36002: 1st octet, 2nd octet (Example: If the IP address is 192.1.0.254 (C0H.01H.00H.FEH), the Un\G36001 is 00FEH and the Un\G36002 is C001H.)
Un\G36003	Service (service code)	Stores the service code of the EtherNet/IP device. ^{*1}
Un\G36004 to Un\G36005	System area	—
Un\G36006	Class (class ID)	Stores the class ID of the EtherNet/IP device. ^{*1}
Un\G36007	Instance (instance ID)	Stores the instance ID of the EtherNet/IP device. ^{*1}
Un\G36008	Attribute (attribute ID)	Stores the attribute ID of the EtherNet/IP device. ^{*1}
Un\G36009	Data length (data size)	Stores the data size of the EtherNet/IP device. (Unit: Bytes) ^{*1}
Un\G36010 to Un\G36031	System area	—
Un\G36032 to Un\G36738	Receive data	Stores the response data of the EtherNet/IP device. ^{*1}
Un\G36739 to Un\G36749	System area	—

*1 For the stored value, refer to the manuals of the EtherNet/IP device from which the command was sent.

Class1 communications output data area

■Class1 communications output data area (Un\G60000 to Un\G83999)

This area stores the data to send to the EtherNet/IP device from the FX5-ENET/IP during Class1 communications.

Set the data to send to the EtherNet/IP device from the FX5-ENET/IP in the EtherNet/IP Configuration Tool for FX5-ENET/IP.
( Page 85 [Connections] tab)

Address	Description
Un\G60000 to Un\G60749	Connection number 1 output data area
Un\G60750 to Un\G61499	Connection number 2 output data area
⋮	
Un\G83250 to Un\G83999	Connection number 32 output data area

UCMM communications output data area

■UCMM communications output data area

This area stores the data to send to the EtherNet/IP device from the FX5-ENET/IP during UCMM communications.

Address	Description
Un\G84000 to Un\G84749	Connection number 1 output data area
Un\G84750 to Un\G85499	Connection number 2 output data area
⋮	
Un\G107250 to Un\G107999	Connection number 32 output data area

In the UCMM communication mode, the communication response command is received. The details of the received communication response command (connection No.1) are shown below. For the items to send to the EtherNet/IP device, see the manual for the EtherNet/IP device.

Address	Name	Description
Un\G84000	Explicit message request type	Specifies the communication type. • 2000H: UCMM message communications
Un\G84001 to Un\G84002	Target IP Address	Specifies the IP address of the EtherNet/IP device to send the request command to. • Un\G84001: 3rd octet, 4th octet • Un\G84002: 1st octet, 2nd octet (Example: If the IP address is 192.1.0.254 (C0H.01H.00H.FEH), the Un\G84001 is 00FEH and the Un\G84002 is C001H.)
Un\G84003	Service (service code)	Specifies the service code of the EtherNet/IP device.*1
Un\G84004 to Un\G84005	System area	—
Un\G84006	Class (class ID)	Specifies the class ID of the EtherNet/IP device.*1
Un\G84007	Instance (instance ID)	Specifies the instance ID of the EtherNet/IP device.*1
Un\G84008	Attribute (attribute ID)	Specifies the attribute ID of the EtherNet/IP device.*1
Un\G84009	Data length (data size)	Specifies the data size of the EtherNet/IP device. (Unit: Bytes)*1
Un\G84010 to Un\G84031	System area	—
Un\G84032 to Un\G84738	Request data	Specifies the request data of the EtherNet/IP device.*1
Un\G84739 to Un\G84749	System area	—

*1 For the setting value, refer to the manuals of the send destination EtherNet/IP device.

Appendix 5 Details of Message Communication Support Command

This section describes the commands used during Class3 message communications and UCMM message communications.

Object list

The following table lists the objects that can be used with message communication support commands.

Object	Description	Reference
Identity	Holds information such as the identification information of the FX5-ENET/IP.	Page 155
Connection Manager	Used when establishing a connection with an FX5-ENET/IP.	Page 157
TCP/IP Interface	Holds the settings and status related to TCP/IP.	Page 158
Ethernet Link	Holds the settings and status related to Ethernet communication.	Page 160

Command explanations

Object items

The object items are shown below.

Item	Description
Class attribute	Data possessed by the class of an object.*1
Class service	Service performed by specifying a class.*1
Instance attribute	Data possessed by the instance of an object.*2
Instance service	Service performed by specifying an instance.*2

*1 A class possesses the basic information such as the revision and instance of the object.

*2 An instance possesses the information of each object such as its functions and data.

Class attribute/instance attribute items

The class attribute/instance attribute items are shown below.

■Access

This item indicates whether reading and writing using instance services are allowed.

Item	Description
Get	Reading is possible with services such as Get_Attribute_Single.
Set	Writing is possible with services such as Set_Attribute_Single.

A

■Data type

Indicates the class-instance data type. The data types available in FX5-ENET/IP (determined by the CIP specifications) are shown below.

Item	Description	Data size	Range
BOOL	Bit data	1 byte	0: Off (False) 1: On (True)
SINT	Signed 8-bit data	1 byte	-128 to +127
INT	Signed 16-bit data	2 byte	-32768 to +32767
DINT	Signed 32-bit data	4 byte	-2147483648 to +2147483647
USINT	Unsigned 8-bit data	1 byte	0 to 255
UINT	Unsigned 16-bit data	2 byte	0 to 65535
UDINT	Unsigned 32-bit data	4 byte	0 to 4294967295
ULINT	Unsigned 64-bit data	8 byte	0 to 18446744073709551615
REAL	Single-precision floating point real number	4 byte	E±1.17549435-38 to E±3.40282347+38
LREAL	Double-precision floating point real number	8 byte	E±2.2250738585072014-308 to E±1.7976931348623157+308
STRING	Character string data	Depends on the number of characters.	—
BYTE	Bit string (8 bits)	1 byte	—
WORD	Bit string (16 bits)	2 byte	—
DWORD	Bit string (32 bits)	4 byte	—
Padded EPATH	CIP path segment	4 byte	—

■Setting value (Set)/stored value (Get)

The content indicated by each value varies depending on the content of access.

Item	Description
"Get" is available	The setting value (Set)/stored value (Get) can be read from the FX5-ENET/IP.
"Set" is available	The setting value (Set)/stored value (Get) can be set on the FX5-ENET/IP.

Identity

Object name	Class ID
Identity	01H

Class attribute (instance ID: 00H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Revision	UINT	Object revision	0001H
2	○	×	Max Instance	UINT	Maximum instance number	0001H
3	○	×	Number of instances	UINT	Number of created instances	0001H

○: Available, ×: Not available

Class service

Service code	Service	Remarks
01H	Get_Attributes_All	00H is stored in the fourth to seventh bytes.
0EH	Get_Attribute_Single	—

Instance attribute (instance ID: 01H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)	
	Get	Set					
1	○	×	Vendor Id	UINT	Vendor ID number	00A1H	
2	○	×	Device Type	UINT	Device type	000CH	
3	○	×	Product Code	UINT	Product ID number	000AH	
4	○	×	Revision	Major Revision	USINT	Major revision	01H
				Minor Revision	USINT	Minor revision	01H
5	○	×	Status	WORD	Product status	Page 156	
6	○	×	Serial Number	UDINT	Serial number	Varies between modules.	
7	○	×	Product Name	STRING	Product name	"FX5-ENET/IP"	

○: Available, ×: Not available

A

■Details of product status

Bit	Description	Value
0	Owned	The word "connection" described below refers to the "Exclusive Owner" connection. (The bit is not changed by an Input Only or Listen Only connection.) • 0: EtherNet/IP communications are not connected as the target device. • 1: At least one connection of EtherNet/IP communications is connected as the target device.
1	Reserved	Fixed to 0
2	Configured	Fixed to 1
3	Reserved	Fixed to 0
4 to 7	Extended Device Status	The word "connection" described below refers to the "Exclusive Owner" connection. (The bit is not changed by an Input Only or Listen Only connection.) • 0010 (2H): Error occurring on one or more connections • 0011 (3H): No connections established • 0101 (5H): Major Recoverable Fault or Major Unrecoverable Fault occurring • 0110 (6H): One or more connections performing normal communications in RUN mode • 0111 (7H): One or more connections all performing communications in IDLE mode
8	Minor Recoverable Fault	• 0: No error • 1: Minor error occurring
9	Minor Unrecoverable Fault	Fixed to 0
10	Major Recoverable Fault	• 0: No error • 1: Moderate error occurring
11	Major Unrecoverable Fault	• 0: No error • 1: Major error occurring
12 to 15	Extended Device Status 2	Fixed to 0

Instance service

Service code	Service
01H	Get_Attributes_All
0EH	Get_Attribute_Single

Connection Manager

Object name	Class ID
Connection Manager	06H

Class attribute (instance ID: 00H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Revision	UINT	Object revision	0001H
2	○	×	Max Instance	UINT	Maximum instance number	0001H
3	○	×	Number of instances	UINT	Number of created instances	0001H

○: Available, ×: Not available

Class service

Service code	Service	Remarks
01H	Get_Attributes_All	00H is stored in the fourth to seventh bytes.
0EH	Get_Attribute_Single	—

Instance attribute (instance ID: 01H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Open Requests	UINT	Number of received Forward_Open services	Value on the left
2	○	×	Open Format Rejects	UINT	Number of Forward_Open services rejected due to format incompatibility	Value on the left
3	○	×	Open Resource Rejects	UINT	Number of Forward_Open services rejected due to insufficient resources	Value on the left
4	○	×	Open Other Rejects	UINT	Number of Forward_Open services rejected due to reasons other than format incompatibility and insufficient resources	Value on the left
5	○	×	Close Requests	UINT	Number of received Forward_Close services	Value on the left
6	○	×	Close Format Requests	UINT	Number of Forward_Close services rejected due to format incompatibility	Value on the left
7	○	×	Close Other Requests	UINT	Number of Forward_Close services rejected due to reasons other than format incompatibility	Value on the left
8	○	×	Connection Timeouts	UINT	Total number of connection timeouts that occurred in connections controlled by the Connection Manager	Value on the left

○: Available, ×: Not available

Instance service

Service code	Service
01H	Get_Attributes_All
0EH	Get_Attribute_Single
4EH	Forward_Close
54H	Forward_Open
5BH	Large_Forward_Open

TCP/IP Interface

Object name	Class ID
TCP/IP Interface	F5H

Class attribute (instance ID: 00H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Revision	UINT	Object revision	0004H
2	○	×	Max Instance	UINT	Maximum instance number	0001H
3	○	×	Number of instances	UINT	Number of created instances	0001H

○: Available, ×: Not available

Class service

Service code	Service	Remarks
01H	Get_Attributes_All	—
0EH	Get_Attribute_Single	—

Instance attribute (instance ID: 01H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Status	DWORD	Interface status	☞ Page 159
2	○	×	Configuration Capability	DWORD	Interface capability flag	☞ Page 159
3	○	×	Configuration Control	DWORD	Interface control flag	☞ Page 159
4	○	×	Physical Link	Path size	UINT	Path size of physical link object
				Path	Padded EPATH	Logical segment that identifies the physical link object • 0: 20H • 1: F6H • 2: 24H • 3: 01H
5	○	×	Interface Configuration	IP Address	UDINT	IP address of the device
				Network Mask	UDINT	Network mask of the device
				Gateway Address	UDINT	Default gateway address
				Name Server	UDINT	Primary name server
				Name Server 2	UDINT	Secondary name server
				Domain Name	STRING	Default domain name " " (null character)
6	○	×	Host Name	STRING	Host name	" " (null character)
13	○	○*1	Encapsulation Inactivity Timeout	UINT	Sets the time until the TCP connection or DTLS session is closed (unit: seconds)	• 1 to 3600 0 is invalid. (Default: 120)

○: Available, ×: Not available

*1 The setting data is saved to non-volatile memory.

■Details of interface status

Bit	Description	Value
0 to 3	Interface Configuration Status	Fixed to 2 (to set the IP address acquired from the parameter settings)
4	Mcast Pending	<ul style="list-style-type: none"> 0: No changes to TTL Value and Mcast Config 1: In the wait-for-restart state due to changes to TTL Value and Mcast Config
5 to 31	Reserved	Fixed to 0

■Details of interface capability flag

Bit	Description	Value
0	BOOTP Client	Fixed to 0 (because the BOOTP setting is not supported)
1	DNS Client	Fixed to 0 (because the name resolution setting with DNS is not supported)
2	DHCP Client	Fixed to 0 (because IP address setting with DHCP is not supported)
3	DHCP-DNS Update	Fixed to 0 (because the host name sending setting with DHCP requests is not supported)
4	Configuration Settable	Fixed to 0 (because Interface Configuration attribute setting is not supported)
5	Hardware Configurable	Fixed to 1 (available for IP addresses set with parameters)
6	Interface Configuration Change Requires Reset	Fixed to 0 (because Interface Configuration attribute setting is not supported)
7	AcdCapable	Fixed to 0 (because the address duplication detection setting is not supported)
8 to 31	Reserved	Fixed to 0

■Details of interface control flag

Bit	Description	Value
0 to 3	Configuration Method	Fixed to 0 (to use IP addresses set with parameters)
4	DNS Enable	Fixed to 0 (because the name resolution setting with DNS is not supported)
5 to 31	Reserved	Fixed to 0

■IP multicast address setting value

Value	Description
0	The default assignment algorithm is used to create multicast addresses.
1	Multicast addresses are assigned according to the values specified for Num Mcast and Mcast Start Addr.
2	Reserved

Instance service

Service code	Service
01H	Get_Attributes_All
0EH	Get_Attribute_Single
10H	Set_Attribute_Single

Ethernet Link

Object name	Class ID
Ethernet Link	F6H

Class attribute (instance ID: 00H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Revision	UINT	Object revision	0004H
2	○	×	Max Instance	UINT	Maximum instance number	0001H
3	○	×	Number of instances	UINT	Number of created instances	0001H

○: Available, ×: Not available

Class service

Service code	Service	Remarks
01H	Get_Attributes_All	—
0EH	Get_Attribute_Single	—

Instance attribute (instance ID: 01H)

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
1	○	×	Interface Speed	UDINT	Communication speed of the current interface in use (unit: Mbps)	• 10 • 100 • 1000
2	○	×	Interface Flags	DWORD	Interface status flag	☞ Page 162
3	○	×	Physical Address	USINT array [6]	MAC layer address	Varies between modules.
4	○	×	Interface Counters	In Octets	UDINT	Number of octets received through the interface
				In Ucast Packets	UDINT	Number of unicast packets received through the interface
				In NUCast Packets	UDINT	Number of non-unicast packets received through the interface
				In Discards	UDINT	Number of receive packets received through the interface but discarded
				In Errors	UDINT	Number of receive packets including errors (number of packets not included in In Discards)
				In Unknown Protos	UDINT	Number of receive packets including unknown protocols
				Out Octets	UDINT	Number of octets sent through the interface
				Out Ucast Protos	UDINT	Number of unicast packets sent through the interface
				Out NUCast Protos	UDINT	Number of non-unicast packets sent through the interface
				Out Discards	UDINT	Number of discarded transmission packets
				Out Errors	UDINT	Number of transmission packets including errors

Attribute ID	Access		Name	Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set				
5	○	×	Media Counters	UDINT	Number of receive frames with lengths that are not octet integers	00000000H
				UDINT	Number of receive frames that do not pass the FCS check	00000000H
				UDINT	Number of frames sent successfully with only one collision	00000000H
				UDINT	Number of frames sent successfully with two or more collisions	00000000H
				UDINT	Number of times SQE test error messages were created	00000000H
				UDINT	Number of frames for which the first transmission test was delayed due to the medium being busy	00000000H
				UDINT	Number of collisions detected in packet transmission after 512 bit time or later in packet transmission	00000000H
				UDINT	Number of failed frames in transmission due to excessive collisions	00000000H
				UDINT	Number of frames that failed to be transmitted due to internal MAC sublayer transmission errors	00000000H
				UDINT	Number of times the carrier sense condition was lost or was not asserted during attempts to send frames	00000000H
6	○	○	Interface Control	WORD	Interface control bits	001H
				UINT	Forced interface operation speed	0000H
7	○	×	Interface Type	USINT	Interface type	02H
8	○	×	Interface State	USINT	Current interface status	01H
9	○	○	Admin State	USINT	Current administration status	01H
11	○	×	Interface Capability	DWORD	Interface function other than Speed/Duplex	00000007H
				USINT	Number of Speed/Duplex arrays	04H
				UINT	Speed to force the interface to operate at	10, 10, 100, 100
				USINT	Duplex mode of the interface*1	0, 1, 0, 1

Attribute ID	Access		Name		Data type	Description	Setting value (Set)/stored value (Get)
	Get	Set					
12	○	×	HC Interface Counters	HCInOctets	ULINT	Number of octets received through the interface	000000000000000000H
				HCInUcastPkts	ULINT	Number of unicast packets received through the interface	000000000000000000H
				HCInMulticastPkts	ULINT	Number of multicast packets received through the interface	000000000000000000H
				HCInBroadcastPkts	ULINT	Number of broadcast packets received through the interface	000000000000000000H
				HCOutOctets	ULINT	Number of octets sent through the interface	000000000000000000H
				HCOutUcastPkts	ULINT	Number of packets sent through the interface	000000000000000000H
				HCOutMulticastPkts	ULINT	Number of multicast packets sent through the interface	000000000000000000H
				HCOutBroadcastPkts	ULINT	Number of broadcast packets sent through the interface	000000000000000000H
13	○	×	HC Media Counters	HCStatsAlignmentErrors	ULINT	64-bit version of Alignment Errors	000000000000000000H
				HCStatsFCSErrors	ULINT	64-bit version of FCS Errors	000000000000000000H
				HCStatsInternalMacTransmitErrors	ULINT	64-bit version of MAC Transmit Errors	000000000000000000H
				HCStatsFrameTooLongs	ULINT	64-bit version of Frame Too Long	000000000000000000H
				HCStatsInternalMacReceiveErrors	ULINT	64-bit version of MAC Receive Errors	000000000000000000H
				HCStatsSymbolErrors	ULINT	Number of illegal data symbols in the media when a valid carrier exists	000000000000000000H

○: Available, ×: Not available

*1 Arrays are displayed in combination with Interface Speed. This indicates the speed and Duplex mode supported by the module.

■Details of status flag

Bit	Description	Value
0	Link-up status	<ul style="list-style-type: none"> • 0: Link-down • 1: Link-up
1	Connection status (full-duplex/half-duplex)	<ul style="list-style-type: none"> • 0: Half-duplex • 1: Full-duplex
2 to 4	Auto-negotiation status	<ul style="list-style-type: none"> • 0: Auto-negotiation being executed • 1: Auto-negotiation failed and operation in progress with the default communication speed and method • 2: Communication method detection failed, but communication speed detection succeeded • 3: Auto-negotiation completed successfully • 4: Auto-negotiation unexecuted
5	Necessity of restart after manual settings	Fixed to 0 (because manual settings are not supported)
6	Local Hardware Fault detection status	Fixed to 0 (because Local Hardware Faults are not detected)
7 to 31	Fixed value	0

Instance service

Service code	Service
01H	Get_Attributes_All
0EH	Get_Attribute_Single
4CH	Get_and_Clear

Appendix 6 Processing Time

The data link processing time is explained below.

RPI (Requested Packet Interval)

FX5-ENET/IP transmits and receives data according to the RPI interval defined by the parameter setting set by EtherNet/IP Configuration Tool for FX5-ENET/IP. The fastest value of RPI is calculated by the following formula based on the PPS of FX5-ENET/IP and the number of connections.

$$\text{RPI fastest value} = \frac{2 \times \text{Number of connection}}{\text{PPS}} \quad (\text{s})$$

Transmission delay time


The following describes the formulas used to calculate the transmission delay time of EtherNet/IP communications.

Note that the processing time may be prolonged depending on the load ratio of the network (degree of line congestion), the processing performance of controllers, and the system configuration.

Class1 communication

Send delay time

The concept of transmission delay time in Class1 communication mode is shown below.

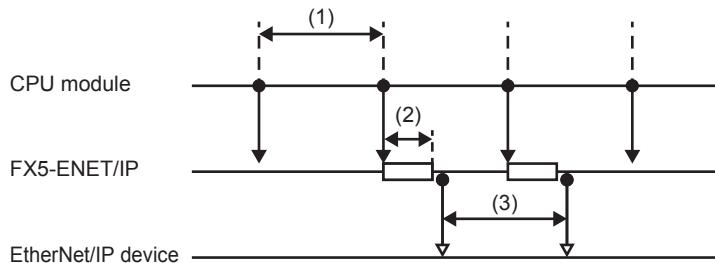

A


No.	Item name	Description
(1)	Sequence scan	Time required from setting the send data in a program to refreshing the buffer memory on the FX5-ENET/IP.
(2)	Send delay time	Time required for transferring send data from the buffer memory on the FX5-ENET/IP to the send buffer. (Approx. 1 ms)
(3)	RPI	RPI setting value (transmission interval time)

The transmitted data transmission delay time in Class1 communication mode is calculated by the following formula.

$$\text{Maximum value} = (1) + (2) + (3) \quad (\text{ms})$$

■Receive delay time

The concept of receive delay time in Class1 communication mode is shown below

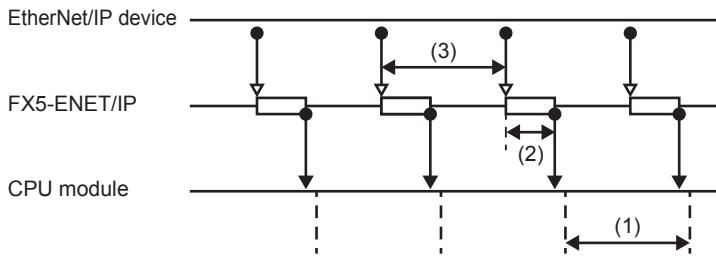

No.	Item name	Description
(1)	Sequence scan	Time required for refreshing the receive data from the buffer memory on the FX5-ENET/IP to a program.
(2)	Receive delay time	Time required for transferring receive data from the receive buffer to the buffer memory on the FX5-ENET/IP. (Approx. 1 ms)
(3)	RPI	RPI setting value (transmission interval time)

The received data transmission delay time in Class1 communication mode is calculated by the following formula.

$$\text{Maximum value} = (1) + (2) + (3) \text{ (ms)}$$

INDEX

A

Adapter	43
Application Trigger	148
Assurance of input/output data	33

B

Block assurance specification per connection	145, 150
Block assurance state per connection	145

C

Class1 communication status	149
Class1 communications input data area	150
Class1 communications output data area	151
Class1 I/O data size	146
Class1 I/O data start offset address	147
Class1 instance communications	24, 27
Class3 message communications	24, 34
Client function	39
Communication mode	50
Communication status setting function at the occurrence of a CPU stop error	24
Communication status setting function when a CPU stop error occurs	42
Connection behavior error status	149

E

EDS Management wizard	98
Ethernet diagnostics	24, 111
EtherNet/IP communication in process	137
EtherNet/IP communication start request	138
EtherNet/IP data link continuation specification	146
Event history function	24, 115
Exclusive Owner	27

H

Hardware test	24, 119
-------------------------	---------

I

Input Only	28
IP address change function	24
IP address setting	51
IP filter function	24

L

Listen Only	28
-----------------------	----

M

Module diagnostics	109
Module error clear request	138
Module ready	137

O

Online Action	69
-------------------------	----

S

Scanner	43
Server function	35, 40
Socket communication function	24

U

UCMM communications input data area	151
UCMM communications output data area	152
UCMM message communications	24, 38

REVISIONS

Revision date	Revision	Description
October 2018	A	First Edition

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2018 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Relay failure or output contact failure caused by usage beyond the specified life of contact (cycles).
 6. Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 7. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 8. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi MELSEC programmable controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi programmable controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for railway companies or public service purposes shall be excluded from the programmable controller applications.

In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable controller range of applications.

However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the user's discretion.

TRADEMARKS

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Ethernet is a trademark of Xerox Corporation.

EtherNet/IP and DeviceNet is a trademark of ODVA, Inc.

PROFIBUS is a trademark of PROFIBUS Nutzerorganisation e.V.

Anywire and ANYWIREASLINK is a registered trademark of the Anywire Corporation.

MODBUS® is a registered trademark of Schneider Electric SA.

SD logo and SDHC logo are trademarks or registered trademarks of SD-3C, LLC.



The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Manual number: SH(NA)-082027ENG-A

Model: FX5-U-ENETIP-E

Model code: 09R737

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

mitsubishi electric corporation

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

Specifications are subject to change without notice.