

NEXCOM International Co., Ltd.

**IoT Automation Solutions Business Group**  
**Applied Panel Display**  
**APPD 1200T/1205T/1500T/1700T/1900T**  
**User Manual**

# Contents

## Preface

Copyright .....	iv
Disclaimer .....	iv
Acknowledgements .....	iv
Regulatory Compliance Statements .....	iv
Declaration of Conformity .....	iv
RoHS Compliance .....	v
Warranty and RMA .....	vi
Safety Information .....	viii
Installation Recommendations .....	viii
Safety Precautions .....	ix
Technical Support and Assistance .....	x
Conventions Used in this Manual .....	x
Global Service Contact Information .....	xi
Package Contents .....	xiii
Ordering Information .....	xv

## Chapter 1: Product Introduction

Overview - APPD 1200T/1205T .....	1
Key Features .....	1
Overview - APPD 1500T .....	2
Key Features .....	2
Overview - APPD 1700T .....	3
Key Features .....	3
Overview - APPD 1900T .....	4
Key Features .....	4

Specifications .....	5
APPD 1200T .....	5
Specifications .....	6
APPD 1205T .....	6
Specifications .....	7
APPD 1500T .....	7
Specifications .....	8
APPD 1700T .....	8
Specifications .....	9
APPD 1900T .....	9
Knowing Your APPD Series .....	10
Front Top View of APPD 1200T/1205T .....	10
Front Top View of APPD 1500T .....	10
Front Top View of APPD 1700T .....	10
Front Top View of APPD 1900T .....	10
Front Top View in Detail .....	11
Rear Bottom View of APPD 1200T/1205T .....	12
Rear Bottom View of APPD 1500T .....	12
Rear Bottom View of APPD 1700T .....	12
Rear Bottom View of APPD 1900T .....	12
Rear Bottom View in Detail .....	13
Rear View of APPD 1200T/1205T .....	14
Rear View of APPD 1500T .....	15
Rear View of APPD 1700T .....	16
Rear View of APPD 1900T .....	17
Mechanical Dimensions .....	18
APPD 1200T/1205T .....	18

APPD 1500T .....	19
APPD 1700T .....	20
APPD 1900T .....	21

## Chapter 2: Connector Pin Definitions

External I/O Interfaces .....	22
USB Port .....	22
COM Port .....	22
DVI Port (DVI-D) .....	23
VGA Port .....	23
12 – 24V DC Input .....	24

## Chapter 3: System Setup

Panel Mounting .....	25
Installing the Power Adapter Bracket .....	28

## Chapter 4: Adjusting the Display

OSD Menu Functions .....	33
--------------------------	----

## Chapter 5: Touch Driver Settings .....

49

## Appendix A: Power Consumption .....

50

## Appendix B: Extended Display Identification Data Timing Support .....

51



# Preface

## Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

## Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

## Acknowledgements

APPD 1200T/1205T/1500T/1700T/1900T is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

## Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices and describes how to keep the system CE compliant.

## Declaration of Conformity

### FCC

This equipment has been tested and verified to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

### CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

## RoHS Compliance



### NEXCOM RoHS Environmental Policy and Status Update

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr<sub>6+</sub>) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

### How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2006 will be RoHS compliant. They will use the usual NEXCOM naming convention.



# Warranty and RMA

## NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

For NEXCOM Panel PC product lines (the APPC, MPPC series), they are also guaranteed against defect in materials and workmanship for the period of twenty-four (24) months in their motherboard design. For 3rd party parts, it follows with original suppliers' standard: 12 months for battery pack and LCD, 24 months for adapter / add on modules (including GSM module, RFID module, and antenna).

## NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the "NEXCOM RMA Service Form" with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the "NEXCOM RMA Service Form" for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products,

making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as "Out of Warranty."

- Any products returned by NEXCOM to other locations besides the customers' site will bear an extra charge and will be billed to the customer.

## Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

### System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

### Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.



## Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

## Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

## Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.

## Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

## Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
  - a. The power cord or plug is damaged.
  - b. Liquid has penetrated into the equipment.
  - c. The equipment has been exposed to moisture.
  - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - e. The equipment has been dropped and damaged.
  - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.



## Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at [www.nexcom.com](http://www.nexcom.com).
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
  - Product name and serial number
  - Detailed information of the peripheral devices
  - Detailed information of the installed software (operating system, version, application software, etc.)
  - A complete description of the problem
  - The exact wordings of the error messages

### Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

## Conventions Used in this Manual



### Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



### Caution:

Information to avoid damaging components or losing data.



### Note:

Provides additional information to complete a task easily.

## Global Service Contact Information

### Headquarters

#### **NEXCOM International Co., Ltd.**

9F, No. 920, Chung-Cheng Rd.,  
ZhongHe District, New Taipei City, 23586,  
Taiwan, R.O.C.  
Tel: +886-2-8226-7786  
Fax: +886-2-8226-7782  
[www.nexcom.com](http://www.nexcom.com)

### America

#### USA

#### **NEXCOM USA**

2883 Bayview Drive,  
Fremont CA 94538, USA  
Tel: +1-510-656-2248  
Fax: +1-510-656-2158  
Email: [sales@nexcom.com](mailto:sales@nexcom.com)  
[www.nexcom.com](http://www.nexcom.com)

### Asia

#### Taiwan

#### **NEXCOM Intelligent Systems**

##### **Taipei Office**

13F, No.920, Chung-Cheng Rd.,  
ZhongHe District,  
New Taipei City, 23586, Taiwan, R.O.C.  
Tel: +886-2-8226-7796  
Fax: +886-2-8226-7792  
Email: [sales@nexcom.com.tw](mailto:sales@nexcom.com.tw)  
[www.nexcom.com.tw](http://www.nexcom.com.tw)

### **NEXCOM Intelligent Systems**

#### **Taichung Office**

16F, No.250, Sec. 2, Chongde Rd.,  
Beitun Dist.,  
Taichung City 406, R.O.C.  
Tel: +886-4-2249-1179  
Fax: +886-4-2249-1172  
Email: [sales@nexcom.com.tw](mailto:sales@nexcom.com.tw)  
[www.nexcom.com.tw](http://www.nexcom.com.tw)

### Japan

#### **NEXCOM Japan**

9F, Tamachi Hara Bldg.,  
4-11-5, Shiba Minato-ku,  
Tokyo, 108-0014, Japan  
Tel: +81-3-5419-7830  
Fax: +81-3-5419-7832  
Email: [sales@nexcom-ja.com](mailto:sales@nexcom-ja.com)  
[www.nexcom-ja.com](http://www.nexcom-ja.com)

### China

#### **NEXCOM China**

Floor 5, No.4, No.7 fengxian middle Rd.,  
(Beike Industrial Park), Haidian District,  
Beijing, 100094, China  
Tel: +86-10-5704-2680  
Fax: +86-10-5704-2681  
Email: [sales@nexcom.cn](mailto:sales@nexcom.cn)  
[www.nexcom.cn](http://www.nexcom.cn)

**NEXCOM Shanghai**

Room 603/604, Huiyimmingzun Plaza Bldg., 1,  
No.609, Yunlin East Rd.,  
Shanghai, 200333, China  
Tel: +86-21-5278-5868  
Fax: +86-21-3251-6358  
Email: sales@nexcom.cn  
www.nexcom.cn

**NEXCOM Surveillance Technology Corp.**

Room202, Building B,  
the GuangMing Industrial Zone Zhonghua Rd.,  
Minzhi Street, Longhua District,  
Shenzhen 518131, China  
Tel: +86-755-8364-7768  
Fax: +86-755-8364-7738  
Email: steveyang@nexcom.com.tw  
www.nexcom.cn

**NEXCOM United System Service**

Hui Yin Ming Zun Building Room 1108,  
Building No. 11, 599 Yunling Road, Putuo District,  
Shanghai, 200062, China  
Tel: +86-21-6125-8282  
Fax: +86-21-6125-8281  
Email: frankyang@nexcom.cn  
www.nexcom.cn

**Europe****United Kingdom**  
**NEXCOM EUROPE**

10 Vincent Avenue,  
Crownhill Business Centre,  
Milton Keynes, Buckinghamshire  
MK8 0AB, United Kingdom  
Tel: +44-1908-267121  
Fax: +44-1908-262042  
Email: sales.uk@nexcom.eu  
www.nexcom.eu

**Italy****NEXCOM ITALIA S.r.l**

Via Lanino 42,  
21047 Saronno (VA), Italia  
Tel: +39 02 9628 0333  
Fax: +39 02 9625 570  
Email: nexcomitalia@nexcom.eu  
www.nexcomitalia.it

## Package Contents

Before continuing, verify that the package you received is complete. The APPD series package, APPD 1200T/1205T/1500T/1700T/1900T, should have all the items listed in the table.

### APPD 1200T/1205T/1500T/1700T

Item	Description	Qty
1	Panel Mount Kit	12
2	Driver CD	1
3	Touch Pen	1
4	VGA Cable (1.8m)	1
5	USB Cable (1.8m)	1
6	Serial Cable (1.8m)	1
7	Terminal blocks 3-pin Phoenix Contact Plug	1



Terminal blocks  
3-pin Phoenix  
Contact Plug

VGA Cable



Panel Mount Kit



Driver CD



Touch Pen



USB Cable



Serial Cable




Note: Package contents may vary depending on your country region, some items may be optional. Please contact your local distributor for more information.

**APPD 1900T**

Item	Description	Qty
1	Panel Mount Kit	14
2	Driver CD	1
3	Touch Pen	1
4	VGA Cable (1.8m)	1
5	USB Cable (1.8m)	1
6	Serial Cable (1.8m)	1
7	Terminal blocks 3-pin Phoenix Contact Plug	1



Panel Mount Kit

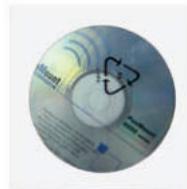

Driver CD



Touch Pen

Terminal blocks  
3-pin Phoenix  
Contact Plug

VGA Cable



USB Cable



Serial Cable



Note: Package contents may vary depending on your country region, some items may be optional. Please contact your local distributor for more information.



## Ordering Information

The following provides ordering information for the Applied Panel Display series.

- **Barebone**

**APPD 1200T-B (P/N: 10IA1200T01X0)**

12.1" SVGA industrial 4:3 LED Backlight flush touch monitor with VGA, and DVI-D input, 12~24VDC input, RS-232 and USB touch screen interfaces

**APPD 1205T-B (P/N: 10IA1205T01X0)**

12.1" XGA industrial 4:3 LED Backlight flush touch monitor with VGA, and DVI-D input, 12~24VDC input, RS-232 and USB touch screen interfaces

**APPD 1500T-C (P/N: 10IA1500T00X0)**

15" XGA industrial 4:3 LED Backlight flush touch monitor with VGA, and DVI-D input, 12~24VDC input, RS-232 and USB touch screen interfaces

**APPD 1700T (P/N: 10IAD170002X0)**

17" SXGA industrial 4:3 LCD flush touch monitor with VGA and DVI-D input, 12~24VDC input, RS-232 and USB touch screen interfaces

**APPD 1900T-C (P/N: 10IA1900T02X0)**

19" SXGA industrial 4:3 LED Backlight flush touch monitor with VGA, and DVI-D input, 12~24V DC input, RS-232 and USB touch screen interfaces

- **Optional**

**12V, 60W AC/DC power adapter w/o power cord (P/N: 7400060011X00)**

US Power Cord (P/N: 60233POW17X00)

UK Power Cord (P/N: 60233POW19X00)

EU Power Cord (P/N: 60233POW18X00)

1.8m DVI-D Cable (P/N: 60233DVI28X00)



# Chapter 1: Product Introduction

## Overview - APPD 1200T/1205T



## Key Features

- IP65 compliant plastic front bezel with flush panel by 5-wire touch screen
- Dual display input interface: analog VGA and DVI-D
- Shares identical appearance with APPC series
- Dual touch screen interface: RS232 and USB
- Ultra slim in depth
- OSD Multilanguage function

## Overview - APPD 1500T



## Key Features

- IP65 compliant plastic front bezel with flush panel by 5-wire touch screen
- Dual display input interface: analog VGA and DVI-D
- Shares identical appearance with APPC series
- Dual touch screen interface: RS232 and USB
- Ultra slim in depth
- OSD Multilanguage function



## Overview - APPD 1700T



## Key Features

- IP65 compliant plastic front bezel with flush panel by 5-wire touch screen
- Dual display input interface: analog VGA and DVI-D
- Shares identical appearance with APPC series
- Dual touch screen interface: RS232 and USB
- Ultra slim in depth
- OSD Multilanguage function

## Overview - APPD 1900T



## Key Features

- IP65 compliant plastic front bezel with flush panel by 5-wire touch screen
- Dual display input interface: analog VGA and DVI-D
- Shares identical appearance with APPC series
- Dual touch screen interface: RS232 and USB
- Ultra slim in depth
- OSD Multilanguage function

# Specifications

## APPD 1200T

### Panel

- LCD Size: 12.1", 4:3
- Resolution: SVGA 800 x 600
- Luminance: 500cd/m<sup>2</sup>
- Contrast ratio: 700
- LCD color: 16.7M
- Viewing Angle: 65 (U), 75 (D), 80 (L), 80 (R)
- Backlight: LED

### Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 80%
- Interface: USB and RS232

### Rear I/O

- Touch screen interface port: RS-232 (1x DB9) / USB Type A
- Video port: VGA (1x DB15) / DVI-D (1x DVI-I connector)
- DC power input connector: 3-Pin Phoenix terminal blocks

### OSD Function

- OSD keypad
- Multilanguage OSD

### Mechanical & Environment

- Color: Pantone black and black silver PC box
- IP protection: IP65 front
- Mounting: panel/ wall/ stand/ VESA 100mm x 100mm

- Power input: 12V~24VDC
- Power adapter: optional AC to DC power adapter (+12V, 60W)
- Vibration:
  - IEC 68 2-64
  - 2Grms @ sine, 5~500Hz, 1hr/axis (Operating)
  - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  - IEC 68 2-27
  - 20G@wall mount, half sine, 11ms
  - Operating temperature: -5°C to 50°C
  - Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 317 x 243 x 53.5mm
- Weight: 2.8kg

### Certifications

- CE approval
- FCC Class B

# Specifications

## APPD 1205T

### Panel

- LCD Size: 12.1", 4:3
- Resolution: XGA 1024 x 768
- Luminance: 500cd/m<sup>2</sup>
- Contrast ratio: 700
- LCD color: 16.7M
- Viewing Angle: 70 (U), 70 (D), 80 (L), 80 (R)
- Backlight: LED

### Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 80%
- Interface: USB and RS232

### Rear I/O

- Touch screen interface port: RS-232 (1x DB9) / USB Type A
- Video port: VGA (1x DB15) / DVI-D (1x DVI-I connector)
- DC power input connector: 3-Pin Phoenix terminal blocks

### OSD Function

- OSD keypad
- Multilanguage OSD

### Mechanical & Environment

- Color: Pantone black and black silver PC box
- IP protection: IP65 front
- Mounting: panel/ wall/ stand/ VESA 100mm x 100mm

- Power input: 12V~24VDC
- Power adapter: optional AC to DC power adapter (+12V, 60W)
- Vibration:
  - IEC 68 2-64
  - 2Grms @ sine, 5~500Hz, 1hr/axis (Operating)
  - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  - IEC 68 2-27
  - 20G@wall mount, half sine, 11ms
  - Operating temperature: -5°C to 50°C
  - Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 317 x 243 x 53.5mm
- Weight: 2.8kg

### Certifications

- CE approval
- FCC Class B

# Specifications

## APPD 1500T

### Panel

- LCD Size: 15", 4:3
- Resolution: XGA 1024 x 768
- Luminance: 500cd/m<sup>2</sup>
- Contrast ratio: 2500
- LCD color: 16.7M
- Viewing Angle: 80 (U), 80 (D), 80 (L), 80 (R)
- Backlight: LED

### Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB and RS232

### Rear I/O

- Touch screen interface port: RS-232 (1x DB9) / USB Type A
- Video port: VGA (1x DB15) / DVI-D (1x DVI-I connector)
- DC power input connector: 3-Pin Phoenix terminal blocks

### OSD Function

- OSD keypad
- Multilanguage OSD

### Mechanical & Environment

- Color: Pantone black and black silver PC box
- IP protection: IP65 front
- Mounting: panel/ wall/ stand/ VESA 100mm x 100mm

- Power input: 12V~24VDC
- Power adapter: optional AC to DC power adapter (+12V, 60W)
- Vibration:
  - IEC 68 2-64
  - 2Grms @ sine, 5~500Hz, 1hr/axis (Operating)
  - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  - IEC 68 2-27
  - 20G@wall mount, half sine, 11ms
  - Operating temperature: -5°C to 50°C
  - Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 384.37 x 309.95 x 51mm
- Weight: 3.9kg

### Certifications

- CE approval
- FCC Class B

# Specifications

## APPD 1700T

### Panel

- LCD Size: 17", 4:3
- Resolution: SXGA 1280 x 1024
- Luminance: 350cd/m<sup>2</sup>
- Contrast ratio: 800
- LCD color: 16.7M
- Viewing Angle: 60 (U), 80 (D), 80 (L), 80 (R)
- Backlight: LED

### Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB and RS232

### Rear I/O

- Touch screen interface port: RS-232 (1x DB9) / USB Type A
- Video port: VGA (1x DB15) / DVI-D (1x DVI-I connector)
- DC power input connector: 3-Pin Phoenix terminal blocks

### OSD Function

- OSD keypad
- Multilanguage OSD

### Mechanical & Environment

- Color: Pantone black and black silver PC box
- IP protection: IP65 front
- Mounting: panel/ wall/ stand/ VESA 100mm x 100mm

- Power input: 12V~24VDC
- Power adapter: optional AC to DC power adapter (+12V, 60W)
- Vibration:
  - IEC 68 2-64
  - 2Grms @ sine, 5~500Hz, 1hr/axis (Operating)
  - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  - IEC 68 2-27
  - 20G@wall mount, half sine, 11ms
  - Operating temperature: -5°C to 50°C
  - Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 410.4 x 340.4 x 43.7mm
- Weight: 5.3kg

### Certifications

- CE approval
- FCC Class B

# Specifications

## APPD 1900T

### Panel

- LCD Size: 19", 4:3
- Resolution: SXGA 1280 x 1024
- Luminance: 350cd/m<sup>2</sup>
- Contrast ratio: 1000
- LCD color: 16.7M
- Viewing Angle: 80 (U), 80 (D), 85 (L), 85 (R)
- Backlight: LED

### Touch Screen

- 5-wire resistive (flush panel type)
- Light transmission: 81%
- Interface: USB and RS232

### Rear I/O

- Touch screen interface port: RS-232 (1x DB9) / USB Type A
- Video port: VGA (1x DB15) / DVI-D (1x DVI-I connector)
- DC power input connector: 3-Pin Phoenix terminal blocks

### OSD Function

- OSD keypad
- Multilanguage OSD

### Mechanical & Environment

- Color: Pantone black and black silver PC box
- IP protection: IP65 front
- Mounting: panel/ wall/ stand/ VESA 100mm x 100mm

- Power input: 12V~24VDC
- Power adapter: optional AC to DC power adapter (+12V, 60W)
- Vibration:
  - IEC 68 2-64
  - 2Grms @ sine, 5~500Hz, 1hr/axis (Operating)
  - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  - IEC 68 2-27
  - 20G@wall mount, half sine, 11ms
  - Operating temperature: -5°C to 50°C
  - Storage temperature: -20°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 457.64 x 379.24 x 49.15mm
- Weight: 5.5kg

### Certifications

- CE approval
- FCC Class B

## Knowing Your APPD Series

### Front Top View of APPD 1200T/1205T



Power & OSD  
Menu Buttons

### Front Top View of APPD 1700T



Power & OSD  
Menu Buttons

### Front Top View of APPD 1500T



Power & OSD  
Menu Buttons


### Front Top View of APPD 1900T



Power & OSD  
Menu Buttons



## Front Top View in Detail

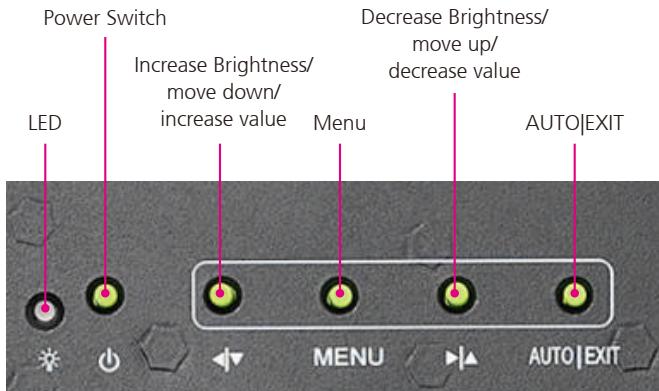

### LED

Displays the power status of the display. Green LED indicates the display is switched on, if the display is not connected to a computer, the LED will flash red.

### Power Switch

Press to power-on or power-off the display.



No OSD menu: Press to increase the brightness of the screen.

Inside OSD menu: Press to move the selection down in OSD menu.

Configuring options: Press to increase the value.



No OSD menu: Press to decrease the brightness of the screen.

Inside OSD menu: Press to move the selection up in OSD menu.

Configuring options: Press to decrease the value.

### OSD Menu

No OSD Menu: Press to load the OSD menu.

Inside OSD Menu: Press to select the highlighted option in OSD menu.

### AUTO|EXIT

Press to exit the OSD menu, or return to main menu.



The OSD will exit automatically if there is no activity in 5 seconds. This timer can be adjusted in OSD menu (Default: On, 5 seconds).

**Rear Bottom View of APPD 1200T/1205T**



**Rear Bottom View of APPD 1700T**



**Rear Bottom View of APPD 1500T**



**Rear Bottom View of APPD 1900T**





## Rear Bottom View in Detail



### Touchscreen Connector (USB) (Optional)

This USB connector must be attached to the USB port of the PC. The touchscreen cable is included in accessory box.

### Touchscreen Connector (DB-9) (Optional)

This RS-232 connector must be connected to the RS-232 port of the PC.



RS-232 & USB touchscreen interface does not allow connection into the system at the same time.

### DVI Port (DVI-D)

Connected with a standard DVI connector through I/O port of this unit. Only supports digital signals.

### VGA Port (DB-15)

This DB-15 connector can be connected to the system.

### 12 – 24V DC Input

Terminal block socket used to plug a DC power cord.

## Rear View of APPD 1200T/1205T



### VESA Mounting Holes

These are mounting holes for VESA mount (100x100mm)

## Rear View of APPD 1500T



### VESA Mounting Holes

These are mounting holes for VESA mount (100x100mm)

## Rear View of APPD 1700T



### VESA Mounting Holes

These are mounting holes for VESA mount (100x100mm)



## Rear View of APPD 1900T



 




### VESA Mounting Holes

These are mounting holes for VESA mount (100x100mm)








## Mechanical Dimensions

### APPD 1200T/1205T

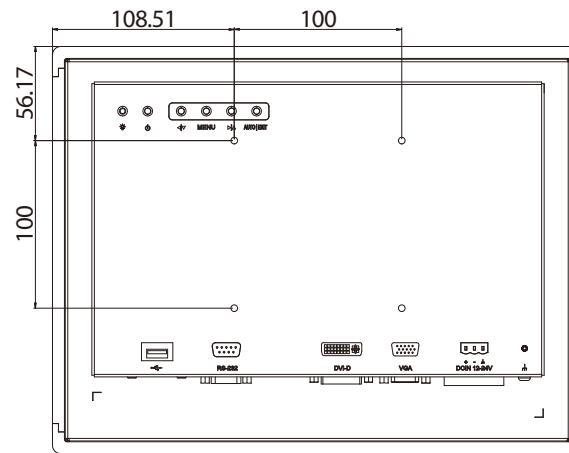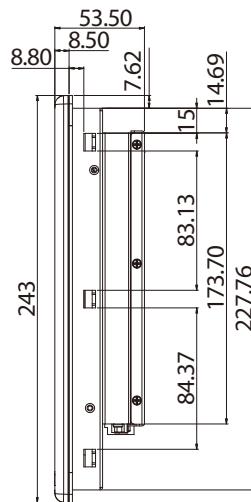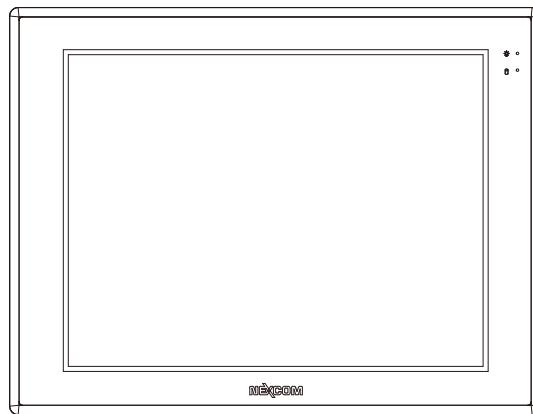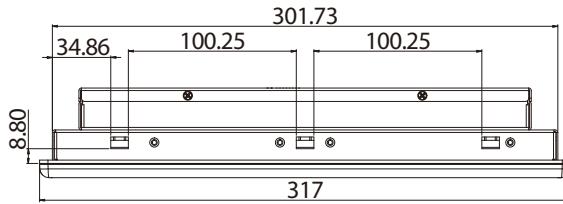




## APPD 1500T

 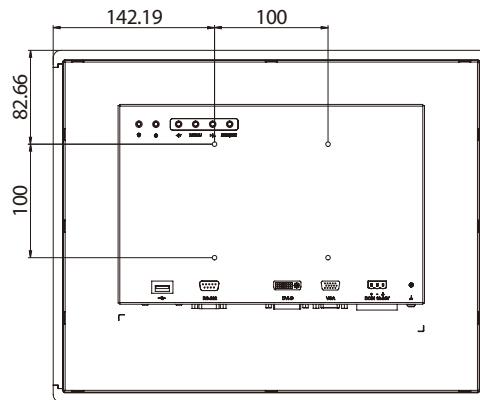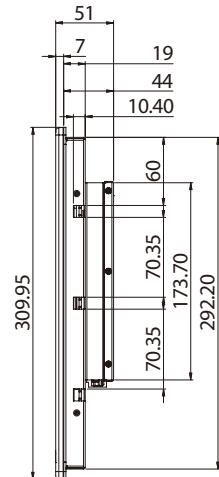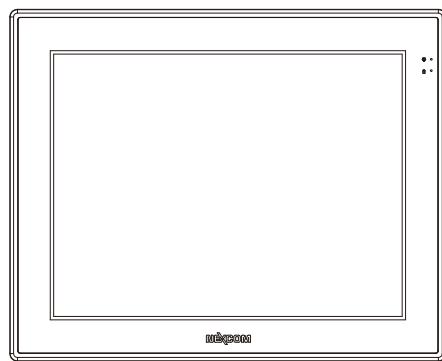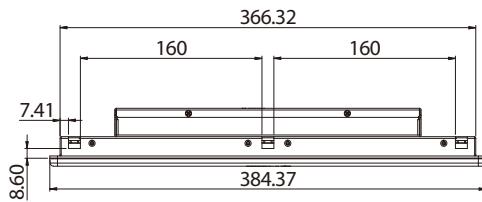








## APPD 1700T

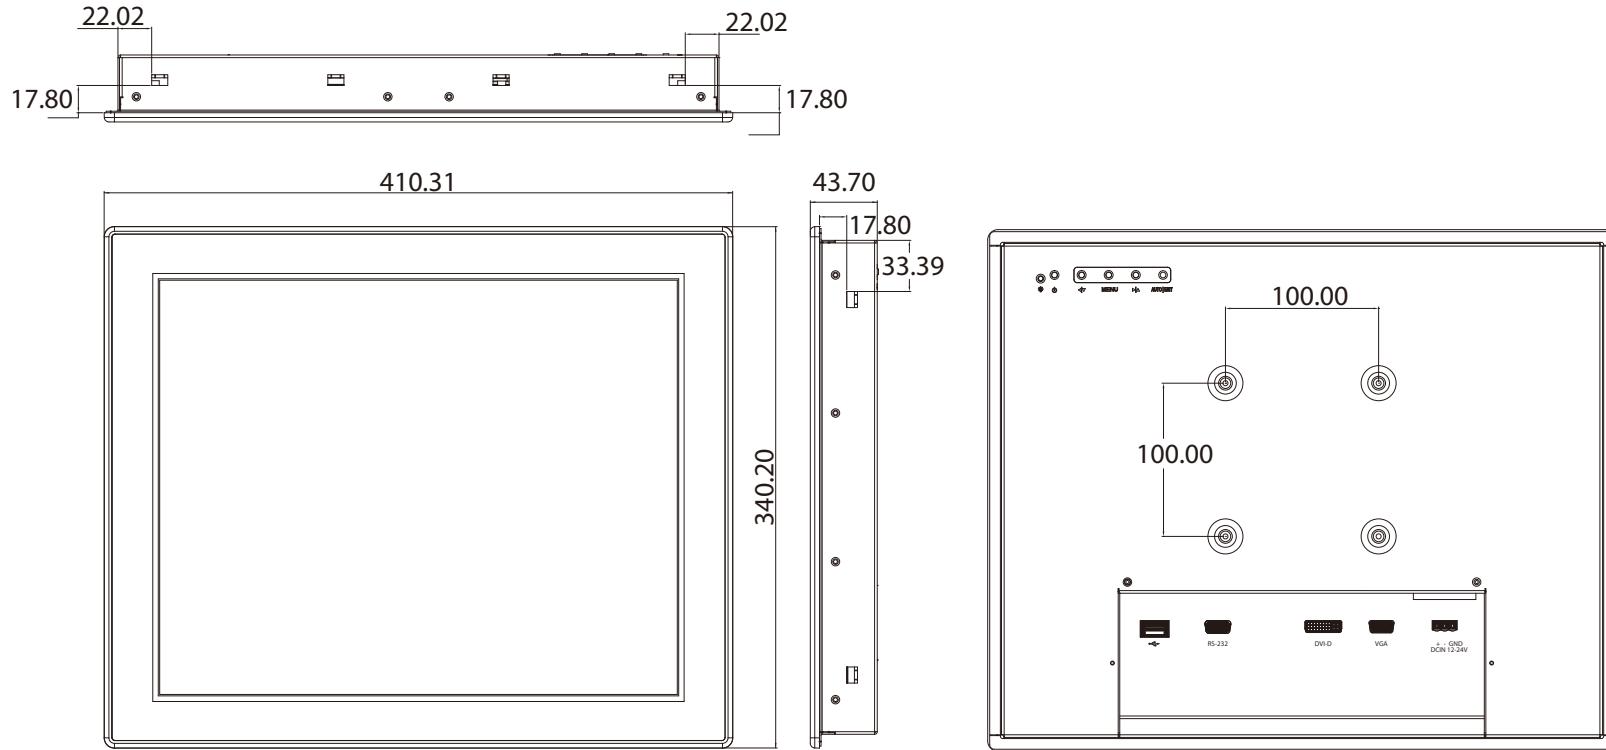



## APPD 1900T

 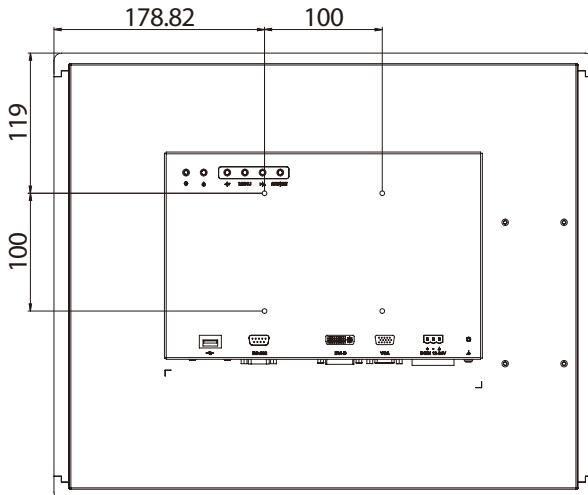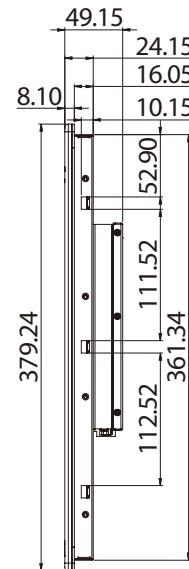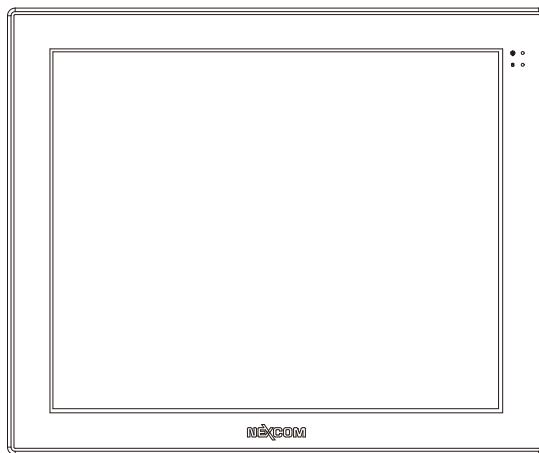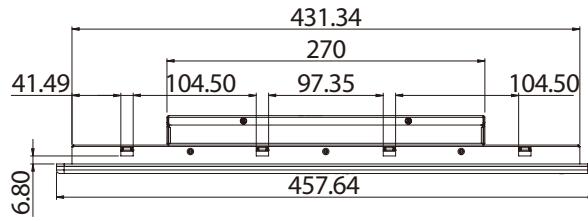


# Chapter 2: Connector Pin Definitions

## External I/O Interfaces

### USB Port

 
Connector type: USB port



Pin	Definition
1	VCC5
2	DATA_N
3	DATA_P
4	GND

### COM Port

 Connector type: DB-9 port




Pin	Definition	Pin	Definition
1	NC	2	RXD#: Receive Data
3	TXD: Transmit Data	4	NC
5	GND	6	NC
7	NC	8	NC
9	NC		



## DVI Port (DVI-D)

 
Connector type: 24-pin D-Sub, 2.0mm-M-180 (DVI)



Pin	Definition	Pin	Definition
1	TMDS Data 2-	2	TMDS Data 2+
3	Shield	4	NC
5	NC	6	DDC clock
7	DDC data	8	Reserved
9	TMDS Data 1-	10	TMDS Data 1+
11	Shield	12	NC
13	NC	14	+5V
15	GND	16	Hot plug detect
17	TMDS data 0-	18	TMDS data 0+
19	Shield	20	NC
21	NC	22	Shield
23	TMDS clock+	24	TMDS clock-
C1	NC	C2	NC
C3	NC	C4	NC
C5	NC		

## VGA Port

 Connector type: DB-9 port, 9-pin D-Sub (COM1)



Pin	Definition	Pin	Definition
1	RED	2	GREEN
3	BLUE	4	ID2
5	GND	6	RGND
7	GGND	8	BGND
9	KEY	10	SGND
11	ID0	12	SDA
13	HSYNC or CSYNC	14	VSYNC
15	SCL		

## 12 – 24V DC Input

Connector type: 3-pin Terminal Block




Pin	Definition
1	+
2	-
3	GND

# Chapter 3: System Setup


## Panel Mounting

1. Select a place on the panel where you will mount the Industrial Touch Monitor.
2. Cut out a shape on the panel that corresponds to the Industrial Touch Monitor's rear dimensions.



The thickness of the panel (e.g. steel board, plank, acrylic board, wall, etc.) where you will mount the Industrial Touch Monitor must not exceed 3mm for APPD 1900T and 5mm for APPD 1200T/1205T/1500T/1700T. If the distance between the front bezel and panel mount hole is too wide, it will not fit the panel mount kit.

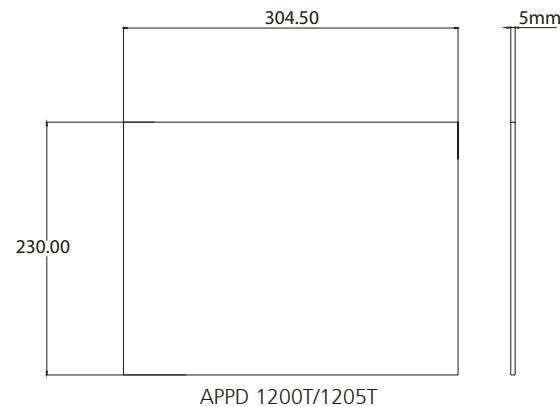

APPD 1200T/1205T

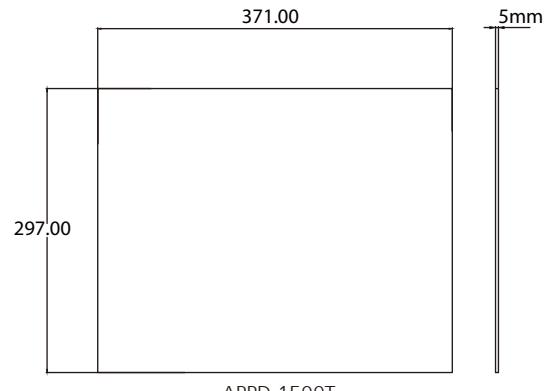

APPD 1500T

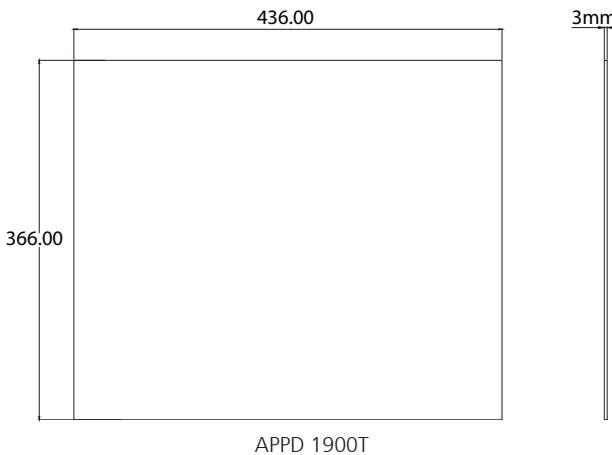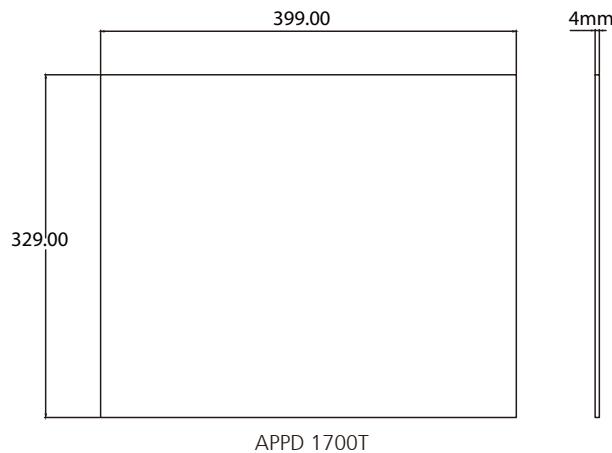


3. Slide the Industrial Touch Monitor through the hole until it is properly fitted against the panel.

4. Position the mounting clamps along the rear edges of the Industrial Touch Monitor. The first and second clamps must be positioned and secured diagonally prior to mounting the rest of the clamps. Tighten the clamp's screw until it touches the panel.



Do not overtighten the screws to prevent damaging the Panel PC.

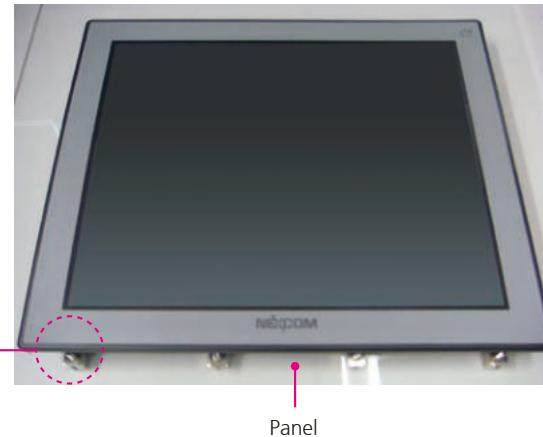

The Torque value:  
APPD series: 5.8~6.5 kg-cm



5. The illustration below shows all clamps properly mounted.





## Installing the Power Adapter Bracket

(Optional accessory for APPD 1900T only)

1. Locate the mounting screws for the bracket on the back side of the chassis.




2. Remove the mounting screws and store them in a safe place for later use.



3. Wire the power adapter cabling into the cable opening on the bracket, then place the adapter inside the bracket.



4. Turn the bracket over to the back side, and place the cable tie into the two tie mounts.

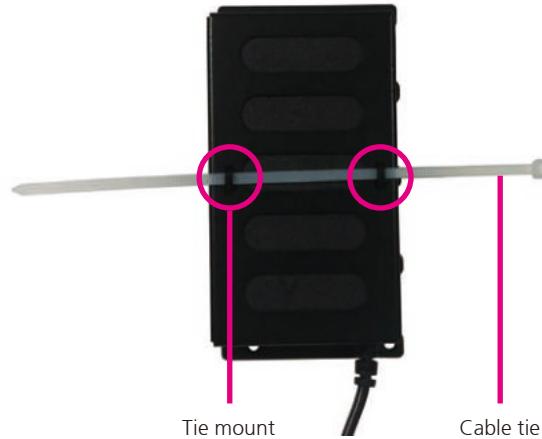


5. Wrap the power adapter cable, then secure the cable firmly by tying the cable tie.





6. With the bracket still facing backwards, align the mounting holes on the bracket to the mounting holes on the back of the chassis, then tighten screws to secure it.

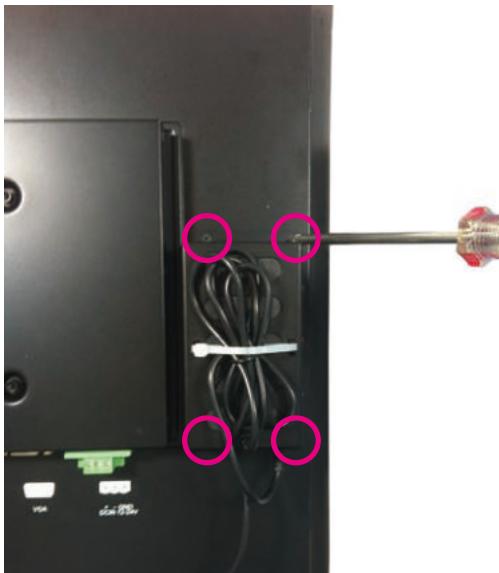


7. Plug the 3-pin terminal block connector into the DC input.



8. Plug the positive, negative and GND wires of the DC power cable into the corresponding pins on the DC input, then tighten the screws on the terminal blocks to secure the wires.



9. Plug the AC power cord into the power adapter.

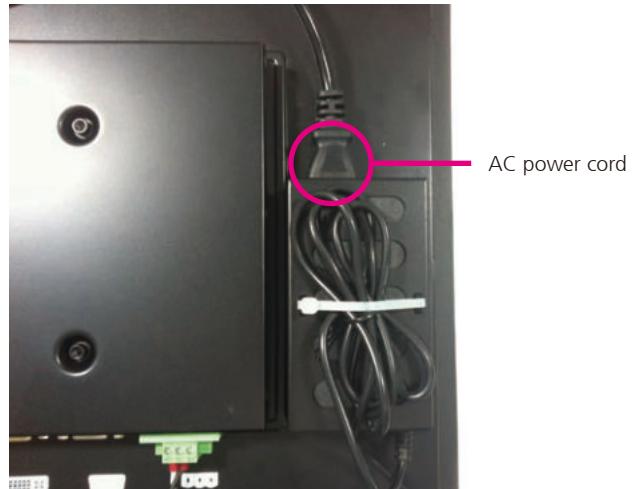

Before plugging the DC power cable wires into the DC input, use a multimeter or voltmeter to measure which wire is positive "+", negative "-" and GND, and ensure that they are connected to the correct pins.






# Chapter 4: Adjusting the Display


## OSD Menu Functions

The On Screen Display (OSD) menu provides options to adjust the display. Press the MENU button on the back of the display panel to open the OSD menu. Refer to the images below for each OSD menu options.

### 1. Colour


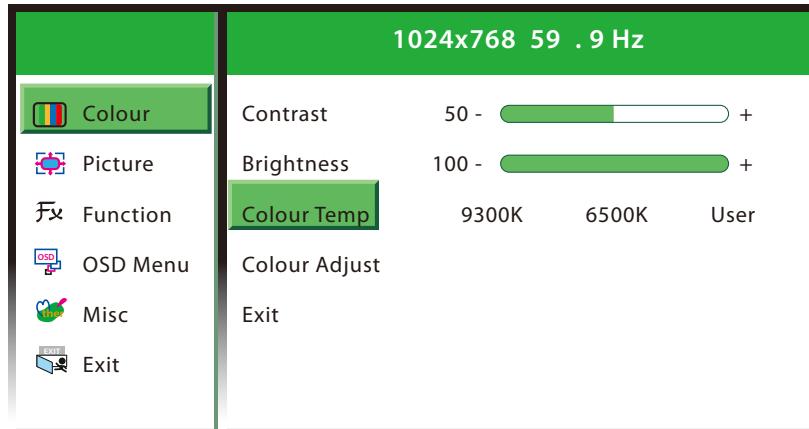



### Contrast

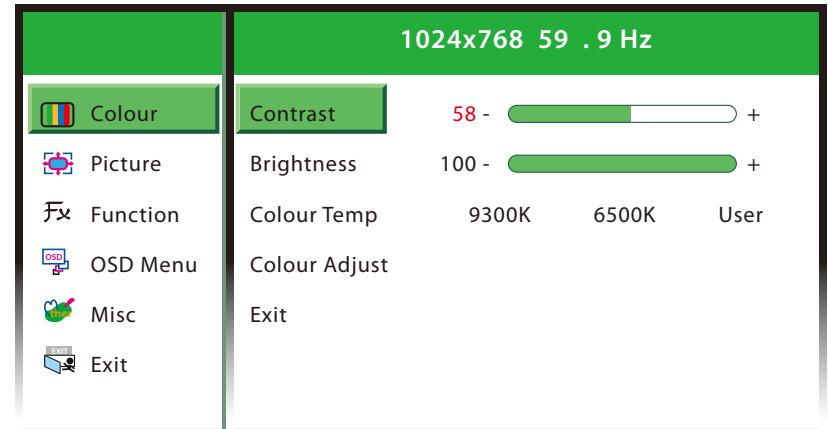





## Brightness

  
 to increase the brightness.  

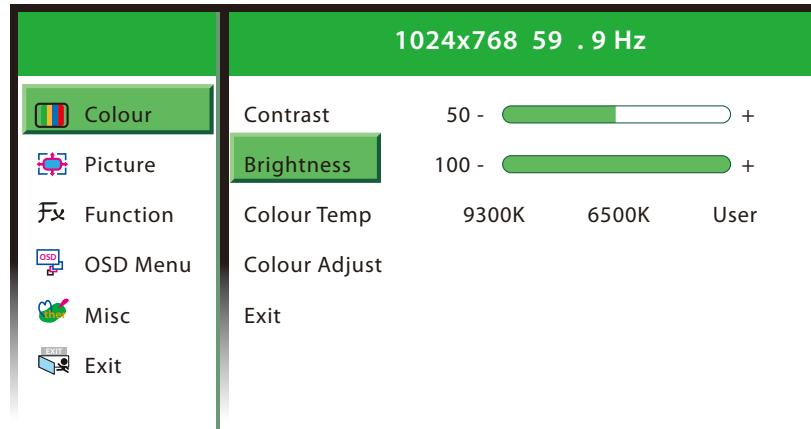 to decrease the brightness.

 



## Colour Temp

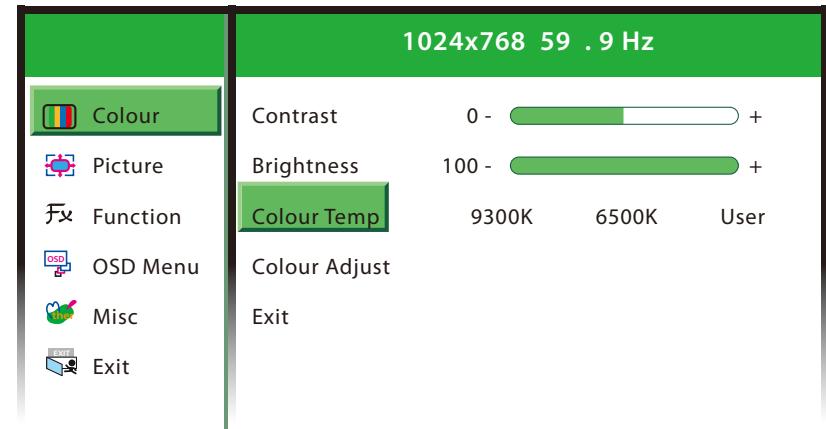
 to move it towards left.  

 to move it towards right.



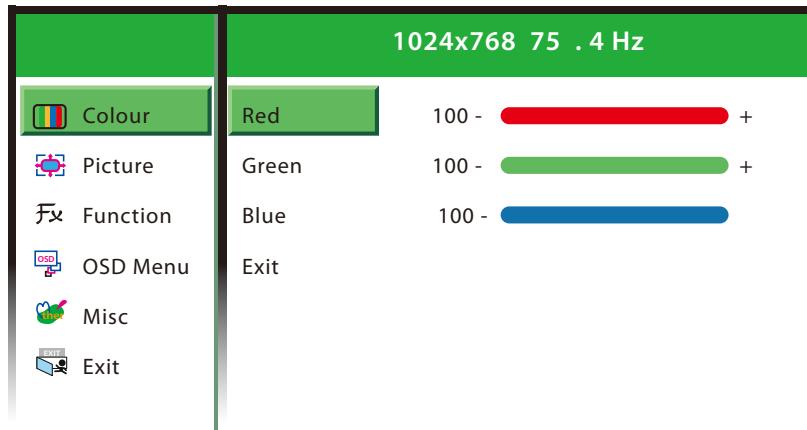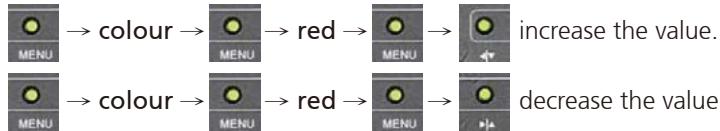


## Colour Adjust



## Exit


Exits the Colour Adjust sub-menu or press the button to exit.

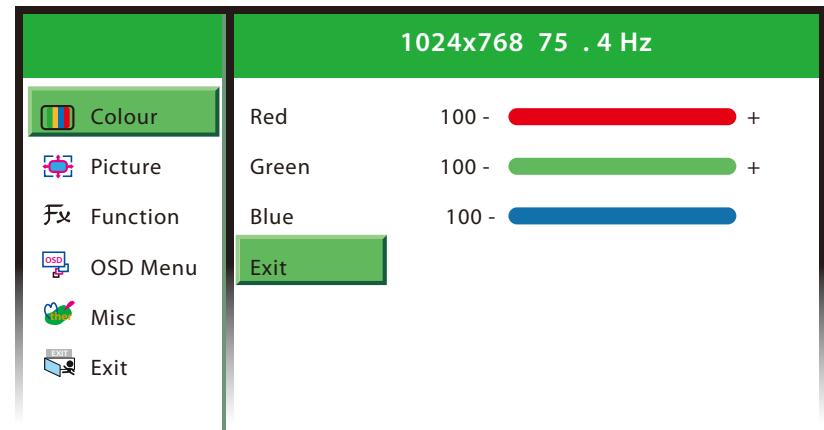




## Exit

Exits the Colour sub-menu and return to main menu, or press the  button continuously till exit.

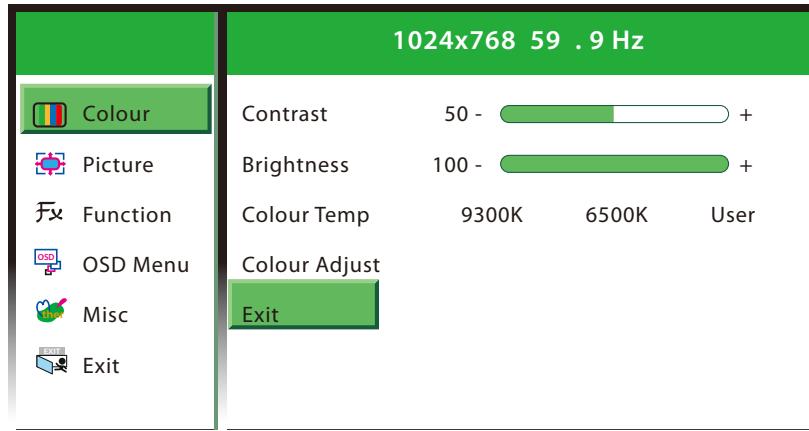




## 2. Picture

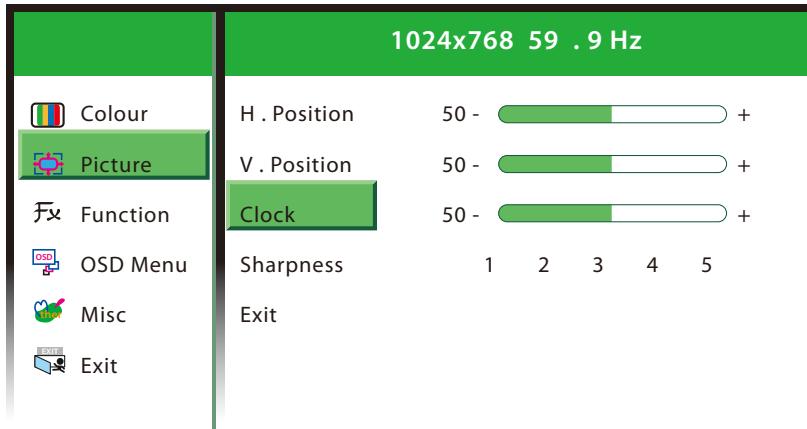

### H. Position

→ colour → → picture → → H.position → → to move the screen towards right.

→ colour → → picture → → H.position → → to move the screen towards left.

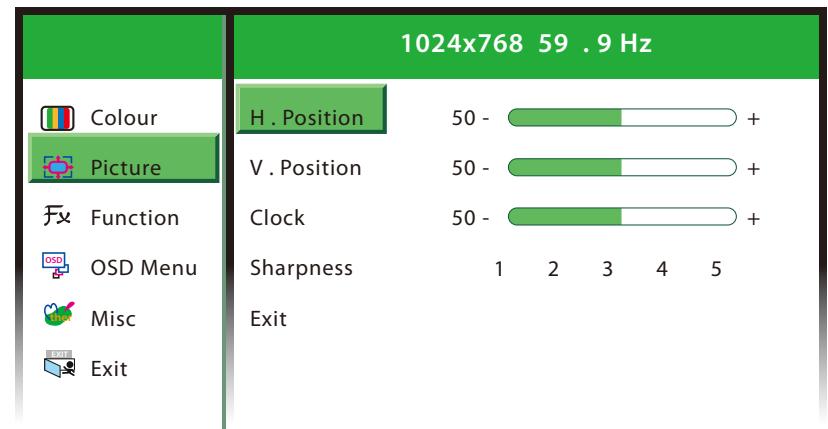




## V. Position

colour picture V.position to move the screen down.


colour picture V.position to move the screen up.

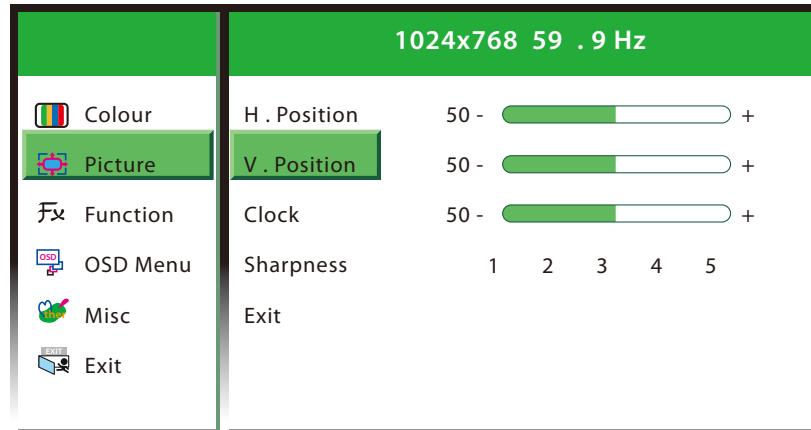

## Clock


colour picture V.position stretch the screen towards right.

colour picture Clock stretch the screen towards right.

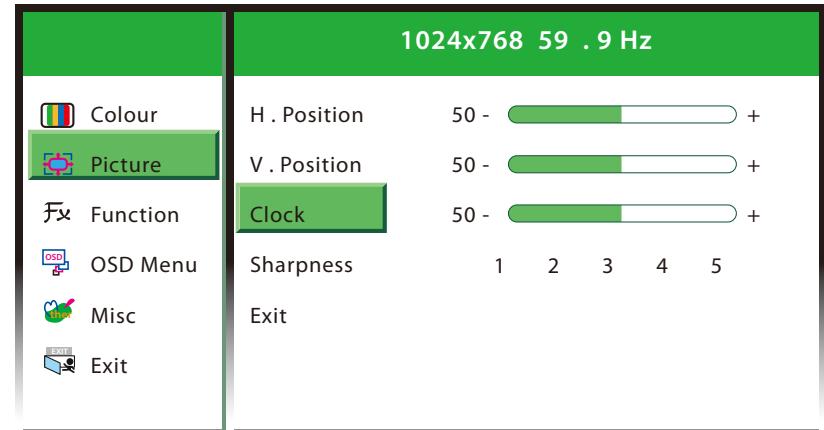





## Sharpness

 


to decrease it.

 

to decrease it.

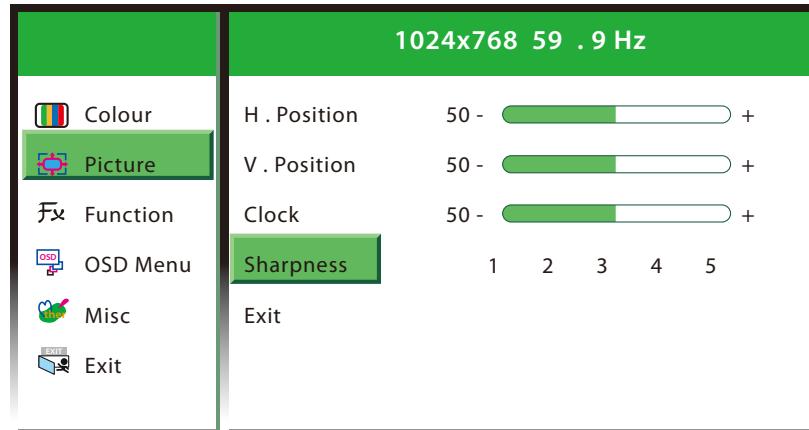


### 3. Function

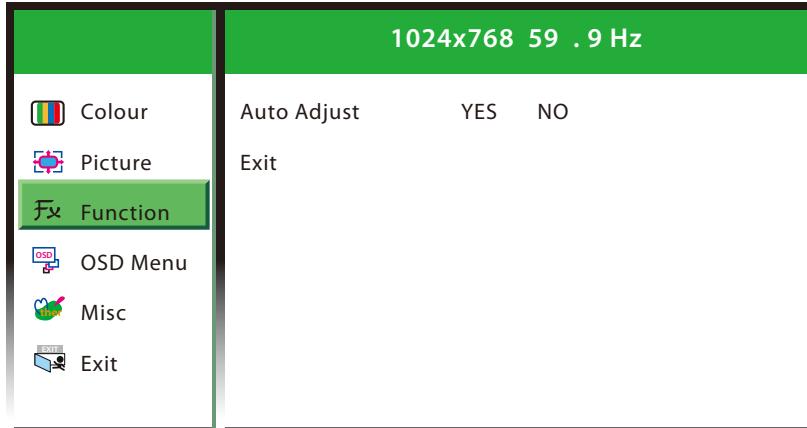

#### Auto Adjust



YES to automatically adjust the screen size, or NO to abort it.

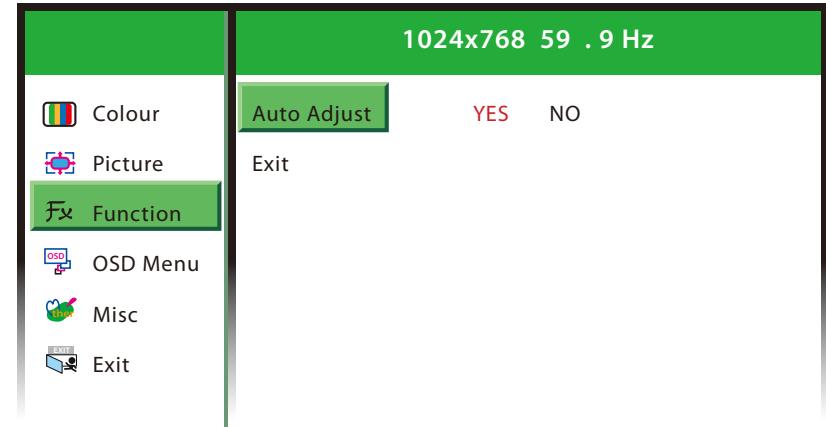





## Exit

Exits the Function Adjust sub-menu or press the  button to exit.

 → colour →  → function →  → exit.

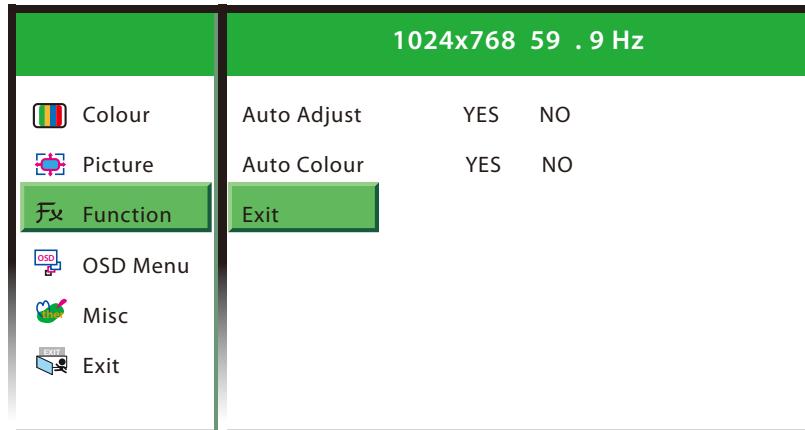


## 4. OSD Menu

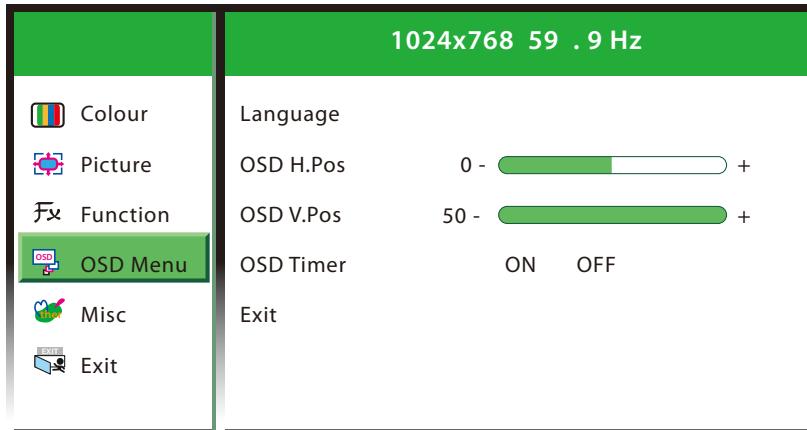

### Language

Press the  button to enter the Language sub-menu.

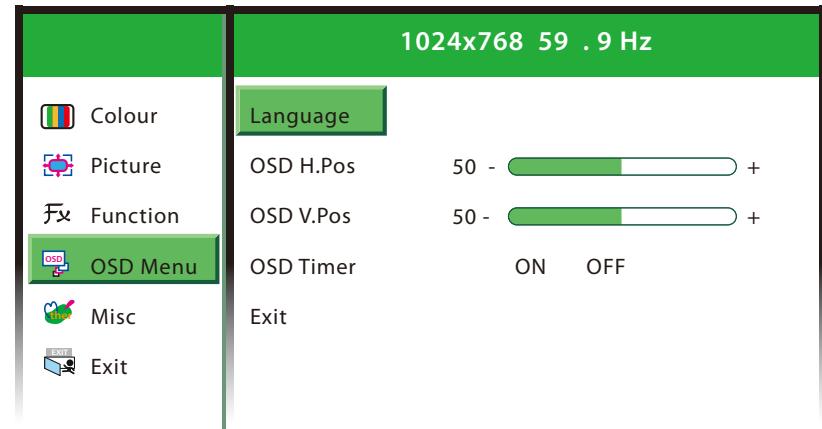





Select the desired language for the OSD menu and press the  button to apply the language.




## OSD H. Pos

 

→ move it towards left.

 

→ move it towards right.

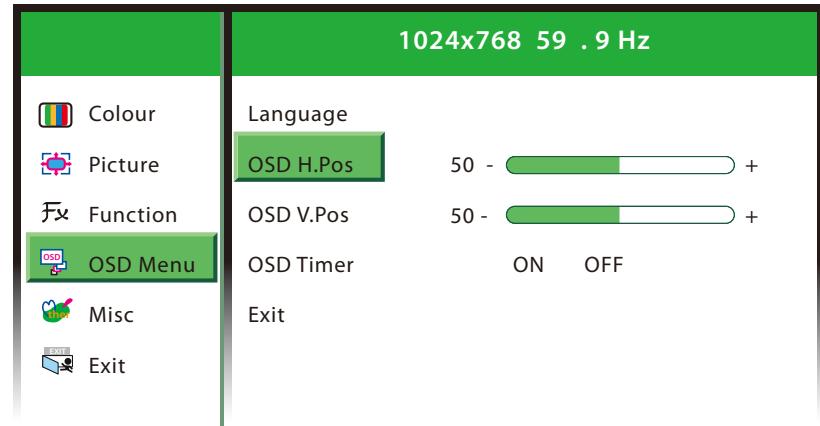



## OSD V. Pos


Press **◀|▼** on the back of the display panel to move the OSD menu up, or **▶|▲** to move it down.



→ move it down.




→ move it up.

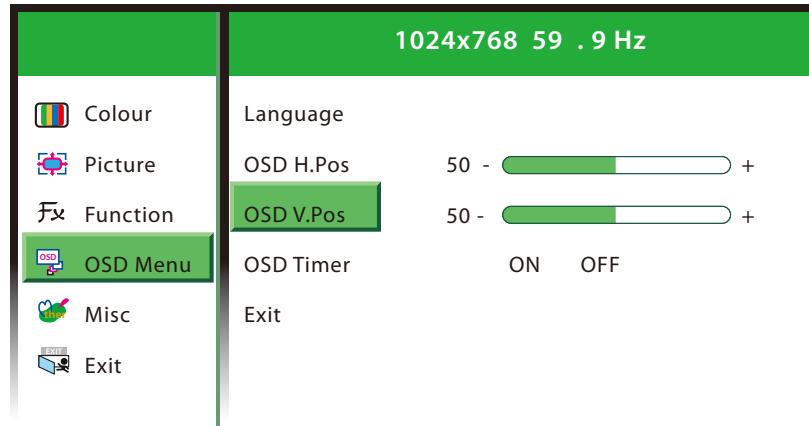

## OSD Timer


Select ON to specify the timeout period of the OSD menu, or OFF to disable it. Press **◀|▼** on the back of the display panel to increment the timer by 1 second, or **▶|▲** to decrement the timer by 1 second.

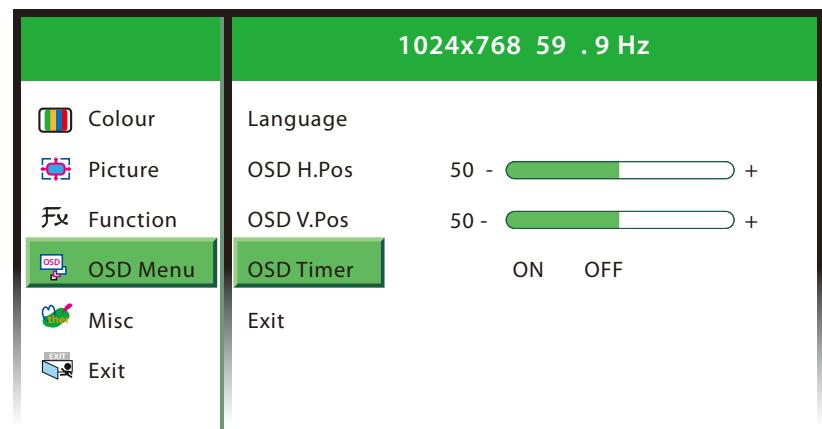




## Exit


Exits the OSD Menu sub-menu or press the  button to exit.

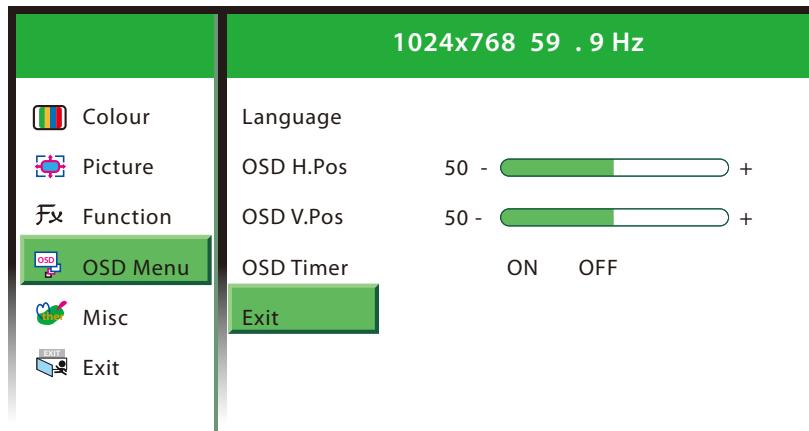


## 5. Misc

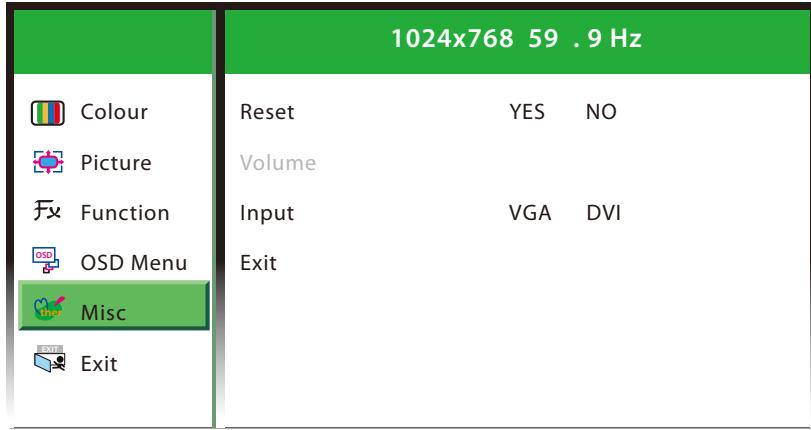

### Reset

 

factory default settings, or NOT to abort it.

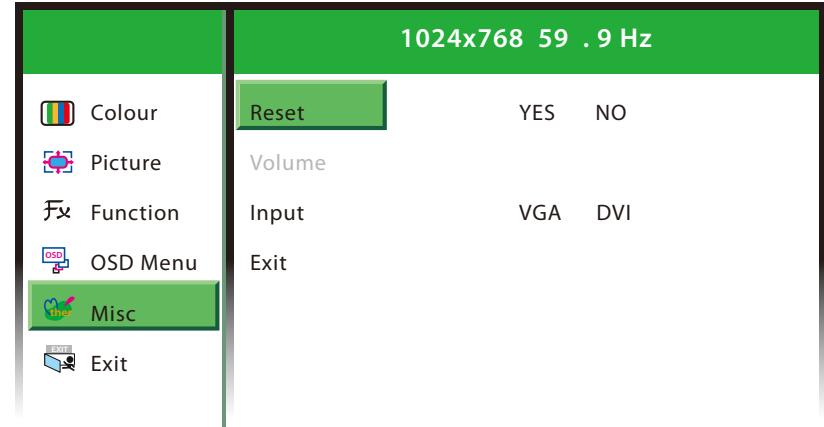




## Input




VGA or DVI as the video input.

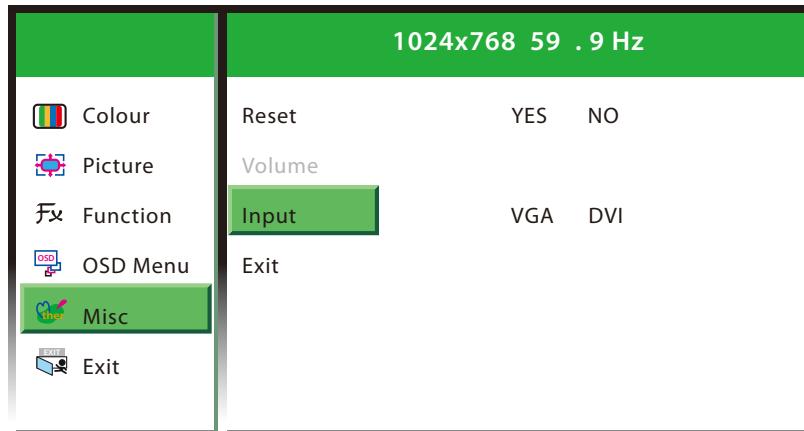

## Exit


Exits the Misc sub-menu or press the button to exit.

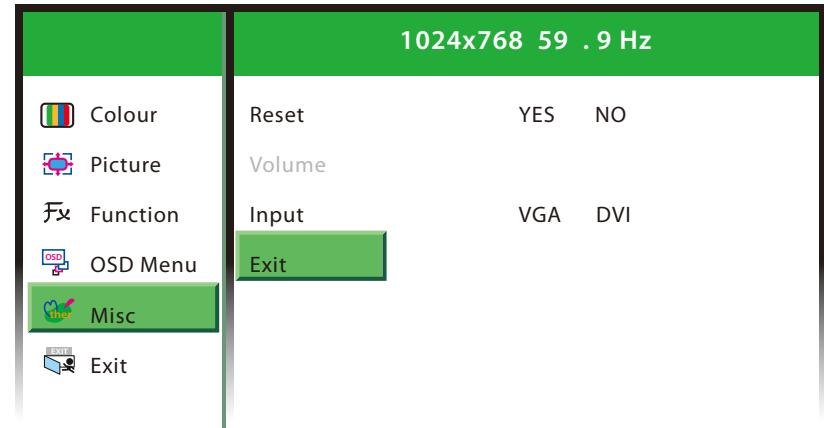



## 6. Exit

Exits the OSD main menu or press the  button to exit.

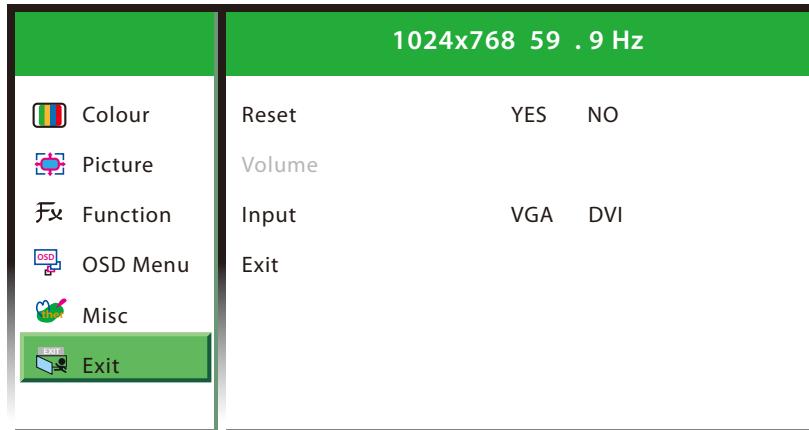

# Chapter 5: Touch Driver Settings

Before installing the touch drivers, please adjust the Install.ini file. The Install.ini file is located under the following folder:

\PenMount Windows Universal Driver V2.2.0.283( Win7\_32\_64bit\_WHQL)\Driver

1. Open the Install.ini file.
2. Confirm if the Install.ini file has the following settings, if not, please change it.

[Install]  
USB = 1            **Must set this to "1"**  
COM = 1            **Must set this to "1"**  
MMonitor = 1  
ENUM = 1

[Option]  
TouchReport = 2        **USB/COM**  
EdgeOffset = 5  
Smoothing = 1

[ENUM]  
Total = 4  
**COM1 = 1**        **Set "1" to the COM port you intend to use**  
COM2 = 0

COM3 = 0  
COM4 = 0

[COM1]  
AlwaysExist

3. Install the touch drivers.



# Appendix A: Power Consumption

## Purpose

The purpose of the power consumption test is verified the power dissipation of the system and the load of the power supply.

## Test Equipment

PROVA CM-07 AC/DC CLAMP METER

Desktop PC

## Device Under Test

DUT: Sys #1

## Test Procedure

1. Power up the DUT and then switch on the desktop PC connecting to it.
2. Measure the power consumption and record it.
3. Enter the standby mode (Turn off display).
4. Measure the power consumption and record it.

## APPD 1200T

	<b>+12V</b>	<b>+24V</b>
Full-Loading Mode	0.73A	0.39A
Total	8.76W	9.36W
Standby Mode	0.05A	0.06A
Total	0.6W	1.44W

## APPD 1205T

	<b>+12V</b>	<b>+24V</b>
Full-Loading Mode	0.75A	0.39A
Total	9W	9.36W
Standby Mode	0.05A	0.05A
Total	0.6W	1.2W

## APPD 1500T

	<b>+12V</b>	<b>+24V</b>
Full-Loading Mode	0.97A	0.5A
Total	11.64W	12W
Standby Mode	0.04A	0.05A
Total	0.48W	1.2W

## APPD 1700T

	<b>+12V</b>	<b>+24V</b>
Full-Loading Mode	2.6A	1.21A
Total	31.2W	29.04W
Standby Mode	0.05A	0.05A
Total	0.6W	1.2W

## APPD 1900T

	<b>+12V</b>	<b>+24V</b>
Full-Loading Mode	1.54A	0.77A
Total	18.48W	18.48W
Standby Mode	0.05A	0.05A
Total	0.6W	1.2W



# Appendix B: Extended Display Identification Data Timing Support

## APPD 1200T

Resolution	Vertical Frequencies			
	60Hz	70Hz	72Hz	75Hz
640x480	✓		✓	✓
720x400		✓		
800x600	✓		✓	✓

## APPD 1205T

Resolution	Vertical Frequencies			
	60Hz	70Hz	72Hz	75Hz
640x480	✓		✓	✓
720x400		✓		
800x600	✓		✓	✓
1024x768	✓	✓		✓

## APPD 1500T

Resolution	Vertical Frequencies			
	60Hz	70Hz	72Hz	75Hz
640x480	✓			✓
720x400				
800x600	✓			✓
1024x768	✓	✓		✓





### APPD 1700T

Resolution	Vertical Frequencies			
	60Hz	70Hz	72Hz	75Hz
640x480	✓		✓	✓
720x400		✓		
800x600	✓		✓	✓
1024x768	✓	✓		✓
1280x1024	✓			✓

### APPD 1900T

Resolution	Vertical Frequencies			
	60Hz	70Hz	72Hz	75Hz
640x480	✓		✓	✓
720x400		✓		
800x600	✓		✓	✓
1024x768	✓	✓		✓
1280x1024	✓			✓

