



## WIS module primary


### NDP-KE2-8E2

- 8 channels
- 9 outputs
- LEDs for display of the output states and communication
- Deactivation option
- Housing with removable terminals
- DIN rail mounting
- For connection of 1 transmitter head
- Can only be used in conjunction with NDP5-30GM series WIS transmitter

Inductive transmitter system



## Dimensions

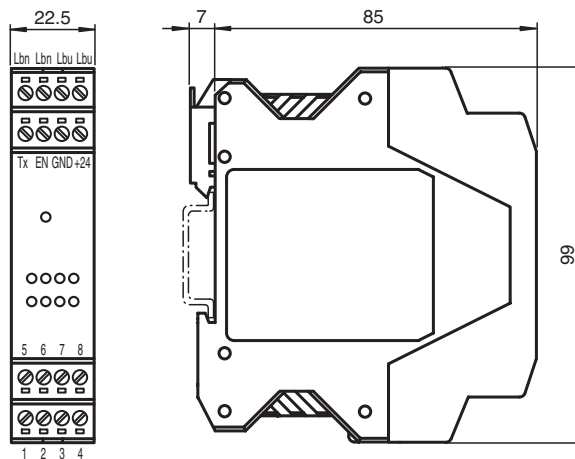

## Technical Data

### Nominal ratings

Operating voltage	$U_B$	24 V DC $\pm$ 10 %
Number of signal channels		8
Signal transfer direction		from secondary side to primary side
Reverse polarity protection		reverse polarity protected
Current consumption		max. 1000 mA

### Functional safety related parameters

MTTF <sub>d</sub>	245 a
Mission Time (T <sub>M</sub> )	20 a
Diagnostic Coverage (DC)	0 %

### Indicators/operating means

Switching state	8 x LED, yellow
Transfer indicator	Tx LED, green

### Input

Number	1
Input type	Activation input signal level: $\geq$ 15 V = active, $\leq$ 3 V inactive

Release date: 2022-05-23 Date of issue: 2022-05-23 Filename: 200660\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com


**PEPPERL+FUCHS**

## Technical Data

Input current		$\leq 1 \text{ mA}$
Internal resistor		$\geq 15 \text{ k}\Omega$
<b>Output</b>		
Output type		1 Status output (high with proper transfer) and 8 Switch outputs PNP, NO. (switched high) , overload and short-circuit resistant
Voltage drop	$U_d$	$\leq 2.5 \text{ V}$
Load current		max. 50 mA
Response time		$\leq 200 \text{ ms}$ ( static operation , the transmission heads stand opposite to each other )
<b>Compliance with standards and directives</b>		
Directive conformity		
EMC Directive 89/336/EEC		EN 61000-6-2:2001, EN 61000-6-4:2001, EN 50295:1999
<b>Approvals and certificates</b>		
CCC approval		CCC approval / marking not required for products rated $\leq 36 \text{ V}$
<b>Ambient conditions</b>		
Ambient temperature		0 ... 50 °C (32 ... 122 °F)
Storage temperature		-25 ... 85 °C (-13 ... 185 °F)
<b>Mechanical specifications</b>		
Degree of protection		IP20
Material		
Housing		PA 66-FR
Installation		DIN rail mounting
Mass		106 g
<b>General information</b>		
Note		Maximum cable length between WIS module and WIS transmitter must not exceed 5 m.

## Connection

### Connection:

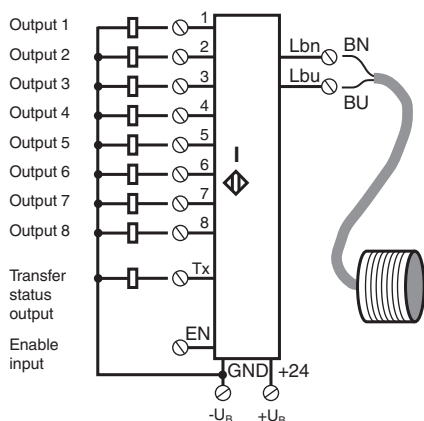

## Matching System Components

	<b>NDP5-30GM-5M</b>	Inductive transmitter system
	<b>NDS5-30GM-1M-V1</b>	Inductive transmitter system
	<b>NDS-F146-8E2-V1</b>	Inductive transmitter system

## Function

### Functional description

A WIS (wireless inductive system) inductive transfer system always consists of the following four components:

- WIS primary module
- WIS primary transmitter
- WIS secondary transmitter
- WIS secondary module


The WIS primary module is installed in the stationary component and is connected to a downstream control (i.e., PLC). The WIS primary transmitter connected to the WIS primary module. The WIS secondary transmitter and the WIS secondary module that is connected to it are installed in the moveable part of the component. The WIS secondary module disposes of connection capabilities for several sensors. If the two transmitters are located in front of each other within the system range, then electric power is transferred from the primary side to the secondary side. The sensors attached to the WIS secondary module are now supplied with electric energy and begin to operate. The sensor output signals are transmitted in the opposite direction from the secondary side to the primary side and are separately available on the WIS primary module output terminals for further processing by the equipment control. The sensor signal status is also displayed by LEDs that correspond to the sensor channels.

A separate output signal Tx on the WIS primary module indicates the communication status. A high signal indicates communication between the WIS transmitters. This is also indicated by a glowing LED Tx.

Power transfer and communication in the system can be activated and deactivated on the WIS primary module with the EN input.

Input signal on EN	Function
+ UB (24 V DC)	Transfer activated
GND or open.	Transfer deactivated

### Function schematic

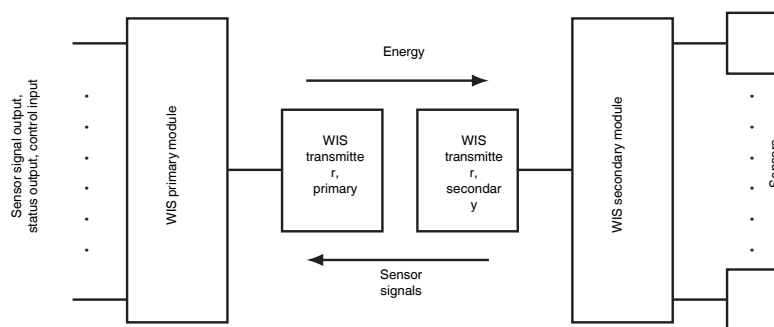

The sum of the currents of all sensors attached to the WIS secondary module must not be greater than the maximum transferable current. This is calculated by dividing the transferable power by the 12 V provided by the transmitters.