



AS-Interface analog module VBA-4E-G11-I-F

- Addressing jack
- Function display for bus, internal and external sensor power supply, inputs
- Supply for inputs from AS-Interface or auxiliary voltage
- Degree of protection IP68 / IP69K
- Accuracy $\pm 0.1 \%$
- Integrated shielding
- Channel-specific input monitoring

G11 analog module, 4 analog current inputs




Function

The VBA-4E-G11-I-F analog module has four analog current inputs with a range of 0 mA ... 20 mA or 4 mA ... 20 mA. The power supply to the measurement value generators takes place depending on the position of the internal slide switch, via AS-Interface or through auxiliary voltage. The choice of input supply is displayed via the INT/EXT LED. Measured value conversion and data transfer is provided asynchronously according to the AS-Interface profile 7.3. The resolution of the analog values is 1 μ A with a value range of 0 to 20000 or 4000 to 20000. Network interference can be eliminated with a configurable filter (50 Hz/60 Hz) in the A/D converter.

Note:

An overload of the internal input supply is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues.

Dimensions

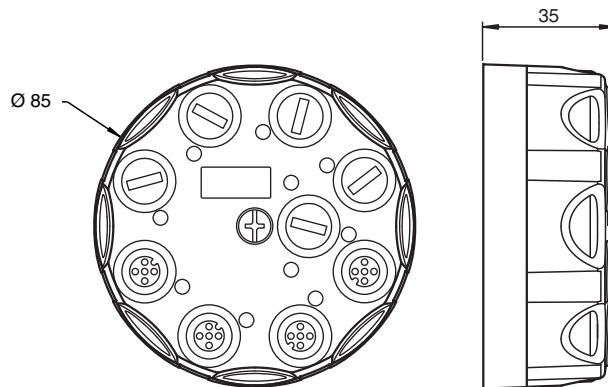

Technical Data

General specifications

Node type	Standard node
AS-Interface specification	V3.0
Required gateway specification	$\geq$ V2.1
Profile	S-7.3.E
IO code	7
ID code	3
ID1 code	F
ID2 code	E

Technical Data


UL File Number		E223772
Indicators/operating means		
LED AS-i/FAULT		Status display; multi-colour LED Green: normal operation Red: communication fault Flashing yellow/red: address 0 Flashing green/red: peripheral fault
LED ANALOG		status of input signal; LED yellow off: not active on: signal within measurement range flashing: signal outside of measurement range
LED AUX		ext. auxiliary voltage U_{AUX} ; dual LED green/red green: voltage OK red: reverse voltage
LED INT/EXT		status display input supply; LED green green: input supply from AS-Interface off: input supply from auxiliary voltage
Electrical specifications		
Auxiliary voltage (output)	U_{AUX}	20 ... 30 V DC PELV
Rated operating voltage	U_e	26.5 ... 31.6 V from AS-Interface
Rated operating current	I_e	≤ 60 mA (without sensors) / max. 200 mA
Protection class		III
Surge protection		U_{AUX} , U_{in} : Over voltage category III, safe isolated power supplies (PELV)
Input		
Number/Type		4 Inputs 0/4 ... 20 mA
Supply		from AS-Interface (switch position INT, default settings) or auxiliary voltage U_{EXT} (switch position EXT)
Current loading capacity		≤ 140 mA from AS-Interface; overload and short-circuit resistant ≤ 600 mA from external auxiliary voltage U_{AUX} , overload and short-circuit protected
Input resistance		max. 70 Ω
Accuracy		0.1 % of full-scale value
Resolution		16 Bit
Temperature influence		0.0025 %/K of input signal range
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 62026-2:2013
Standard conformity		
Degree of protection		EN 60529:2000
Fieldbus standard		EN 62026-2:2013
Input		EN 61131-2:2007
Emitted interference		EN 61000-6-4:2007
AS-Interface		EN 62026-2:2013
Noise immunity		EN 61000-6-2:2005, EN 61326-1:2006, EN 62026-2:2013
Ambient conditions		
Ambient temperature		-25 ... 70 °C (-13 ... 158 °F)
Storage temperature		-25 ... 85 °C (-13 ... 185 °F)
Relative humidity		85 % , noncondensing
Climatic conditions		For indoor use only
Altitude		≤ 2000 m above MSL
Pollution degree		3
Mechanical specifications		
Degree of protection		IP68 / IP69K
Connection		AS-Interface/ U_{AUX} : cable piercing method, flat cable yellow/flat cable black Inputs: M12 round connector
Material		
Housing		PBT PC
Mounting screw		Stainless steel 1.4305 / AISI 303

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 234280_eng.pdf

Technical Data

Mass	200 g
Tightening torque, housing screws	1.8 Nm
Tightening torque, cable gland	0.4 Nm
Mounting	Mounting plate


Connection

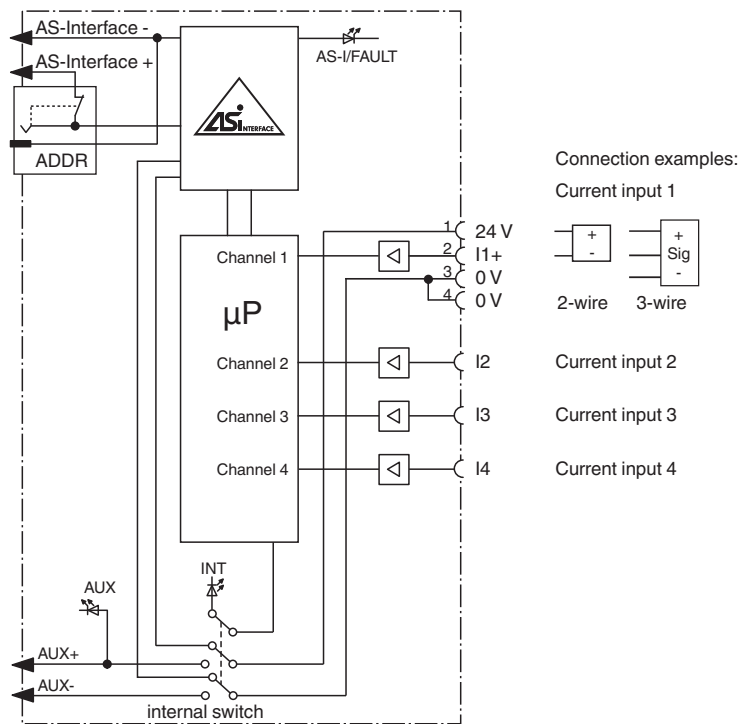


Connection

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Assembly

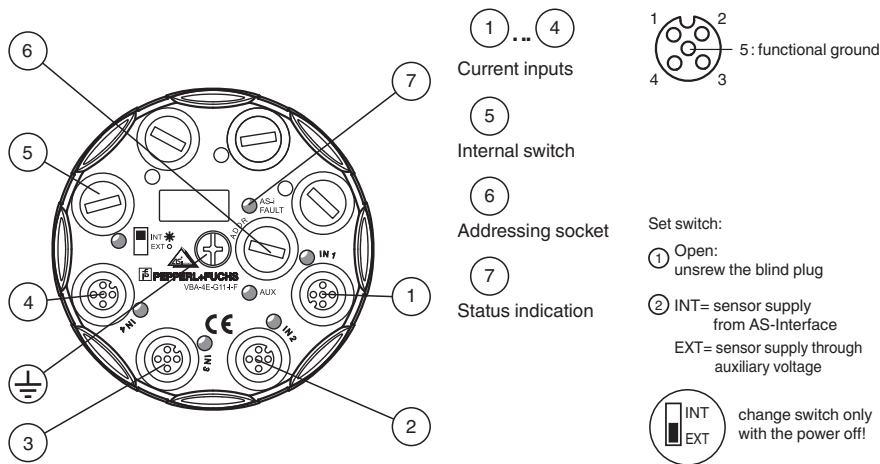

Mounting

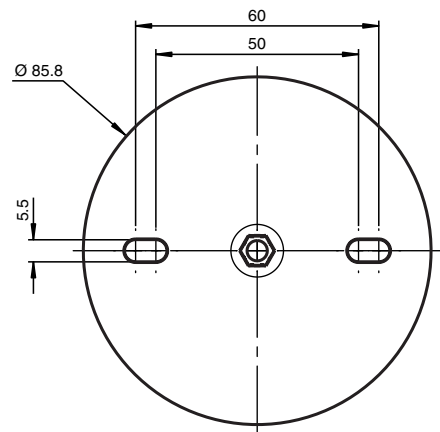

Commissioning

Channel activation
When delivered, all input channels are disabled, the wire break detection and automatic channel detection are active. An input channel is activated when an input signal 1 mA ... 23 mA is applied. An activated input channel remains active after a restart. If the wire break detection is disabled, all four input channels are active.

Programming

Data bits
(function via AS-Interface)
The transfer of the data value is based on AS-Interface Profile 7.3.

Parameter bits
(programmable via AS-Interface)

Parameter bit	Function
P0	50/60 Hz filter P0=0 disabled P0=1 enabled
P1	not used
P2	Indication of the peripheral fault by exceeding measuring range P2=0 peripheral fault is not reported P2=1 peripheral fault is reported
P3	Wire break detection P3=0 wire break detection deactivated, all 4 channels active P3=1 wire break detection active, automatic channel detection if > 1 mA

Accessories

	VAZ-V1-B3	Blind plug for M12 sockets
	V1-G-42-0,3M-PUR-ABG-V1-W-Y	Connecting cable, M12 to M12, PUR cable, 4-pin, bridged, shielded
	VBP-HH1-V3.0-KIT	AS-Interface Handheld with accessory
	VAZ-PK-1,5M-V1-G	Adapter cable module/hand-held programming device

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 234280_eng.pdf