Electrical connection

Sub-D connector RS 485

Pin	Signal
3	RxD/TxD-P
8	TxD/TxD-N
6	+5 V
5	GND

μP

Sub-D socket RS 232

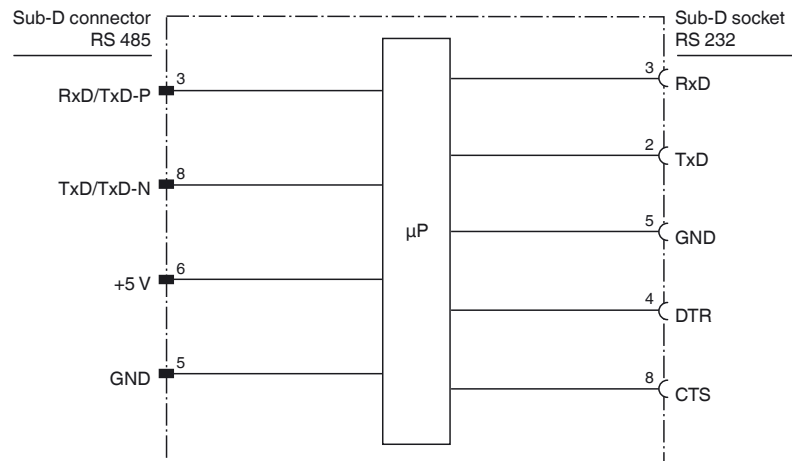| Pin	Signal
3	RxD
2	TxD
5	GND
4	DTR
8	CTS

Model number

VAZ-PB-SIM

PROFIBUS master simulator

Features

- The PROFIBUS master simulator is a simple universal tool for data exchange with PROFIBUS slaves
- Complete solution with hardware (UART) and software

Technical data

Electrical specifications

Rated operating current	I_e	≤ 60 mA
Power supply		draws its 5 V power supply from the RS 485 interface of the PROFIBUS slave

Interface

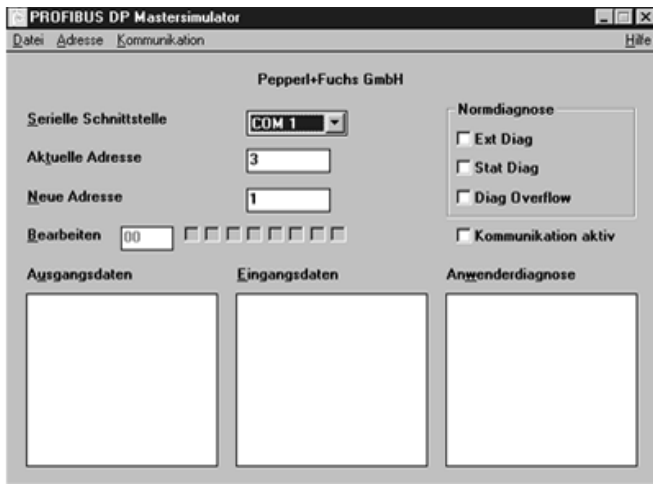|	
Interface type	Standard PC RS 232 interface with 9-pin D-SUB connector (female) RS 485 interface with 9-pin D-SUB connector (male)
Protocol	PROFIBUS DP V0
Transfer rate	19200 Bit/s
Cable length	for RS 232 and RS 485 each max. 2 m

Ambient conditions

Ambient temperature	0 ... 55 °C (32 ... 131 °F)
Storage temperature	-25 ... 70 °C (-13 ... 158 °F)

Mechanical specifications

Dimensions	63, 34, 17 mm (L, W, H)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group   USA: +1 330 486 0001   Germany: +49 621 776 4411   Singapore: +65 6779 9091
www.pepperl-fuchs.com   fa-info@us.pepperl-fuchs.com   fa-info@de.pepperl-fuchs.com   fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS

1

Notes

The PROFIBUS master simulator is a simple universal machine tool for data exchange with PROFIBUS slaves of almost all manufacturers via PROFIBUS DP. The PROFIBUS master simulator can exchange data with many PROFIBUS slaves even without GSD file, type file and without PROFIBUS master. The PROFIBUS slaves with default I/O width can be put into operation without additional input or additional data files. Input data can be read and output data can be written. In addition, the PROFIBUS DP master simulator allows the use of GSD files as well as the input of special configurations to start data exchange with PROFIBUS slaves. Address configuration of PROFIBUS slaves - especially IP 67 modules without address switch - is also possible.

The follow-on PROFIBUS master simulator allows the user to search a complete PROFIBUS and to find all connected participants. In this case however, the VAZ-PB-SIM must be plugged directly on a PROFIBUS slave. In addition the data, in particular the diagnostic function, is meanwhile displayed not only in hexadecimal and binary format but also in ASCII format. Output data can be transmitted consistently.

The PROFIBUS master simulator is supplied with the VAZ-PB-SIM, which is an ideal interface converter between the RS 232 interface of the PC and the PROFIBUS. This UART has a highly compact design and does not require an additional external voltage supply. Therefore, it is ideal for mobile use with a laptop or a notebook. The VAZ-PB-SIM is simply plugged on, between the PROFIBUS and the RS 232 connection cable.

In addition to the actual monitor and configuration program, DLL drivers for Windows as well as simple sample programs in C are now also included in the delivery package enabling you to adapt your own applications to PROFIBUS-UART. However, the VAZ-PB-SIM is only a test equipment or a start-up aid for PROFIBUS slaves and is therefore not suitable for controlling automation processes.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group   USA: +1 330 486 0001   Germany: +49 621 776 4411   Singapore: +65 6779 9091
www.pepperl-fuchs.com   fa-info@us.pepperl-fuchs.com   fa-info@de.pepperl-fuchs.com   fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS