


ODSL 96B




en 05-2013/01 50109887

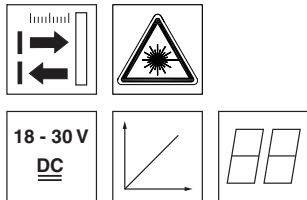

0.3 ... 10m

- Measurement range up to 10000 mm at 90% diffuse reflection
- Reflection-independent distance information up to 6000 mm
- Highly insensitive to extraneous light
- Analog current or voltage output
- PC/OLED display and membrane keyboard for configuration
- Measurement value is indicated in mm on OLED display
- Measurement range and mode adjustable

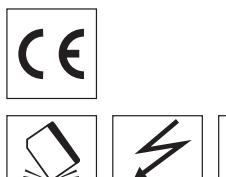


Accessories:

(available separately)


- Mounting systems
- Cable with M12 connector (K-D ...)
- Configuration software

Dimensioned drawing

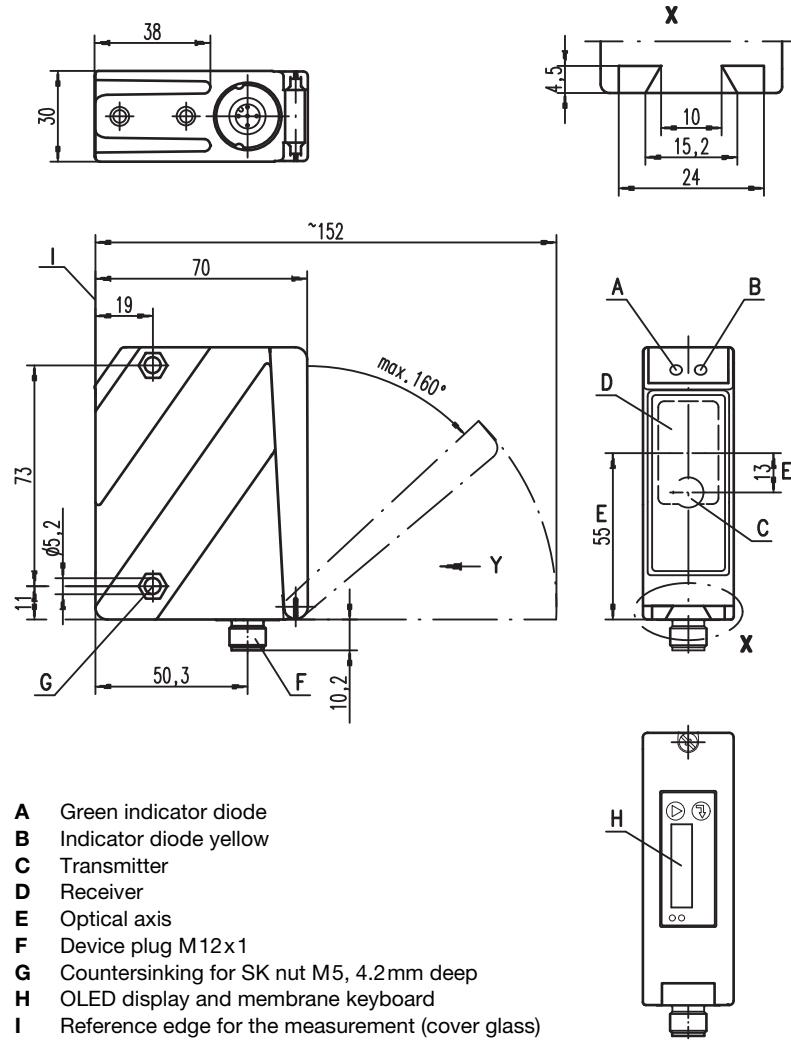


Electrical connection


ODSL 96B M/C6...

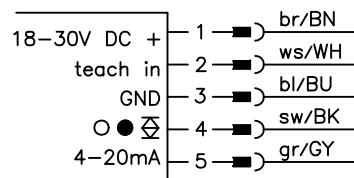


ODSI 96B M/C66

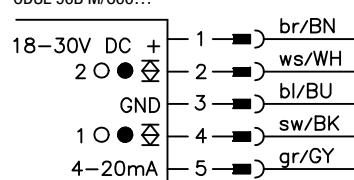


ORACLE DB M/DOC

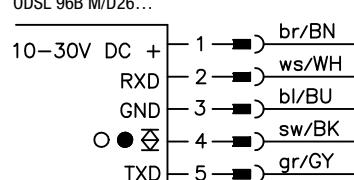

ODSL 96B M/V6...

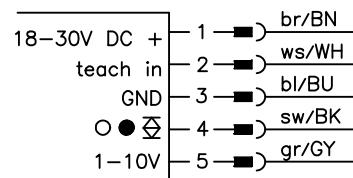

OPCL-06B-M/D2C

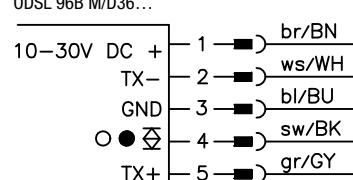

Specifications

Optical data

Measurement range	300 ... 10000 mm (90 % diffuse reflection), 300 ... 6000 mm (6 ... 90 % diffuse reflection)
Resolution	3 mm
Light source	laser
Wavelength	658 nm (visible red light)
Light spot	approx. 7x7 mm ² at 10 m
Laser warning notice	see Remarks

Error limits (relative to measurement range end value 6000mm)

Absolute measurement accuracy ¹⁾	± 0.5 %
Repeatability ²⁾	± 5 mm
B/W detection thresh. (6 ... 90% rem.)	± 10 mm
Temperature drift	± 1.5 mm/K

Timing

Measurement time	"Fast" operating mode: 1.4 ms "Standard" operating mode: 10 ms "Precision" operating mode: 50 ms (factory setting) ≤ 300 ms
Delay before start-up	

Electrical data

Operating voltage U_B	...C6/C66/V6 ...D26/D36	18 ... 30 VDC (incl. residual ripple) 10 ... 30 VDC (incl. residual ripple)
Residual ripple		≤ 15 % of U_B
Open-circuit current		≤ 150 mA
Switching output		push-pull switching output ³⁾ , PNP light switching, NPN dark switching
Signal voltage high/low		≥ (U_B - 2 V) / ≤ 2 V
Analog output	...V6 ...C6/C66 ...D26/D36	voltage 1 ... 10 V / 0 ... 10 V / 1 ... 5 V / 0 ... 5 V, $R_L \geq 2 k\Omega$ current 4 ... 20 mA, $R_L \leq 500 \Omega$
Serial interface		RS 232/RS 485, 9600 ... 57600 Bd, 1 start bit, 8 data bits, 1 stop bit, no parity 14 bit, 16 bit, ASCII, Remote Control
Transmission protocol		

Indicators

Green LED	continuous light off	ready no voltage
Yellow LED	continuous light off	object within range / switching output object out of range / switching output

Mechanical data

Housing	diecast zinc
Optics cover	glass
Weight	380 g
Connection type	M12 connector

Environmental data

Ambient temp. (operation/storage)	-20°C ... +50°C / -30°C ... +70°C
Protective circuit ⁴⁾	1, 2, 3
VDE safety class ⁵⁾	II, all-insulated
Protection class	IP 67, IP 69K ⁶⁾
Laser class	2 (acc. to EN 60825-1)
Standards applied	IEC 60947-5-2

- For 300 ... 6000mm measurement range, luminosity coefficient 6 % ... 90 %, "Precision" operating mode, floating average calculation taking 30 measurement values into account, at 20°C after 20 min. warmup time, medium range of U_B , measurement object $\geq 50 \times 50 \text{ mm}^2$
- Same object, identical environmental conditions, "Precision" operating mode, floating average calculation taking 30 measurement values into account, after 20 min. warmup time, measurement object $\geq 50 \times 50 \text{ mm}^2$
- The push-pull switching outputs must not be connected in parallel
- 1=transient protection, 2=polarity reversal protection, 3=short circuit protection for all outputs
- Rating voltage 250 VAC, with cover closed
- IP 69K test in accordance with DIN 40050 part 9 simulated, high pressure cleaning conditions without the use of additives. Acids and bases are not part of the test

Tables

Diagrams

Remarks

• Approved purpose:

The ODSL 96B laser distance sensors are optoelectronic sensors for the optical, contactless measurement of the distance to objects. This product may only be used by qualified personnel and must only be used for the approved purpose. This sensor is not a safety sensor and is not to be used for the protection of persons.

LASERSTRÄHLUNG NICHT IN DEN STRAHL BLICKEN	
Max. Leistung:	248 mW
Impulsdauer:	6,5 ns
Wellenlänge:	658 nm
LASER KLASSE 2 DIN EN60825-1:2003-10	

Order guide

Analogue current output

Current output, teach input, 1 push/pull output	ODSL 96B M/C6-S12	50109290
Current output, 2 push/pull outputs	ODSL 96B M/C66-S12	50109295

Analogue voltage output


Voltage output, teach input, 1 push/pull output	ODSL 96B M/V6-S12	50109291
---	-------------------	----------

Serial digital output

RS 232, 1 push/pull output	ODSL 96B M/D26-S12	50109292
RS 485, 1 push/pull output	ODSL 96B M/D36-S12	50109293

ODSL 96B

Analog output: characteristic curve for factory setting

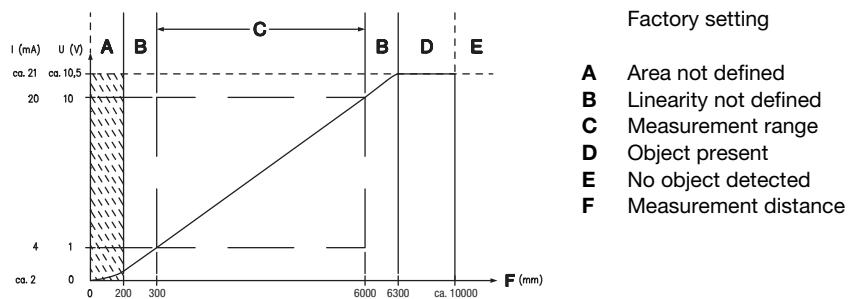

Serial output: transmission protocol for factory setting

9600Bd, 1 start bit, 8 data bits, 1 stop bit,
transmission protocol ASCII measurement values

Transmission format: **MMMMM<CR>**

MMMMM = 5-digit measurement value in mm (resolution 1 mm)

<CR> = ASCII character "Carriage Return" (x0D)

Measurement mode and measurement filter

The user can individually adapt the measurement system of the ODSL 96B to various applications. By configuring the measurement mode and measurement filter, either a higher measurement accuracy or, alternatively, faster measurements can be achieved. Configuration can be performed either directly on the sensor or with the ODS 96B configuration software.

Optimization of measurement mode

In the Application menu, you can set 3 different measurement filters.

Menu setting	Effect
Application -> Measure Mode -> Precision	high accuracy, measurement time of individual measurement: 50ms
Application -> Measure Mode -> Standard	exact and fast, measurement time of individual measurement: 10ms
Application -> Measure Mode -> Speed	fast measurement, measurement time of individual measurement: 1.4ms

Optimization of measurement filter

To achieve more precise measurement values, a measurement filter can be adjusted in addition to the measurement mode. In most cases, the use of a floating average results in a reduction in the variance of the measurement values.

To use this, select the menu setting **Application -> Measure Filter -> Averaging**.

The number of measurement values to be taken into account can be set to a value between **1 ... 99** via menu setting **Application -> Measure Filter -> Averaging -> Measurem. Count**.

Notice!

The measurement value display on the OLED display can be used to assess the efficiency of the selected measurement mode and measurement filter in the application. The update rate of the OLED display is always 2Hz. The ODS 96B configuration software provides identical functionality.

Factory setting of measurement mode:

On delivery, the sensor is preset so that measurement values with the maximum possible accuracy are achieved:

- Measurement mode **Precision**.

Reset to factory settings

Press the button while switching on the device to reset the configuration of the ODSL 96B to the state upon delivery from the factory.

Press the button again to reset all parameters to the factory settings. All settings made previously are permanently lost.

Press and the ODSL 96B returns to measurement operation without resetting the parameters.

You can also use the menu or the configuration software to reset to factory settings. For this purpose, select menu item **Settings -> FactorySettings -> Execute**.

The ODS 96B configuration software can also be used to reset the ODSL 96B to factory settings.



Teach-in of switching outputs, analog characteristic output curve and Preset




Notice!

If you have changed the factory setting for teaching under Input Mode, activate on the OLED display the menu item **Input -> Input Mode -> Teach**.

To teach, proceed as follows:

1. Position measurement object at the desired measurement distance.
2. The respective teach function is activated on the teach input for the duration of a level change **T** (see graphical representation). The level conditions describe the levels with menu setting **Input -> Input Mode -> Input polarity -> Active High +24V** (factory setting).

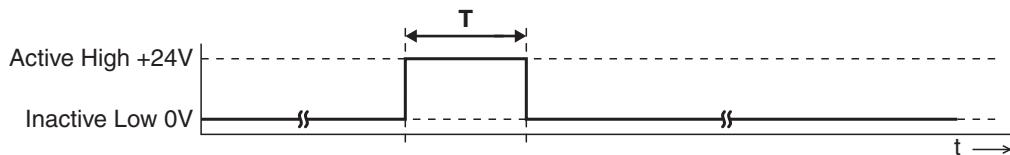

Teach function	Duration T
Switching output Q1	20 ... 80ms
Distance value for start of measurement range = 1V or 4mA at analog output	220 ... 280ms
Distance value for end of measurement range = 10V or 20mA at analog output	320 ... 380ms



Notice!

If the inactive level is continuously applied on the teach input, the teach input is locked.

For menu setting **Input -> Input Mode -> Input polarity -> Active Low +0V**, inverted input signals are used during teaching.

Preset Teach-In

On the OLED display, activate for this purpose menu item **Input -> Input Mode -> Preset**.

The preset teach occurs in a manner analogous to that for the teach-in for switching output Q1.

Working safely

Attention Laser Radiation!



The optical distance sensors ODSL 96B operate with a red light laser of class 2 acc. to EN 60825-1. If you look into the beam path over a longer time period, the retina of your eye may be damaged!

Never look directly into the beam path! Do not point the laser beam of the ODSL 96B at persons!

When mounting and aligning the ODSL 96B take care to avoid reflections of the laser beam off reflective surfaces!

The use of operating and adjusting devices other than those specified in the technical description, carrying out of differing procedures, or improper use of the optical laser distance sensor may lead to dangerous exposure to radiation!

The use of optical instruments or devices in combination with the device increases the danger of eye damage! Adhere to the applicable legal and local regulations regarding protection from laser beams acc. to EN 60825-1 in its latest version.

The ODSL 96B uses a laser diode with low power in the visible red light range with an emitted wavelength of about 658nm.

The glass optics cover is the only opening through which the laser radiation can escape from the device. The housing of the ODSL 96B is sealed and has no parts that need to be adjusted or maintained by the user. The device must not be tampered with and must not be changed in any way! The destruction of the seal voids the warranty!



Notice!

It is important that you attach the sticky labels supplied to the device (notice signs and laser emission symbol)! If the signs would be covered due to the installation situation of the ODSL 96B, attach them close to the ODSL 96B such that reading the notices cannot lead to looking into the laser beam!