



Manual Number	IB(NA)-0800648
Revision	A
Date	July 2021

This manual describes the part names, dimensions, installation, and specifications of the product. Before use, read this manual and manuals of relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions.

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

Registration: Ethernet is a trademark of Xerox Corporation.

The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective July 2021

Specifications are subject to change without notice.

© 2021 MITSUBISHI ELECTRIC CORPORATION

Safety Precautions (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

WARNING and **CAUTION**.

WARNING Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Depending on the circumstances, procedures indicated by **CAUTION** may also cause severe injury.

It is important to follow all precautions for personal safety.

Associated Manual

Manual name	Manual No.	Description
MELSEC iQ-F FX5 User's Manual (OPC UA)	SH-082250ENG	Describes the functions of the OPC UA module.
MELSEC iQ-F FX5U User's Manual (Hardware)	JY997D55301	Explains FX5U CPU module specification details for I/O, wiring, installation, and maintenance.
MELSEC iQ-F FX5UC User's Manual (Hardware)	JY997D61401	Explains FX5UC CPU module specification details for I/O, wiring, installation, and maintenance.
MELSEC iQ-F FX5 Programming Manual (Instructions, Standard Functions/Function Blocks)	JY997D55801	Describes specifications of instructions and functions that can be used in programs.

How to obtain manuals

For the necessary product manuals or documents, consult with your local Mitsubishi Electric representative.

Applicable standards

FX5-OPC OPC UA module (hereinafter referred to as FX5-OPC) complies with the EC Directive (EMC Directive) and UL standards (UL, cUL). Further information can be found in the following manual.

→ **MELSEC iQ-F FX5 User's Manual (OPC UA)**

Regarding the standards that relate to the CPU module, please refer to either the product catalog or consult with your local Mitsubishi Electric representative.

Attention

This product is designed for use in industrial applications.

1. Outline


FX5-OPC is an intelligent function module for making programmable controller data such as inputs, outputs, and internal registers available to external devices and applications via an OPC UA server interface.

1.1 Incorporated Items

Check that the following product and items are included in the package:

Product	FX5-OPC OPC UA module
Included Items	Dust proof protection sheet (1 sheet) Hardware manual [Japanese /English] (This manual) Hardware manual [Chinese]

1.2 External Dimensions, Part Names

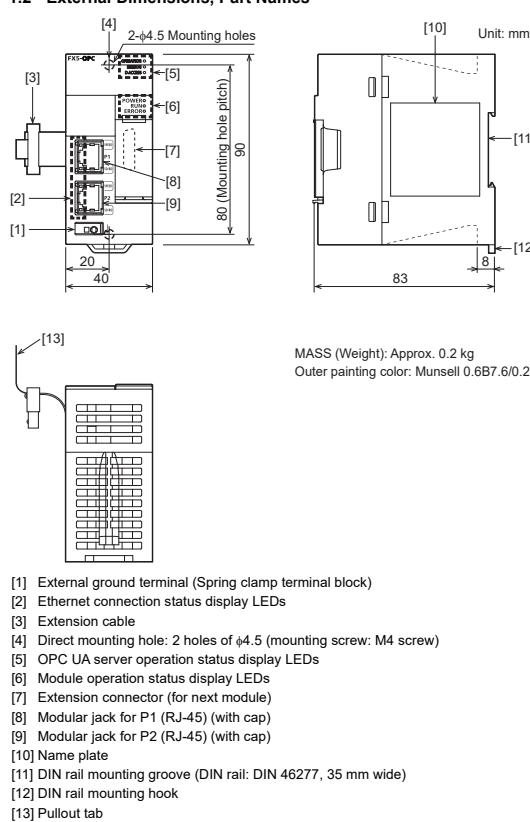

1.3 Indications of LEDs

LED display	LED color	Status	Indication
OPERATION	Green	ON	OPC UA server running
		OFF	OPC UA server stopped
SESSION	Green	ON	Active session with an OPC UA client
		OFF	No active session with an OPC UA client
D ACCESS	Green	ON	Programmable controller data being read or written by an OPC UA client
		OFF	No programmable controller data being read or written by an OPC UA client
POWER	Green	ON	Powered ON
		OFF	Powered OFF or module error
RUN	Green	ON	Initialization or hardware test completed
		Flashing	Hardware test in progress
RUN	Green	OFF	Initialization not yet completed or major error
		ON	Minor error
ERROR	Red	Flashing	Moderate error or major error
		OFF	Normal operation
P1, P2	Green	ON	Link-up (100 Mbps)
		OFF	Link-up (10 Mbps)
SD/RD	Green	Flashing	Data being sent or received
		OFF	No data being sent or received

2. Installation

INSTALLATION PRECAUTIONS

⚠️ WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- Use the product within the generic environment specifications described in the User's Manual (Hardware) for the CPU module to be used.
Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (such as H2S, SO2 or NO2), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind.
If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.

INSTALLATION PRECAUTIONS

⚠️ CAUTION

- Do not touch the conductive parts of the product directly.
Doing so may cause device failures or malfunctions.
- When drilling screw holes or wiring, make sure that cutting and wiring debris do not enter the ventilation slits of the PLC.
Failure to do so may cause fire, equipment failures or malfunctions.
- The dust proof sheet should be affixed to the ventilation slits before installation and wiring work to block foreign objects such as cutting and wiring debris. However, when the installation work is completed, make sure to remove the sheet to provide adequate ventilation.
Failure to do so may cause fire, equipment failures or malfunctions.
- Install the product on a flat surface.
If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- Install the product securely using a DIN rail or mounting screws.
Loose connections may cause malfunctions.

For further information on mounting, refer to the following manual.

→ **MELSEC iQ-F FX5U User's Manual (Hardware)**
→ **MELSEC iQ-F FX5UC User's Manual (Hardware)**

3. Wiring

WIRING PRECAUTIONS

⚠️ WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.
Failure to do so may cause electric shock or damage to the product.
- The temperature rating of the cable should be 80°C or more.
- Make sure to properly wire to the spring clamp terminal block in accordance with the following precautions.
Failure to do so may cause electric shock, equipment failures, a shortcircuit, wire breakage, malfunctions, or damage to the product.
 - The disposal size of the cable should follow the dimensions described in the manual.
 - Twist the ends of stranded wires and make sure that there are no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect more than the specified number of wires or electric wires of unspecified size.
 - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.

WIRING PRECAUTIONS

⚠️ CAUTION

- Make sure to observe the following precautions in order to prevent any damage to the machinery or accidents due to malfunction of the PLC caused by abnormal data written to the PLC due to the effects of noise:
 - Do not bundle the communication cables together with or lay them close to the main circuit, high-voltage line, load line or power line. As a guideline, lay the power line, control line and communication cables at least 100 mm away from the main circuit, high-voltage line, load line or power line.
 - Install module so that excessive force will not be applied to terminal blocks, or communication cables.
Failure to do so may result in wire damage/breakage or PLC failure.

3.1 Connector to be used and cable

3.1.1 Pin configuration

The pin configuration of RJ45 type modular jack on FX5-OPC is as follows:

Pin No.	Signal	Contents
1	TP0+	Data 0 send and receive (+ side)
2	TP0-	Data 0 send and receive (- side)
3	TP1+	Data 1 send and receive (+ side)
4	TP2+	Data 2 send and receive (+ side)
5	TP2-	Data 2 send and receive (- side)
6	TP1-	Data 1 send and receive (- side)
7	TP3+	Data 3 send and receive (+ side)
8	TP3-	Data 3 send and receive (- side)

3.1.2 Cables to be used

Use Ethernet cable that meets the following standards.

Ethernet standard	Specifications
100BASE-TX	Category 5 or higher (STP cable)*1
10BASE-T	Category 3 or higher (STP/UTP cable)*1

*1 Shielded twisted pair cable.

A straight/cross cable can be used.


3.2 Grounding

Ground the PLC as stated below.

- Perform class D grounding. (Grounding resistance: 100 Ω or less)

If the PLC cannot be grounded independently if possible, if the PLC cannot be grounded independently, perform the "Shared grounding" shown below.

For details, refer to the following manual.

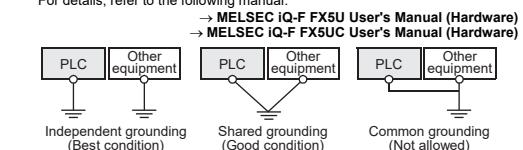

- Bring the grounding point close to the PLC as much as possible so that the ground cable can be shortened.

4.5 Performance Specifications

Items	Specifications
OPC UA server	Maximum number of parallel sessions 4 Maximum number of subscriptions per session 2 Maximum number of monitored items per subscription 500
Transmission specification	Data transmission speed 100/10Mbps Communication mode Full-duplex/ half-duplex*1 Transmission method Base band Interface RJ45 connector
Ethernet	Maximum segment length 100m*2 Number of cascade connections 100BASE-T Hub*1 Connection cable *5 100BASE-TX, 10BASE-T Number of ports 2 Number of occupied I/O points 8 points Number of connectable modules 1 module

*1 IEEE802.3x flow control is not supported.

*2 For maximum segment length (length between hubs), consult the manufacturer of the hub used.

*3 This number applies when a repeater hub is used. For the number of levels that can be constructed when using a switching hub, consult the manufacturer of the switching hub used.

*4 The ports must comply with the IEEE802.3 100BASE-TX or 10BASE-T standards.

*5 A straight