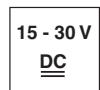


HTU430B
ADVANCED ultrasonic sensors with 2 switching outputs

en 04-2019/05/14 50125024-01





 300 ... 3000mm
 600 ... 6000mm

IO-Link

- Function largely independent of surface properties, ideal for detection of liquids, bulk materials, transparent media, ...
- Small design at long operating range
- Temperature-compensated operating range
- 2 independent PNP switching outputs
- NEW** – Both outputs can easily be taught using a button
- NEW** – Stable all-metal design
- NEW** – Process data and configuration via IO-Link interface
- NEW** – Five operating modes: scanning, synchronous, multiplex, activation and throughbeam operation



Accessories:

(available separately)

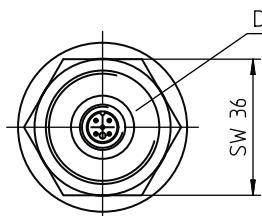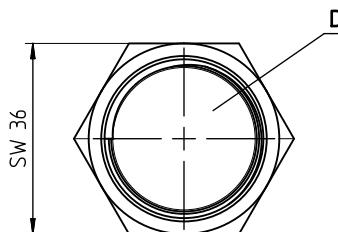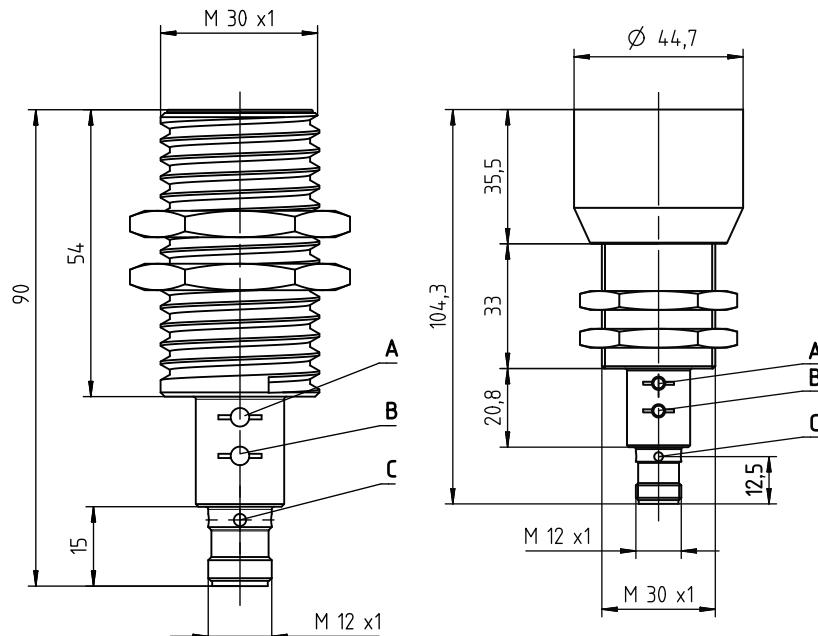- Mounting systems
- Cables with M12 connector (K-D ...)
- Teach adapter PA1/XTSX-M12 (Part no. 50124709)
- USB IO-Link master 2.0 (Part no. 50121098)

Dimensioned drawing


A Control button 2
B Control button 1
C Indicator diodes
D Active sensor surface

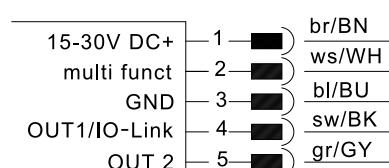Electrical connection

 Factory setting for pin 2 **multi funct**: teach input

Technical data

Ultrasonic specifications

	HTU430B-3000.X3/...	HTU430B-6000.X3/...
Operating range ¹⁾	300 ... 3000mm ²⁾	600 ... 6000mm ²⁾
Adjustment range	300 ... 3000mm	600 ... 6000mm
Ultrasonic frequency	120kHz	75kHz
Typ. opening angle	15°	
Resolution of switching output	1mm	
Direction of beam	Axial	
Accuracy	± 0.5 % of end value ¹⁾	
Reproducibility	± 0.15 % of end value ¹⁾	
Switching hysteresis	25mm	
Temperature drift	± 1.5 % of end value ¹⁾	50mm

Sensor operating modes

IO-Link	COM2 (38.4 kBaud)
SIO	Is supported

Time behavior

Switching frequency	4Hz	1.6Hz
Response time	125ms	380ms
Readiness delay	< 300ms	

Electrical data

Operating voltage U_B ³⁾
SIO mode: 15 ... 30V DC (incl. ± 10% residual ripple),
COM2 mode: 18 ... 30V DC (incl. ± 10% residual ripple)

Residual ripple ± 10 % of U_B
Open-circuit current ≤ 50mA

Switching output OUT1:1 x PNP transistor, IO-Link SIO mode,
OUT2:1 x PNP transistor, configurable

Function (PNP)
Output current 2 x NO contact, reversible
SIO mode: max. 150mA per contact,
COM2 mode: max. 100mA per contact
Switching range adjustment OUT1: control button 1 or teach input
OUT2: control button 2 or teach input
Changeover NO/NC OUT1: control button 1 or teach input
OUT2: control button 2 or teach input

Indicators

Yellow LED
Yellow LED, flashing
Green LED
Green LED flashing
OUT1: object detected
Teach-in / teaching error / cable short circuit
Object within the operating range
IO-Link communication

Mechanical data

Housing All metal - brass, nickel-plated
Weight 110g 215g
Ultrasonic transducer Piezoceramic ⁴⁾
Connection type M12 connector, 5-pin
Installation position Any

Environmental data


Ambient temp. (operation/storage) -25°C ... +70°C/ -25°C ... +50°C

Protective circuit 5)
VDE protection class III
Degree of protection IP 67 and IP 68
Standards applied EN 60947-5-2
Certifications UL 508, C22.2 No.14-13 ^{3) 6) 7)}


- 1) At 20°C
- 2) Target: 100mm x 100mm plate
- 3) For UL applications: use is permitted exclusively in Class 2 circuits according to NEC
- 4) The ceramic material of the ultrasonic transducer contains lead zirconium titanate (PZT)
- 5) 1=short-circuit and overload protection, 2=polarity reversal protection, 3=wire break and inductive protection
- 6) These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.5A min, in the field installation, or equivalent (categories: CYJV/CYJV7 or PVVA/PVVA7); Use tool for buttons
- 7) Ambient temperature 85°C. Use same voltage supply for all circuits.

Diagrams

HTU430B-3000...-M12

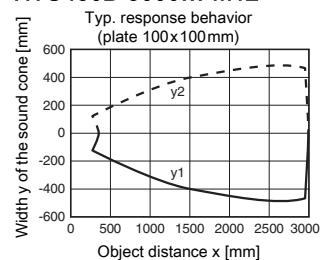


Typ. response behavior (rod Ø 27mm)


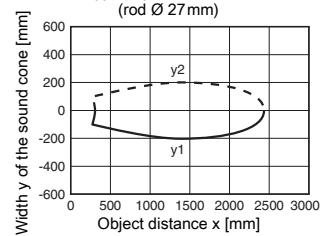


HTU430B-6000...-M12

Typ. response behavior (plate 100x100mm)

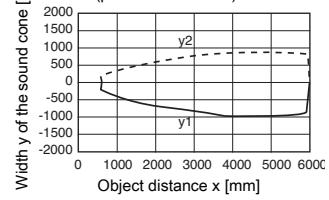

Typ. response behavior (rod Ø 27mm)

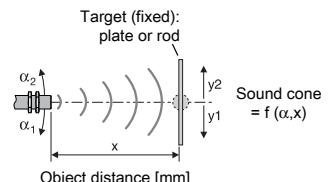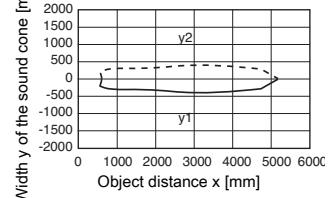

Notes

Observe intended use!

- ↖ This product is not a safety sensor and is not intended as personnel protection.
- ↖ The product may only be put into operation by competent persons.
- ↖ Only use the product in accordance with its intended use.

Part number code

H	T	U	4	3	0	B	-	3	0	0	.	X	3	/	L	T	4	-	M	1	2
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Operating principle

HTU Ultrasonic sensor, scanning principle, with background suppression

DMU Ultrasonic sensor, distance measurement

Series

430B 430B Series, cylindrical M30 construction

Operating range in mm

3000 300 ... 3000

6000 600 ... 6000

Equipment (optional)

X "Advanced" design

3 Teach button on the sensor

Pin assignment of connector pin 4 / black cable wire (OUT1)

4 PNP output, NO contact preset

P PNP output, NC contact preset

L IO-Link communication or push-pull (SIO)

Pin assignment of connector pin 2 / white cable wire (Teach-IN)

T Teach input

Pin assignment of connector pin 5 / gray cable wire (OUT2)

4 PNP output, NO contact preset

P PNP output, NC contact preset

V Analog voltage output 0 ... 10V

C Analog current output 4 ... 20mA

X Connection not assigned (n. c.- not connected)

Connection technology

M12 M12 connector, 5-pin

Order guide


The sensors listed here are preferred types; current information at www.leuze.com.

	Designation	Part no.
Operating range		
300 ... 3000mm	HTU430B-3000.X3/LT4-M12	50124273
600 ... 6000mm	HTU430B-6000.X3/LT4-M12	50142209

Device functions and indicators

The sensor has two buttons for adjusting output **OUT1** and output **OUT2**. Alternatively, all adjustments can also be made via **IO-Link**. The **multi funct teach** input can be used to perform the 1-point teach and the changeover of the switching function (NO contact/NC contact).

Switching behavior

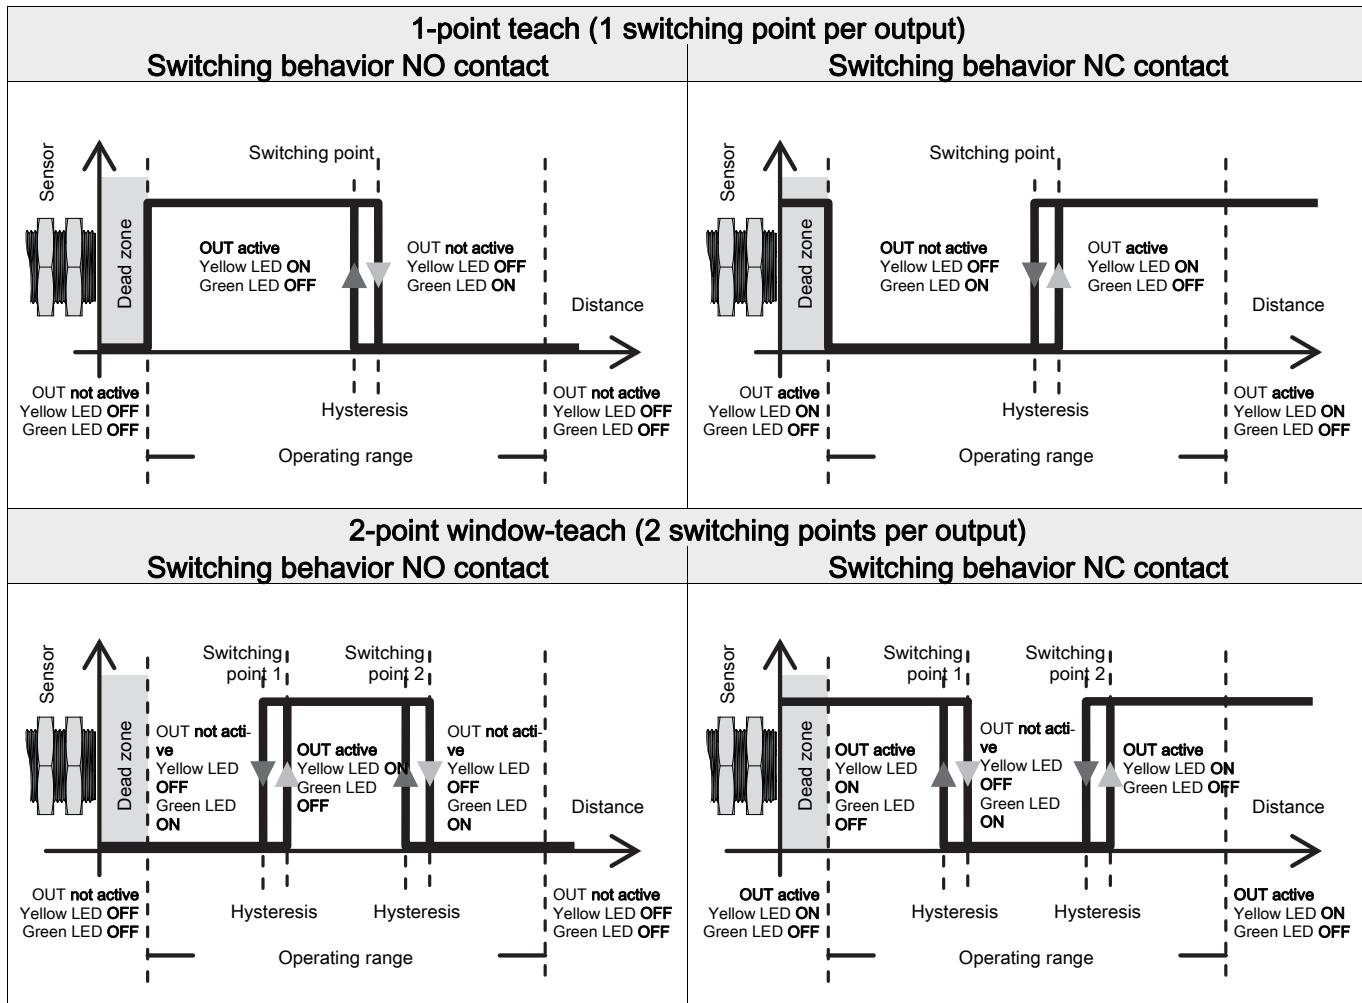

Note!

The switching behavior is not defined in the dead zone.

Switching behavior with 2-point window-teach as a function of the switching function

Switching function configured as	First taught object distance	Second taught object distance	Output switching behavior
NO (normally open) NC (normally closed)	Far	Close	
	Close	Far	



Note!

In measurement operation, the yellow and green LED only indicate the behavior of output OUT1. The behavior of output OUT2 is not indicated.

The 2-point window-teach can be configured either with the control buttons or via the IO-Link interface. Adjustment via the teach input is not possible.

Adjustment of the switching points (Teach) using the control buttons

The two switching points of the sensor are both set to 3000 mm or 6000 mm (static 1-point teach) on delivery.

By means of a simple operating procedure, the switching points for each output can be individually taught to an arbitrary distance within the operating range with 1-point teach (static) or 2-point window-teach (static).

Moreover, the output function can be switched from NO contact (NO - normally open) to NC contact (NC - normally closed). A button is permanently assigned to each output for the setting (see dimensioned drawing).

1-point teach (static)	2-point window-teach (static) ¹⁾
1. Place object at desired switching distance.	1. First, place object at desired switching distance for switching point 1.
2. To adjust output OUT1, press button 1, to adjust output OUT2, press button 2 for 2 ... 7s until the yellow LED flashes at 3Hz.	2. To adjust output OUT1, press button 1, to adjust output OUT2, press button 2 for 7 ... 12s until the yellow and green LED flash alternately at 3Hz.
3. Release the teach button to complete the teach event. The current object distance has been taught as the new switching point.	3. Release the button. The sensor remains in teach mode and the LEDs continue to flash.
4. Error-free teach: LED states and switching behavior according to the diagram shown above. Faulty teach (object may be too close or too far away – please note operating range): yellow LED flashes at 5Hz until an error-free teach event is performed. The affected output is inactive as long as there is a teach error.	4. Then, place the object at the desired switching distance for switching point 2. Note: the minimum distance between the switching points is as follows range of 3000 mm: 250mm range of 6000 mm: 500mm
	5. Briefly press the teach button again to complete the teach event. The switching window was taught in.
	6. Error-free teach: LED states and switching behavior according to the diagram shown above. Faulty teach (object may be too close or too far away – please note operating range): green and yellow LEDs flash at 8Hz until an error-free teach event is performed.

1) See table "Switching behavior with 2-point window-teach as a function of the switching function"



Note!

All operating functions are identical for outputs OUT1 and OUT2.

Adjusting the switching function (NO/NC) using the control buttons

The control buttons can be used to switch the output function from NO contact to NC contact (or vice versa).

To do this, proceed as follows:

Action / Description	Control button	Indicator diode GREEN YELLOW
Changeover of the switching function: Switching outputs OUT1 and OUT2 are set as NO contact ex works . If the switching function is changed, the respective switching output is changed to the opposite state (toggled).	Press the button for the desired switching output for longer than 12s.	Both LEDs flash alternately for a short time at 3Hz. If the yellow LED is then ON, the output functions as an NO contact. If the yellow LED is then OFF, the output functions as an NC contact.



Note!

For 2-point window-teach, the switching behavior is dependent on the selected object distances for switching points 1 and 2. See previous page!

Adjusting the switching points (teach) via the teach input

The switching points of the sensor outputs OUT1/OUT2 are set to 3000 mm or 6000 mm on delivery.

By means of a simple teach event, the two switching points can be individually taught to an arbitrary distance within the operating range. The Leuze PA1/XTSX-M12 Teach Adapter can be used for this purpose. The adapter can also be used to easily switch the output function from NO contact to NC contact.

1-point teach of output OUT1	1-point teach of output OUT2
<p>1. Place object at desired switching distance.</p> <p>2. For the adjustment of OUT1, connect input Teach-IN to GND for 2 ... 7 s (Leuze teach adapter: position "Teach-GND"). The current state of output OUT1 is frozen during the teach event.</p> <p>3. The yellow LED flashes at 3 Hz and is then ON. The current object distance has been taught as the new switching point.</p> <p>4. Error-free teach: switching behavior according to the diagram shown above. Faulty teach (object may be too close or too far away – please note operating range): yellow LED flashes at 5 Hz until an error-free teach event is performed. Output OUT1 is inactive as long as there is a teach error.</p>	<p>1. Place object at desired switching distance.</p> <p>2. For the adjustment of output OUT2, connect input Teach-IN to GND for 7 ... 12 s (Leuze teach adapter: position "Teach-GND"). The current state of output OUT2 is frozen during the teach event.</p> <p>3. The yellow LED flashes at 3 Hz. The current object distance has been taught as the new switching point.</p> <p>4. Error-free teach: switching behavior according to the diagram shown above. Faulty teach (object may be too close or too far away – please note operating range): yellow LED flashes at 5 Hz until an error-free teach event is performed. Output OUT2 is inactive as long as there is a teach error.</p>



Note!



Please note that the switching point is taught when GND is connected and the output function is reversed when UB is connected. If no sensor action is desired, pin 2 must remain unconnected!

The 2-point window-teach can be configured either with the control buttons or via the IO-Link interface. Adjustment via the teach input is not possible.

Adjusting the switching function (NC/NO) via the teach input

The switching function of both sensor outputs is set to normally open (NO) on delivery.

If the switching function is changed, the switching output is changed to the opposite state (toggled).

Changeover of the switching function of output OUT1	Changeover of the switching function of output OUT2
<p>1. To change the switching function, connect input Teach-IN to UB for 2 ... 7 s (Leuze teach adapter: position "Teach-UB"). The current state of output OUT1 is frozen while the adjustment is made.</p> <p>2. The green and yellow LEDs flash alternately at 2 Hz. The switching function was changed over. The switching behavior corresponds to the diagram shown above.</p>	<p>1. To change the switching function, connect input Teach-IN to UB for 7 ... 12 s (Leuze teach adapter: position "Teach-UB"). The current state of output OUT2 is frozen while the adjustment is made.</p> <p>2. The green and yellow LEDs flash alternately at 5 Hz. The switching function was changed over. The switching behavior corresponds to the diagram shown above.</p>

IO-Link interface

The ultrasonic sensor features an IO-Link interface acc. to specification V1.1. and satisfies the Smart Sensor Profile.

As a result, the sensor can easily, quickly and, thus, economically be configured and diagnostic information read out. With a small amount of effort, the sensor can also be integrated in a control.

Overview of the configuration options via IO-Link

Function block	Function	Description
Operating mode	Standard operation	The sensor operates as a diffuse sensor with background suppression.
	Multiplex operation	A max. of 10 sensors – 1 master and 9 slaves – can be wired together in a network. To do this, the sensors must be electrically connected with one line. The master generates a timing signal and all networked sensors are activated with time-delay.
	Synchronous operation	A max. of 10 sensors – 1 master and 9 slaves – can be wired together in a network. To do this, the sensors must be electrically connected with one line. The master generates a timing signal and all networked sensors are activated simultaneously.
	Activation operation	The sensor can be activated through an external signal.
	Operation as throughbeam sensor	The sensor can either be configured as a scanner or as a throughbeam sensor. Operation as a throughbeam sensor requires 2 sensors, which are electrically connected through one line.
Switching outputs OUT1 / OUT2	Switching point 1/2	The switching points can be directly entered as distance value in mm.
	Switching output (OUT1 and OUT2)	Adjustment as PNP or NPN switching output.
	Switching function	Adjustment as NC / NO contact. ¹⁾
	Switching behavior in the case of error	The switching behavior of output OUT1 of the sensor, for objects which are located outside of the operating range, can be adjusted.
	2-point behavior	If a switching output is to operate with 2 switching points, a choice can be made between 2-point window-teach (factory setting) or 2-point teach (e.g. for simple pump controls with minimum and maximum fill levels).
	Delay times	The time module can be used to configure a switch-on or switch-off delay at the output. This delay time is dependent on the update interval of the respective device and is calculated using the following formula: Delay [ms] = Update interval [ms] * Switch-on/-off delay
	Teach switching output OUT1	The switching output OUT1 can be taught via the IO-Link interface.
	Teach offset	An additional or shorter distance at the switching point can be entered directly as a distance value in mm. This parameter applies only for 1-point teach.
	Teach lock	Adjustment for locking of control buttons.
Temperature	Temperature compensation	Adjustment option for internal (sensor works with the integrated temperature sensor) or external (with a constant application temperature, this can be manually entered. The sensor then compensates the measured values at a fixed rate with this temperature).
	Unit	Adjustment option to °C or °F.
	Temperature value	Entry temperature value in °C or °F (if external temperature compensation is desired).

1) NO contact: normal switching behavior (not inverted switching);

NC contact: inverted switching behavior (inverted switching).

In addition to the configuration functions, a range of sensor information, such as sensor status, sensor diagnostics as well as the process data, can be called up.

Further information and the device-specific description of the IO-Link interface (**IODD**) can be found on the Internet at www.leuze.com in the **Downloads** area of the respective sensor.

